


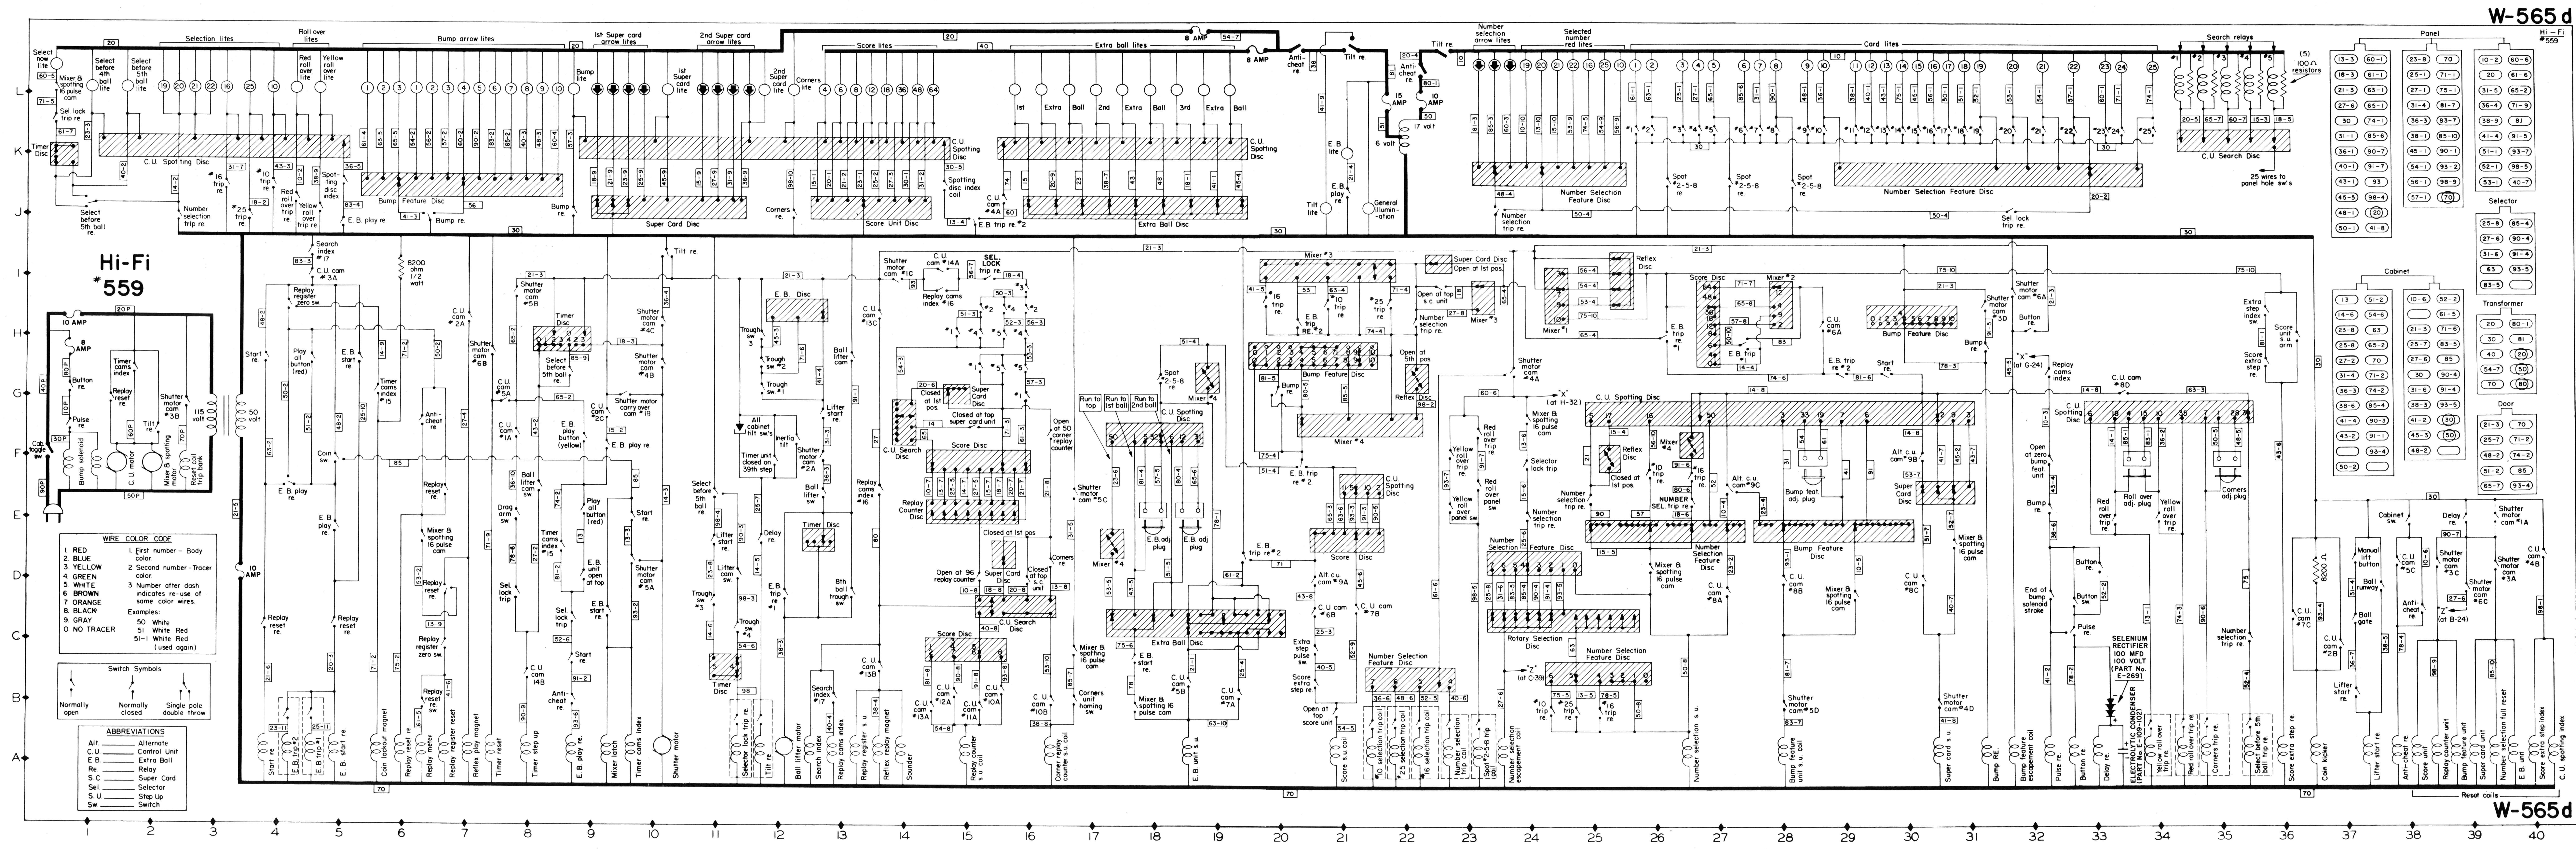

Hi-Fi
#559

WIRE COLOR CODE

1 RED	1 First number - Body color
2 BLUE	2 Second number - Tracer color
3 YELLOW	3 Number after dash indicates re-use of same color wires.
4 GREEN	
5 WHITE	
6 BROWN	
7 ORANGE	
8 BLACK	
9 GRAY	
0 NO TRACER	

Examples:
50 White
51 White Red
51-1 White Red (used again)

Switch Symbols

Normally open	Normally closed	Single pole double throw
---------------	-----------------	--------------------------

ABBREVIATIONS

Alt.	Alternate
C.U.	Control Unit
E.B.	Extra Ball
S.C.	Super Card
SEL	Selector
S.U.	Step Up
Sw.	Switch