

ACROSS THE BOARD

CONFIDENTIAL - DO NOT LEAVE IN GAME

ODDS ADJUSTMENT:

Adjustment marked "o" in back of spinner. This adjustment works only before the ENTRY FLASH is played.

Starting with upright post on jack, if plug fills all holes, machine will be extra liberal.

Moving plug back one position is liberal.

" " " two " " normal.

" " " three " " conservative.

" " " four " " extra conservative.

AUXILIARY ODDS ADJUSTMENT:

To reduce odds advance from 4th to 5th odds, remove green-yellow wire from cam 9 and tape loose end. To improve odds advance from 4th to 5th odds, remove bare wire jumper on cam 10 between orange-white and grey-white wire.

ENTRY FLASH ADJUSTMENT:

Adjustment marked E. F. in back of spinner. This adjustment works only after the ENTRY FLASH is played, and controls all ENTRY FLASH feature.

Starting with upright post on jack, if plug fills all holes, machine will be extra liberal.

Moving plug back one position is liberal.

" " " two " " normal.

" " " three " " conservative.

" " " four " " extra conservative.

SPECIAL ENTRY FLASH ADJUSTMENT:

Plug marked D. D. 4. mounted on ENTRY FLASH DISK on spinner.

Single plugs add DAILY DOUBLES when plugged in position marked D. Plug in right position marked #4 adds a #4 selection. These added features are automatically removed if odds are 4th position.

Plug marked S. E. mounted on disk of 400 to 1 unit will control all ENTRY FLASH advantages when main adjustment E. F. is in normal position, or tighter. With plug all the way in, adjustment (within the range of the main adjustment plug) is liberal. One position moved towards spinner is normal. Two positions towards spinner is conservative.

BOOT AND SADDLE FREQUENCY:

Moving 3-in-line plug at the upper right hand corner of the Selection disk toward the open position marked in red in center of socket increases frequency of boot and saddle selection.

FEATURE FREQUENCY:

Moving 3-in-line feature plug at the upper left hand corner of the selection disk toward the open position marked in red on center of socket increases frequency of feature lite.

4's ADJUSTMENT:

Plug marked 4's ADJ. mounted on the Selection Disk on the left side opposite the FEATURE plug controls the frequency of the 4's in Place, Show, and Purse in the Special Selection section (oval at left center of back-glass), moving plug toward the center of the socket increases the frequency.

BUMPER BONUS BUILD-UP:

Four-in-line plug on BUMPER BONUS STEP-UP may be inserted in socket so as to "spot" 0-5-10-15 or 20 points on BUMPER BONUS SCORE, depending on its position. With plug inserted at extreme right of socket, no points are "spotted", moving one position to the left, with one pin in '5', 5-points are spotted. One more position to the left, one pin in 10, one in 5, 10-points are "spotted", and so on, up to 20-points.

INTERNAL ADJUSTMENT RELAY:

Mounted on the left side of Spinner Unit, base plate is an unlabeled interlock relay. This is a built-in control of both the Odds and the Entry Flash Adjustments. When Coil 1 (lower coil) is energized, Switch 1 (Green-Yellow to Green-Red) is closed, and Switch 2 (Yellow-Green to Yellow-Blue) is open. Thus, when the above situation exists, the player, regardless of coins played per game, receives full advantage of the Entry Flash plug, regardless of its position, but loses one position of the Odds Advance plug. The opposite condition exists when Coil #2 (upper) coil is energized. This control is independent of the plug positions.