


Post Adjustment

C - Conservative

M - Medium

L - Liberal

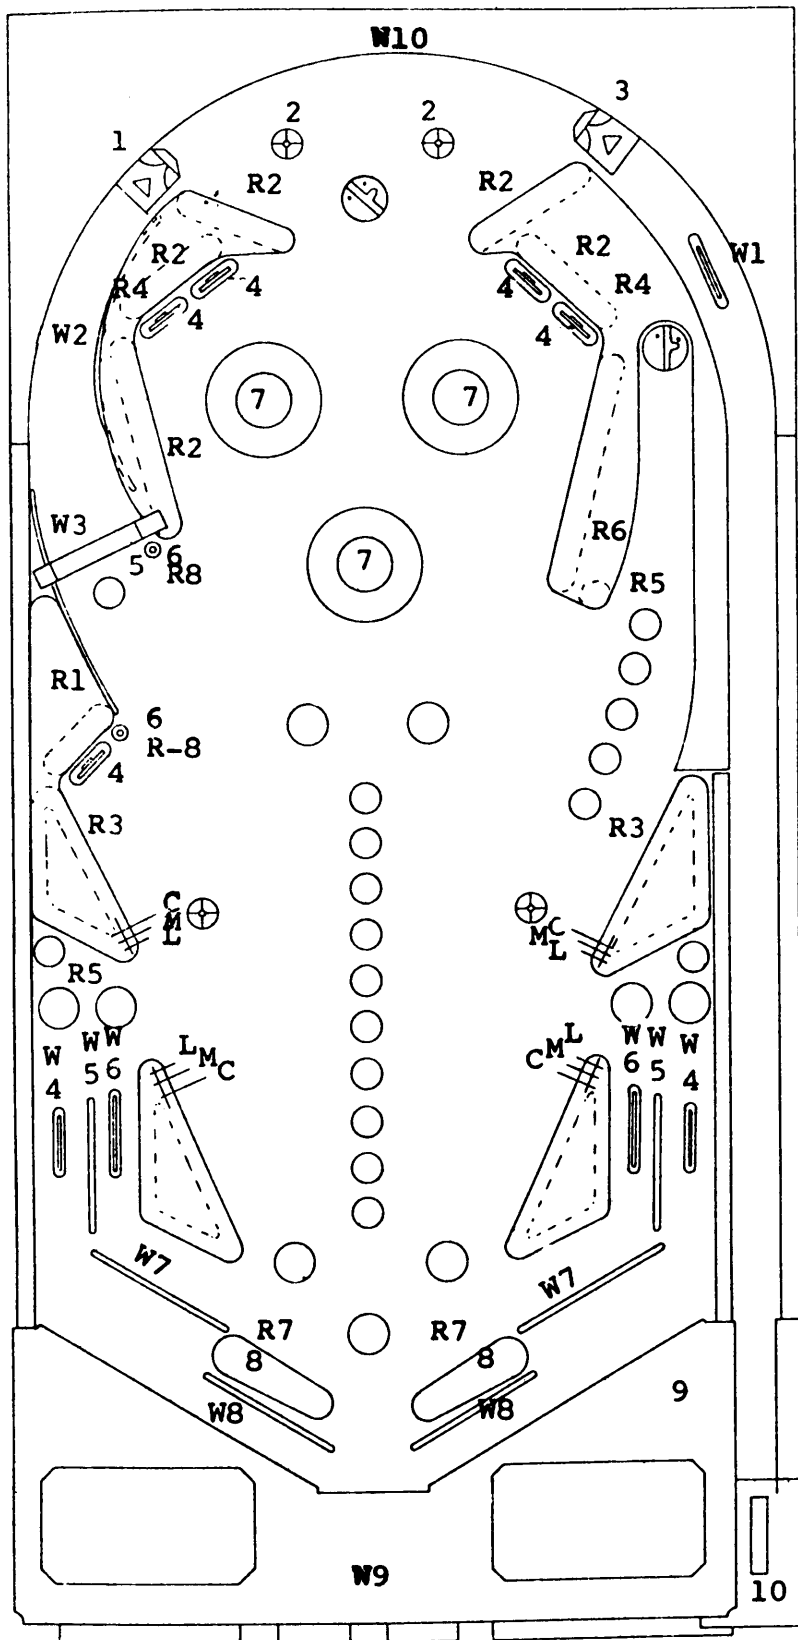

Rubber Rings

- R1 7A-120-100, 1"
- R2 7A-120-200, 2"
- R3 7A-120-300, 3"
- R4 7A-120-150, 1-1/2" (Top)
- R5 7A-120-031, 5/16"
- R6 7A-120-250, 2-1/2"
- R7 7A-121
- R8 7A-125

Guide Wire & Rollover Wire

- W1 A-149
- W2 6A-202
- W3 6A-135
- W4 A-383
- W5 6A-101-A
- W6 A-149
- W7 6A-157-B
- W8 6A-139
- W9 A-150
- W10 1B-107

PlayField Plastic Shields

- Top Arch Set 13C-100-1L & M
- Pinball Set 13C-101-1 to 7

MISCELLANEOUS PARTS

- 1. Ball Gate Left A-104-L
- 2. Rollover Bottom Ass'y A-181
- 3. Ball Gate Right A-104-R
- 4. Drop Target (See D.T. Page)
- 5. Spin Target Ass'y B-102-1
- 6. Ball Guide Post 2A-200
- 7. Tumper Cap 13A-6-1
- 8. Flipper & Shaft A-192
Flipper 4B-122-W
- 9. Bottom Arch 14B-1-1
- 10. Shooter Guage 14B-2-1

FIGURE 1. PINBALL PLAYFIELD PARTS