 


992

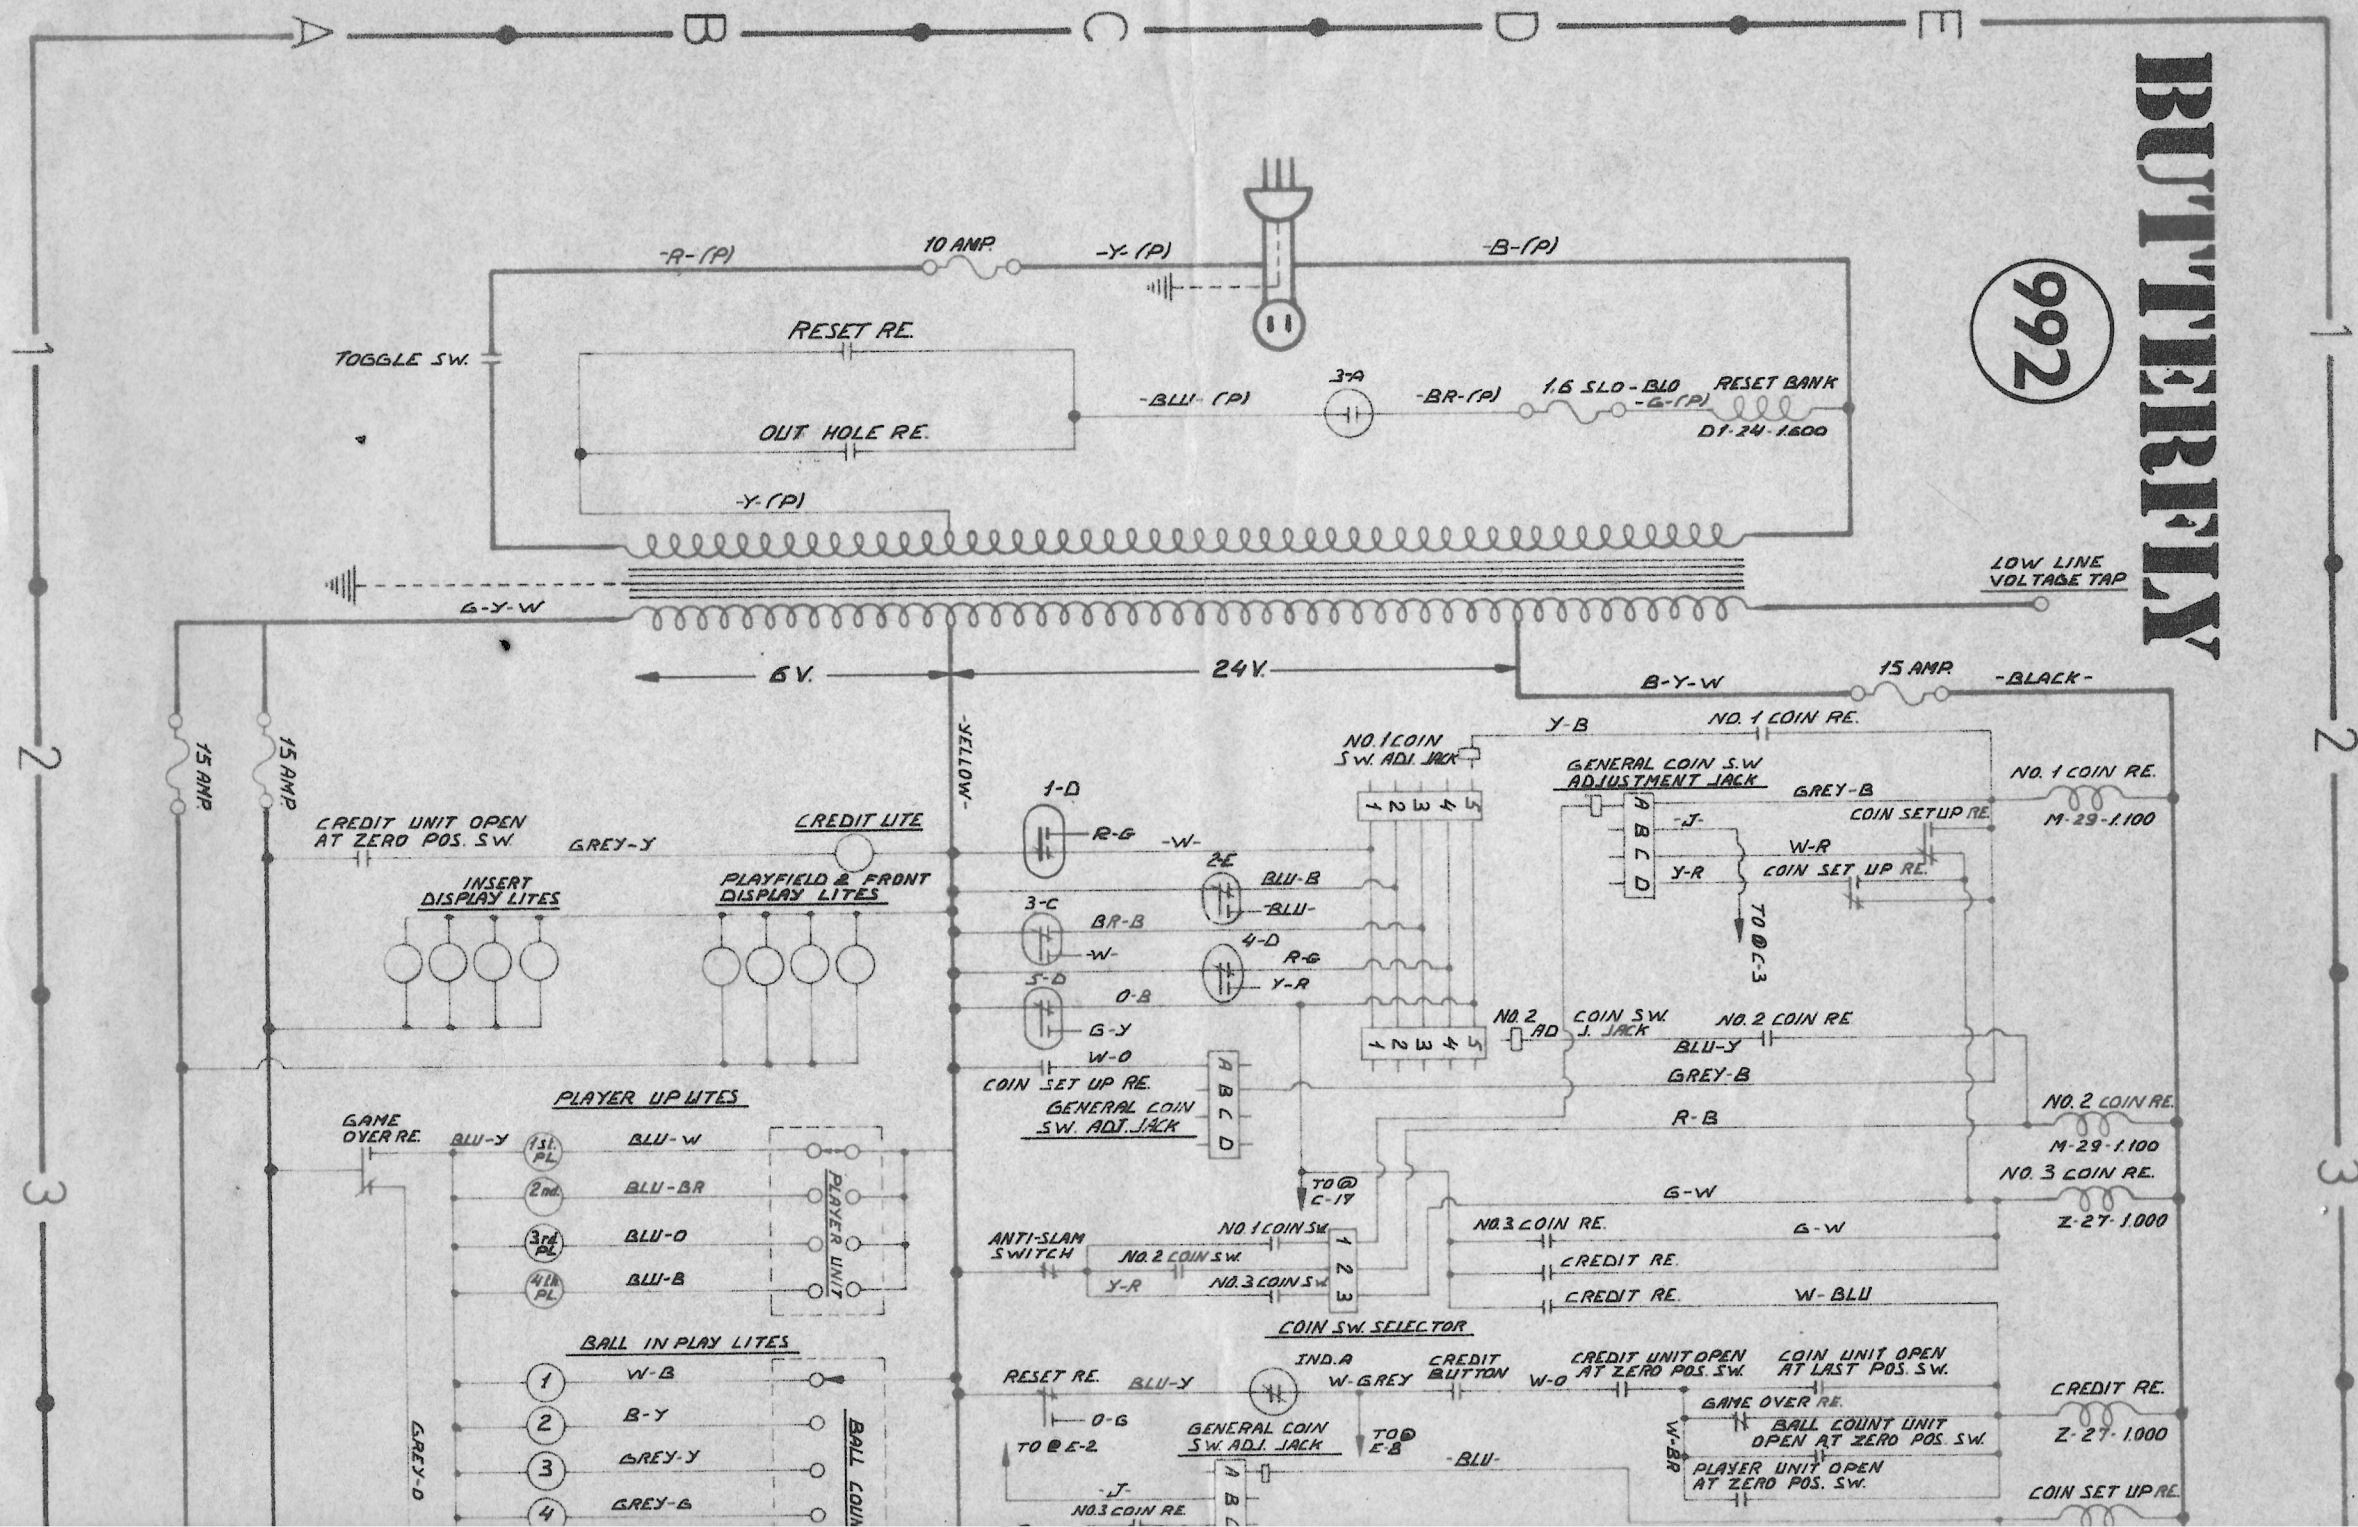 


4

5

6

7

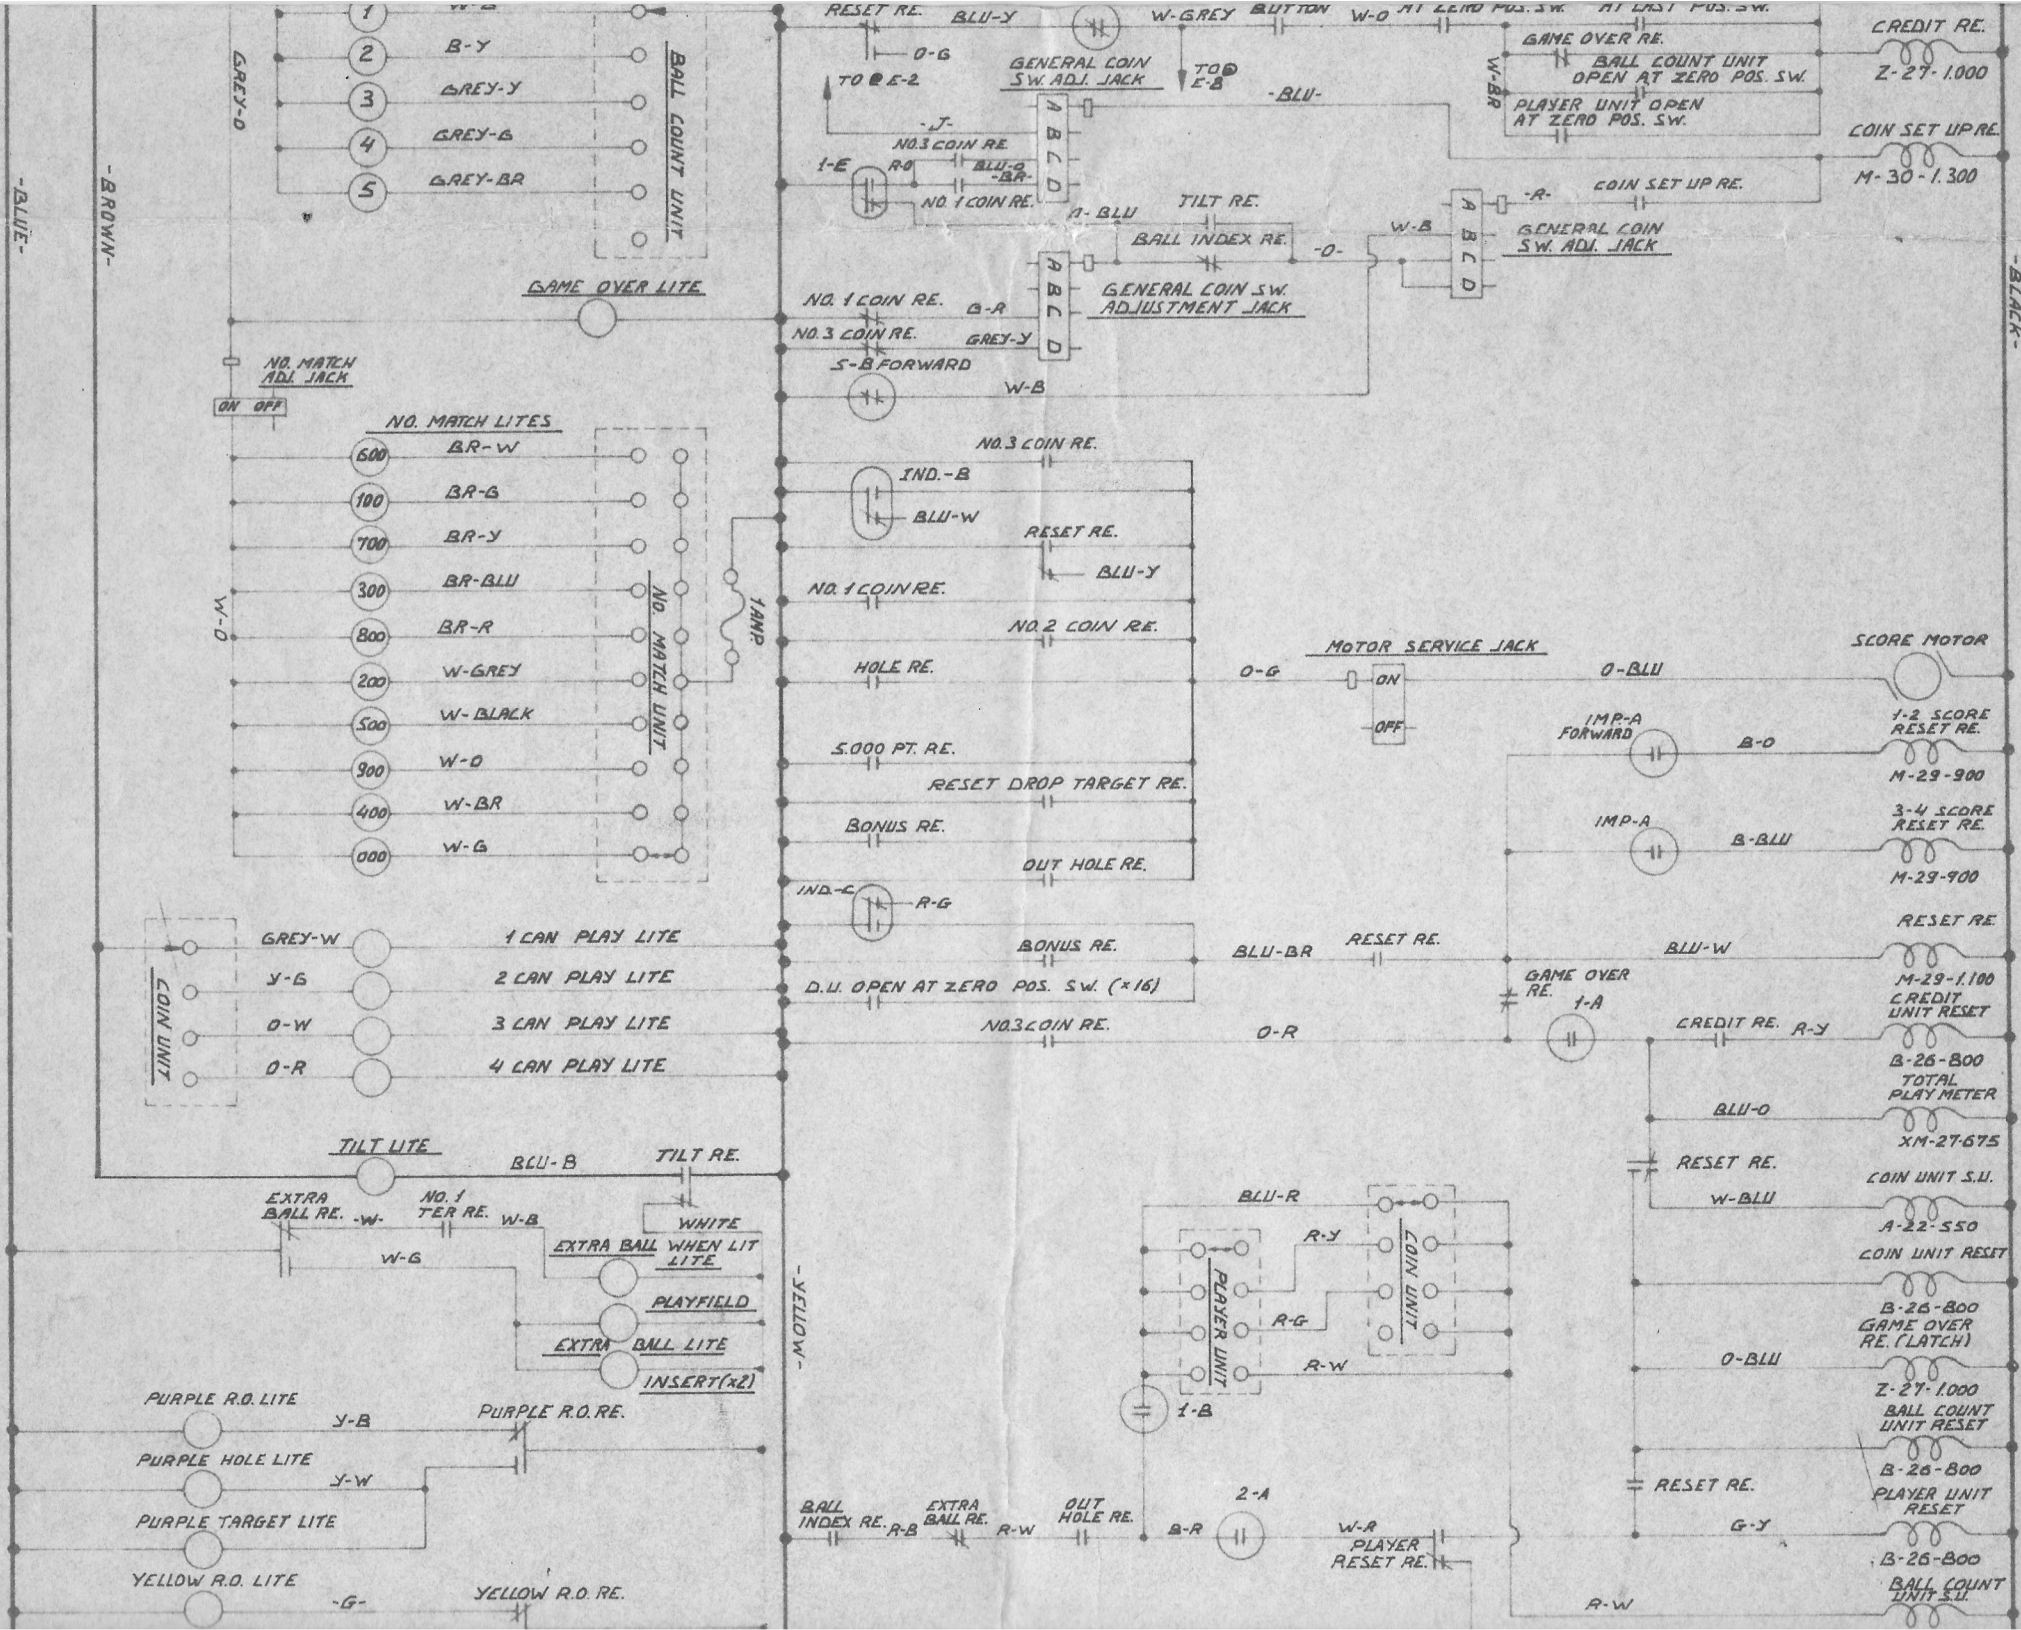


4







5

6

       
7

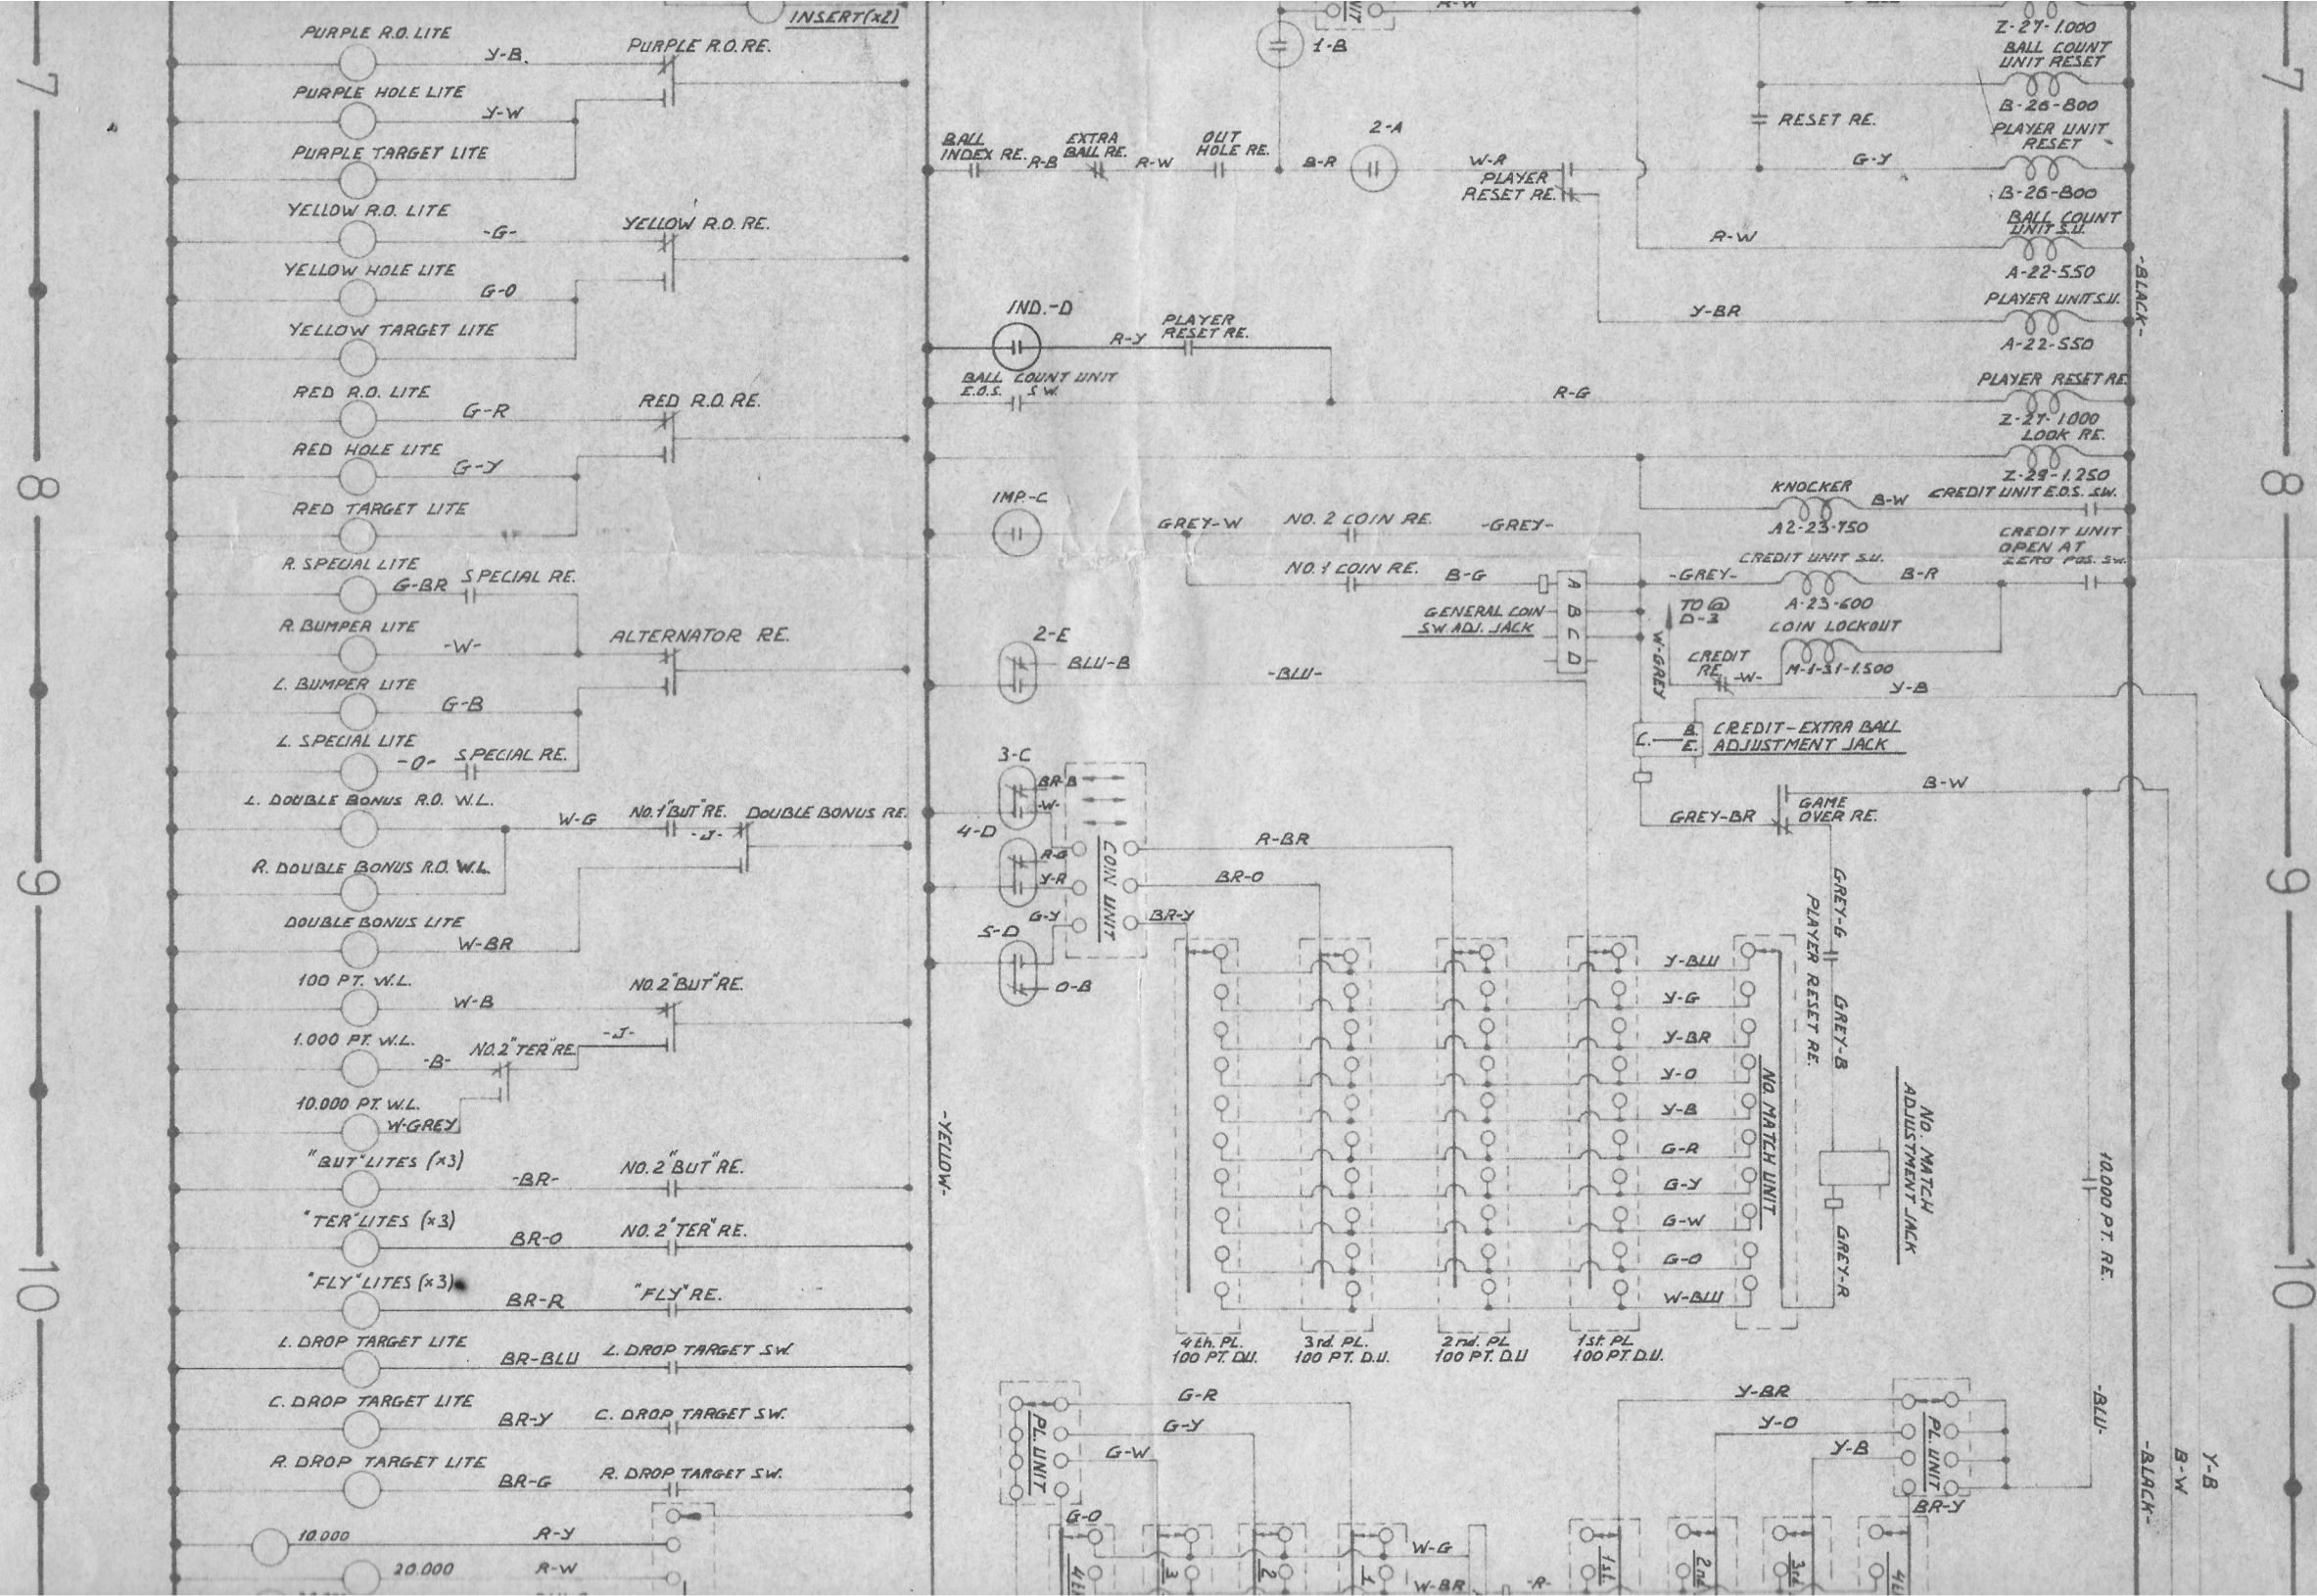




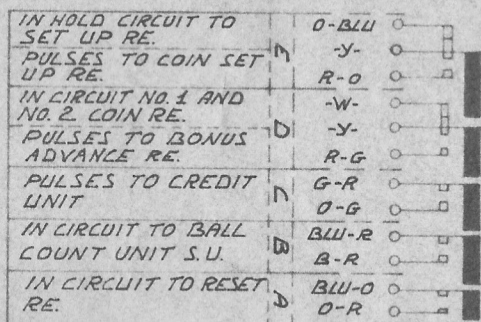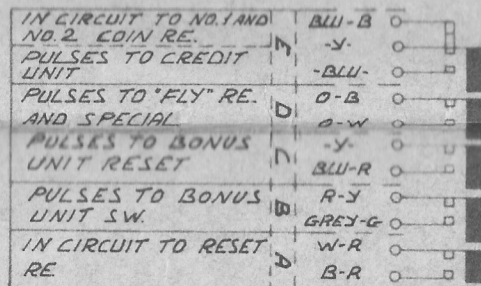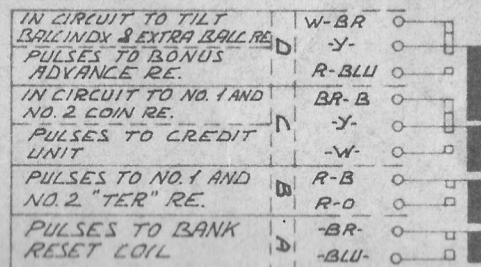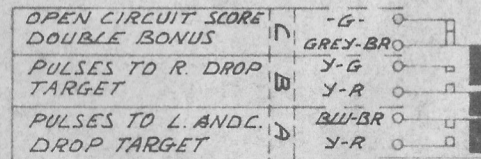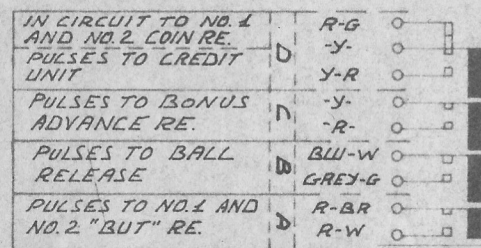


SCORE MOTOR

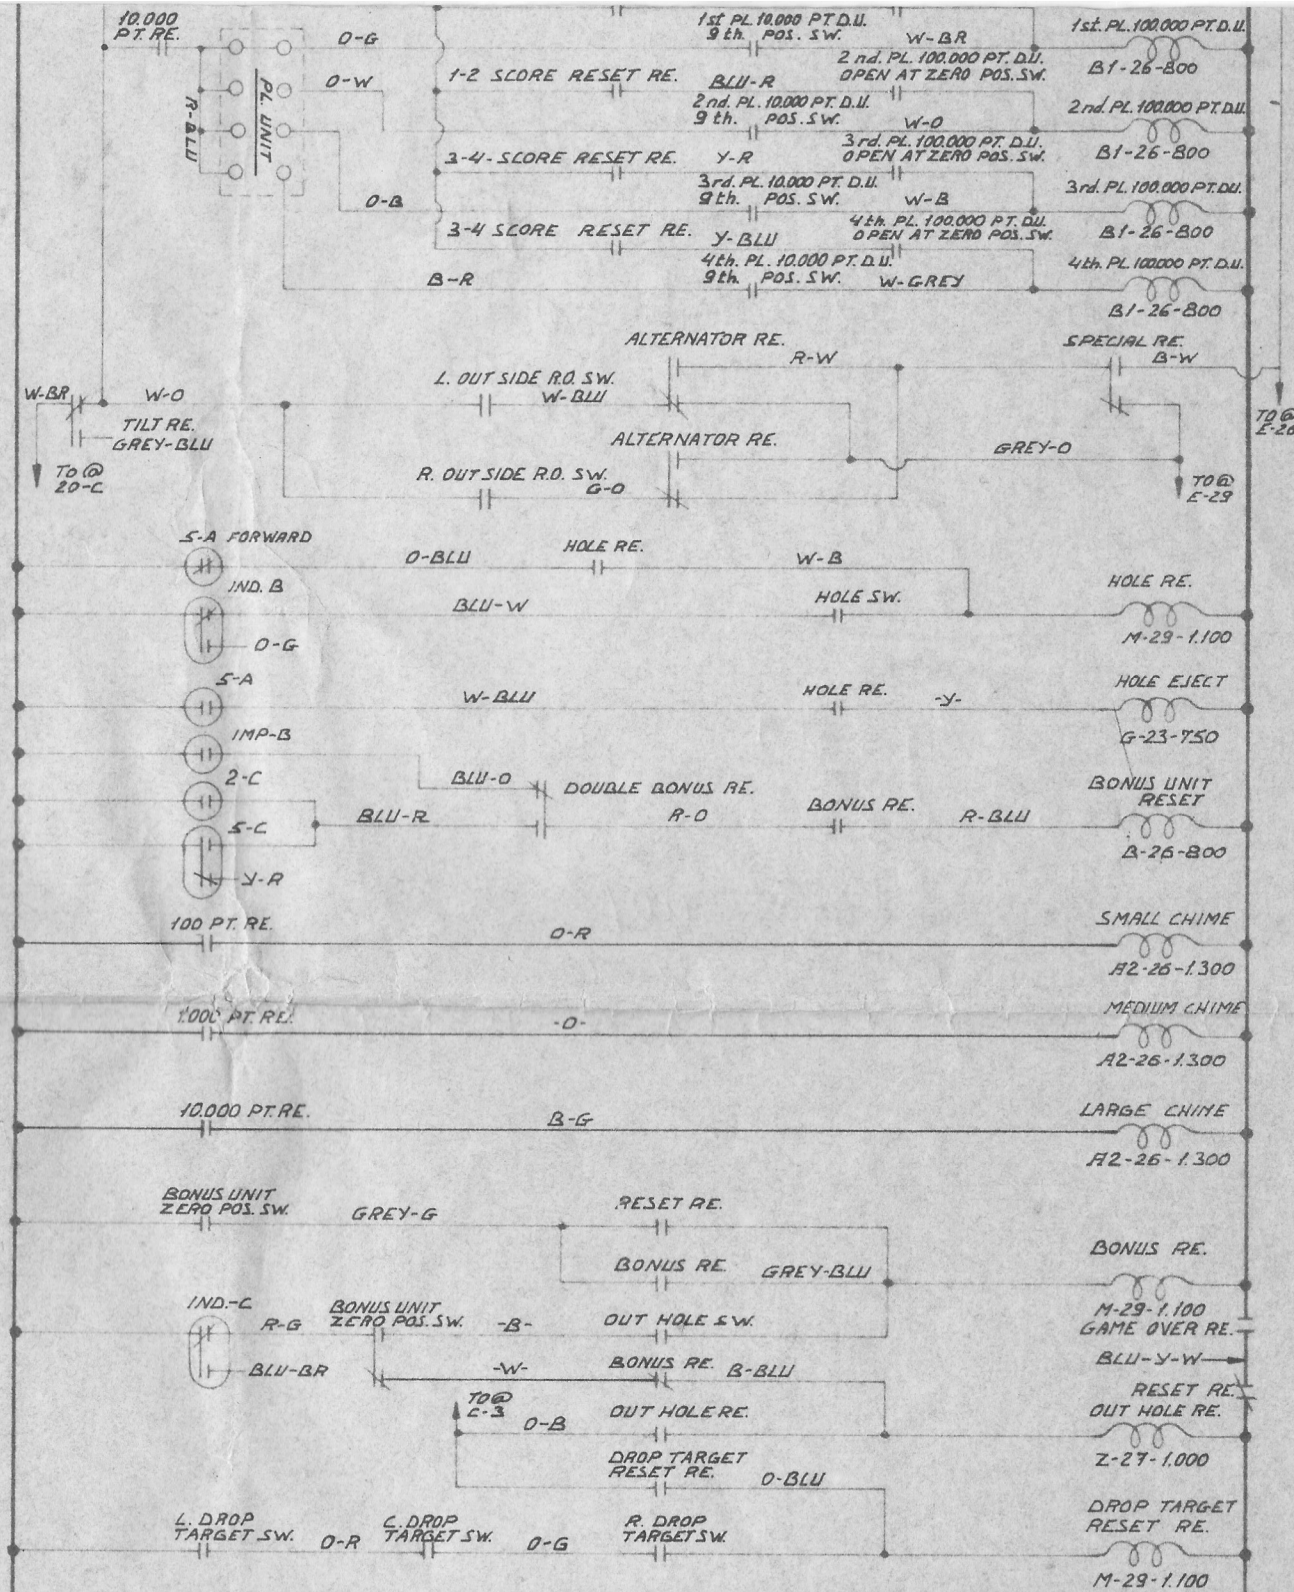 

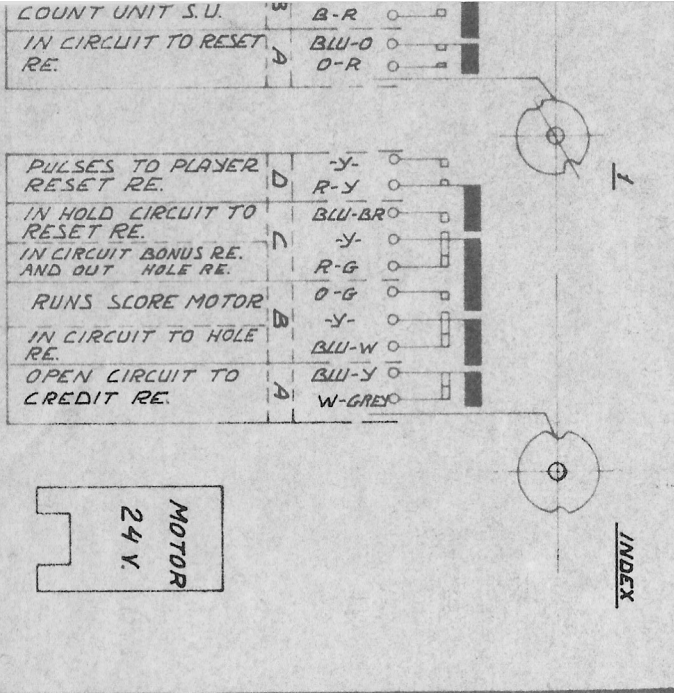 


ABBREVIATIONS	
ADJ.	ADJUSTMENT
AMP	AMPERES
DU	DRUM UNIT
E.O.S	END OF STROKE
IMP	IMPULSE
IND	INDEX
L	LEFT
NO	NUMBER
PT	POINTS
PL	PLAYER
POS	POSITION
R	RIGHT
RE	RELAY
RO	ROLL OVER
S.U.	STEP UP
SW	SWITCH
SWS	SWITCHES
V	VOLT

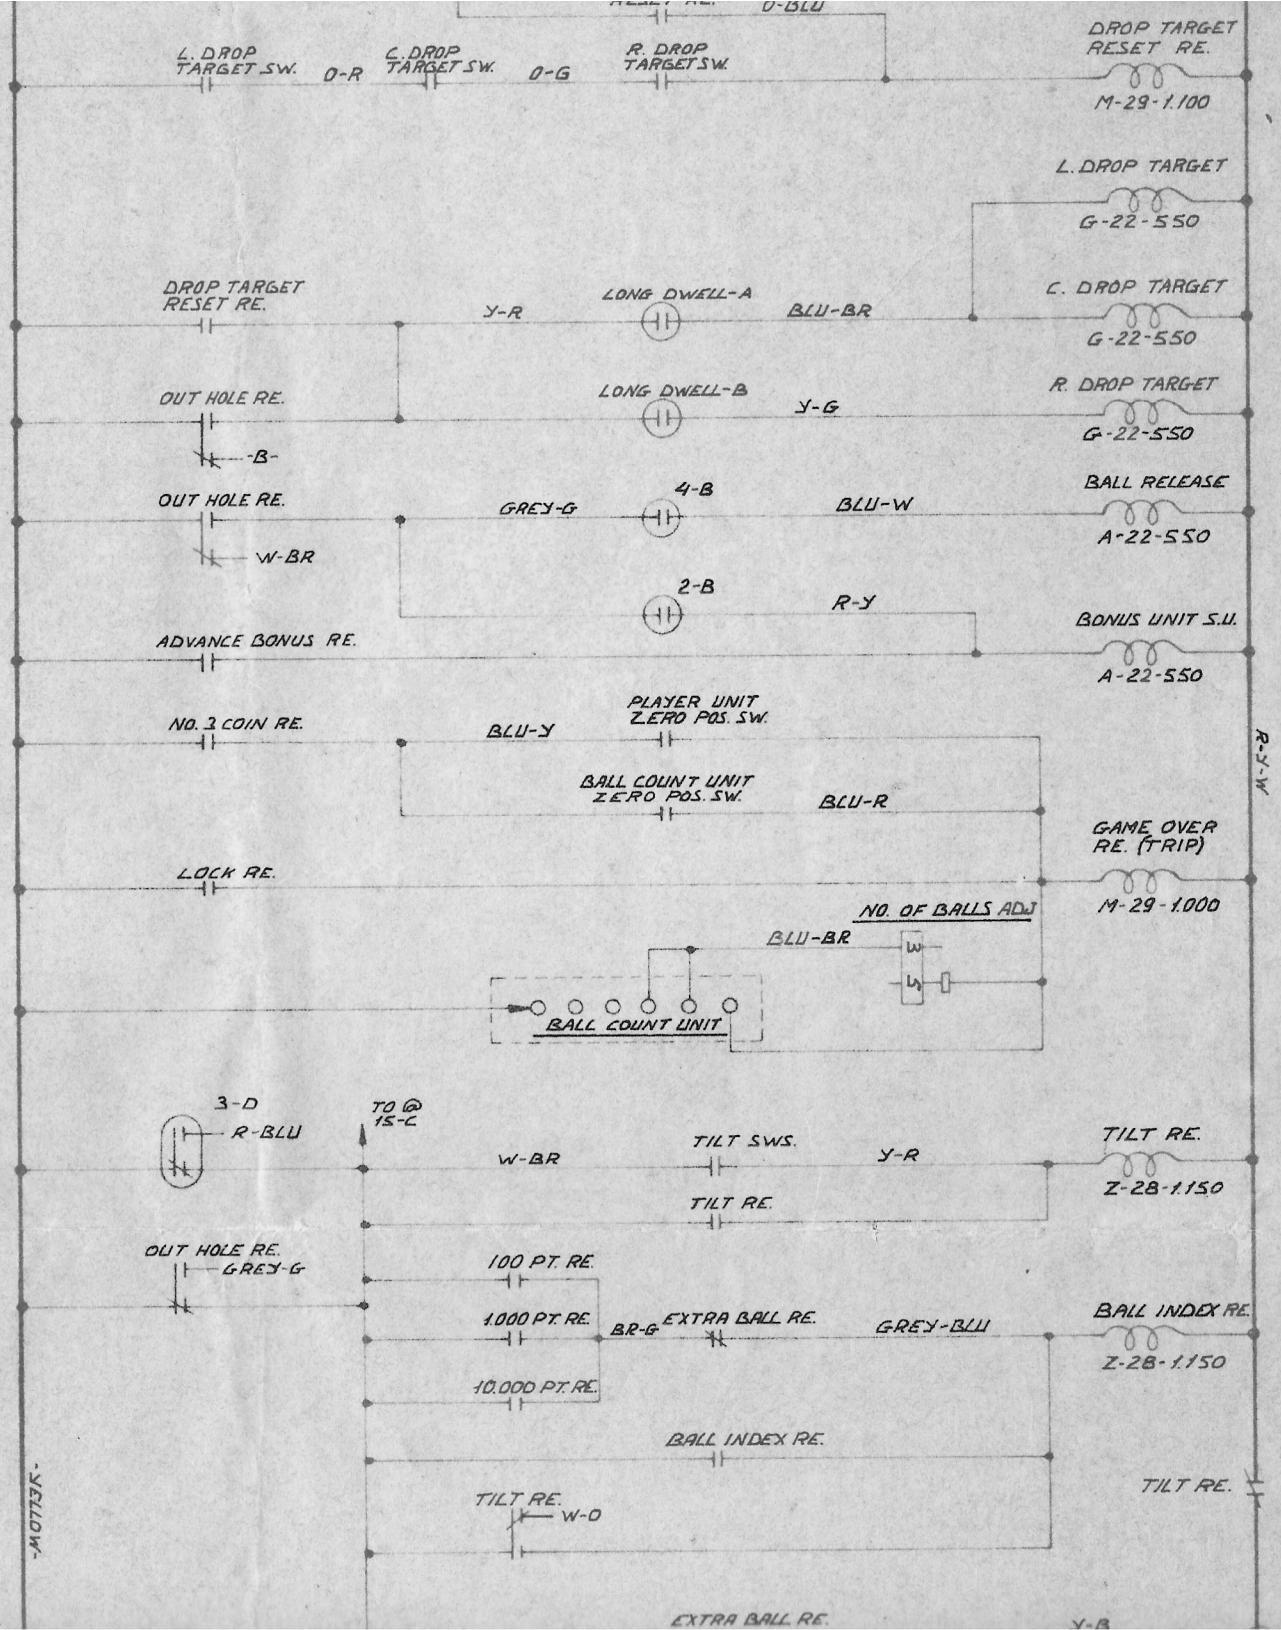 

E-3
E-4
E-5
E-6
E-8
E-15
E-18
E-20
E-21
E-22
E-24
E-25
E-25
E-25
E-26
E-26
E-27
E-30

SWITCH SYMBOLS			
NORMALLY OPEN SWITCH MAKED WHEN ACTUATED			
NORMALLY CLOSED SWITCH OPENS WHEN ACTUATED			
MAKE BREAK SWITCH			
CIRCLE INDICATES SWITCH ACTUATED BY A MOTOR CAM			
WIRE COLORS CODE			
-R-	RED	-BR-	BROWN
-BLU-	BLUE	-O-	ORANGE
-G-	GREEN	-GREY-	GREY
-Y-	YELLOW	-B-	BLACK
-W-	WHITE	-J-	JUMPER

SCORE MOTOR	14A-7884	50~
TRANSFORMER	15A-6782-1	50~
SCORE MOTOR	14A-7883	60~
TRANSFORMER	15A-6771	60~

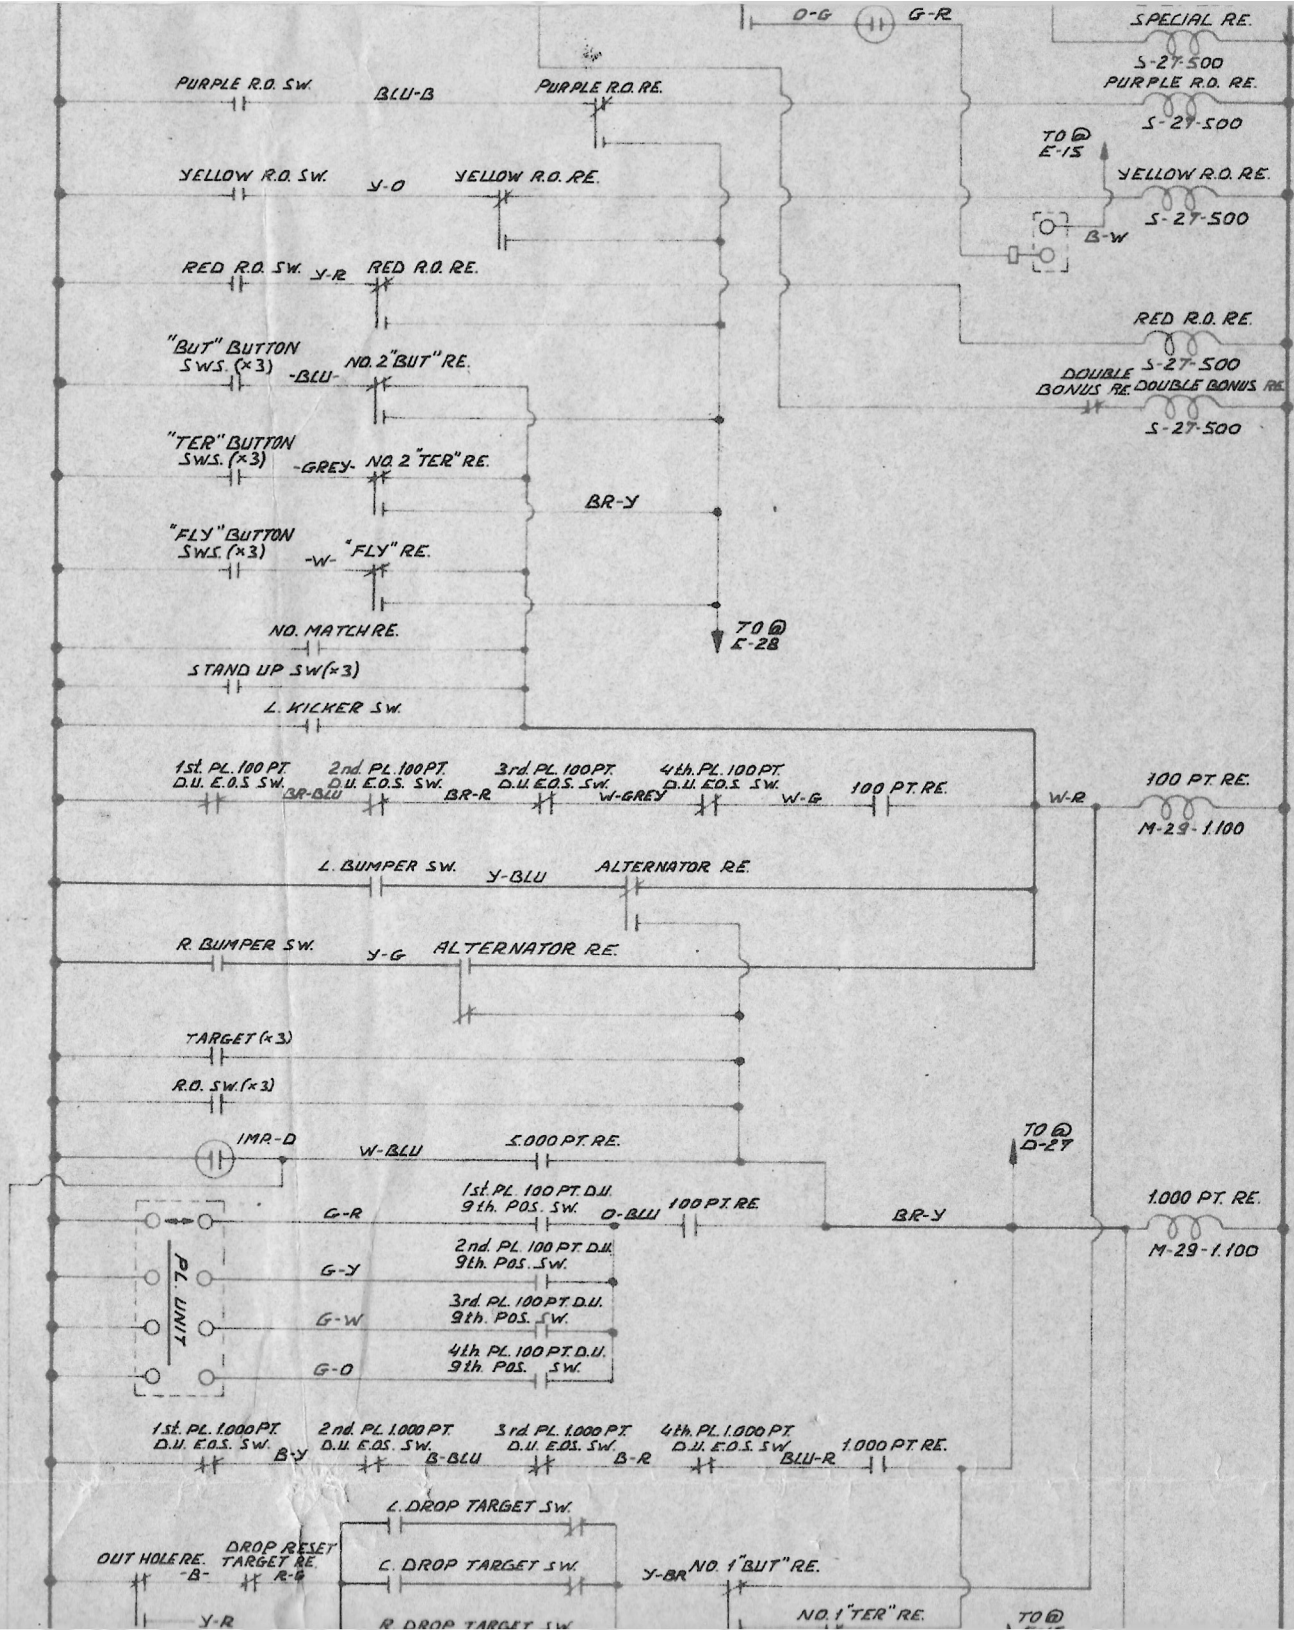 


30

31

32

992

 BUTTERFLY

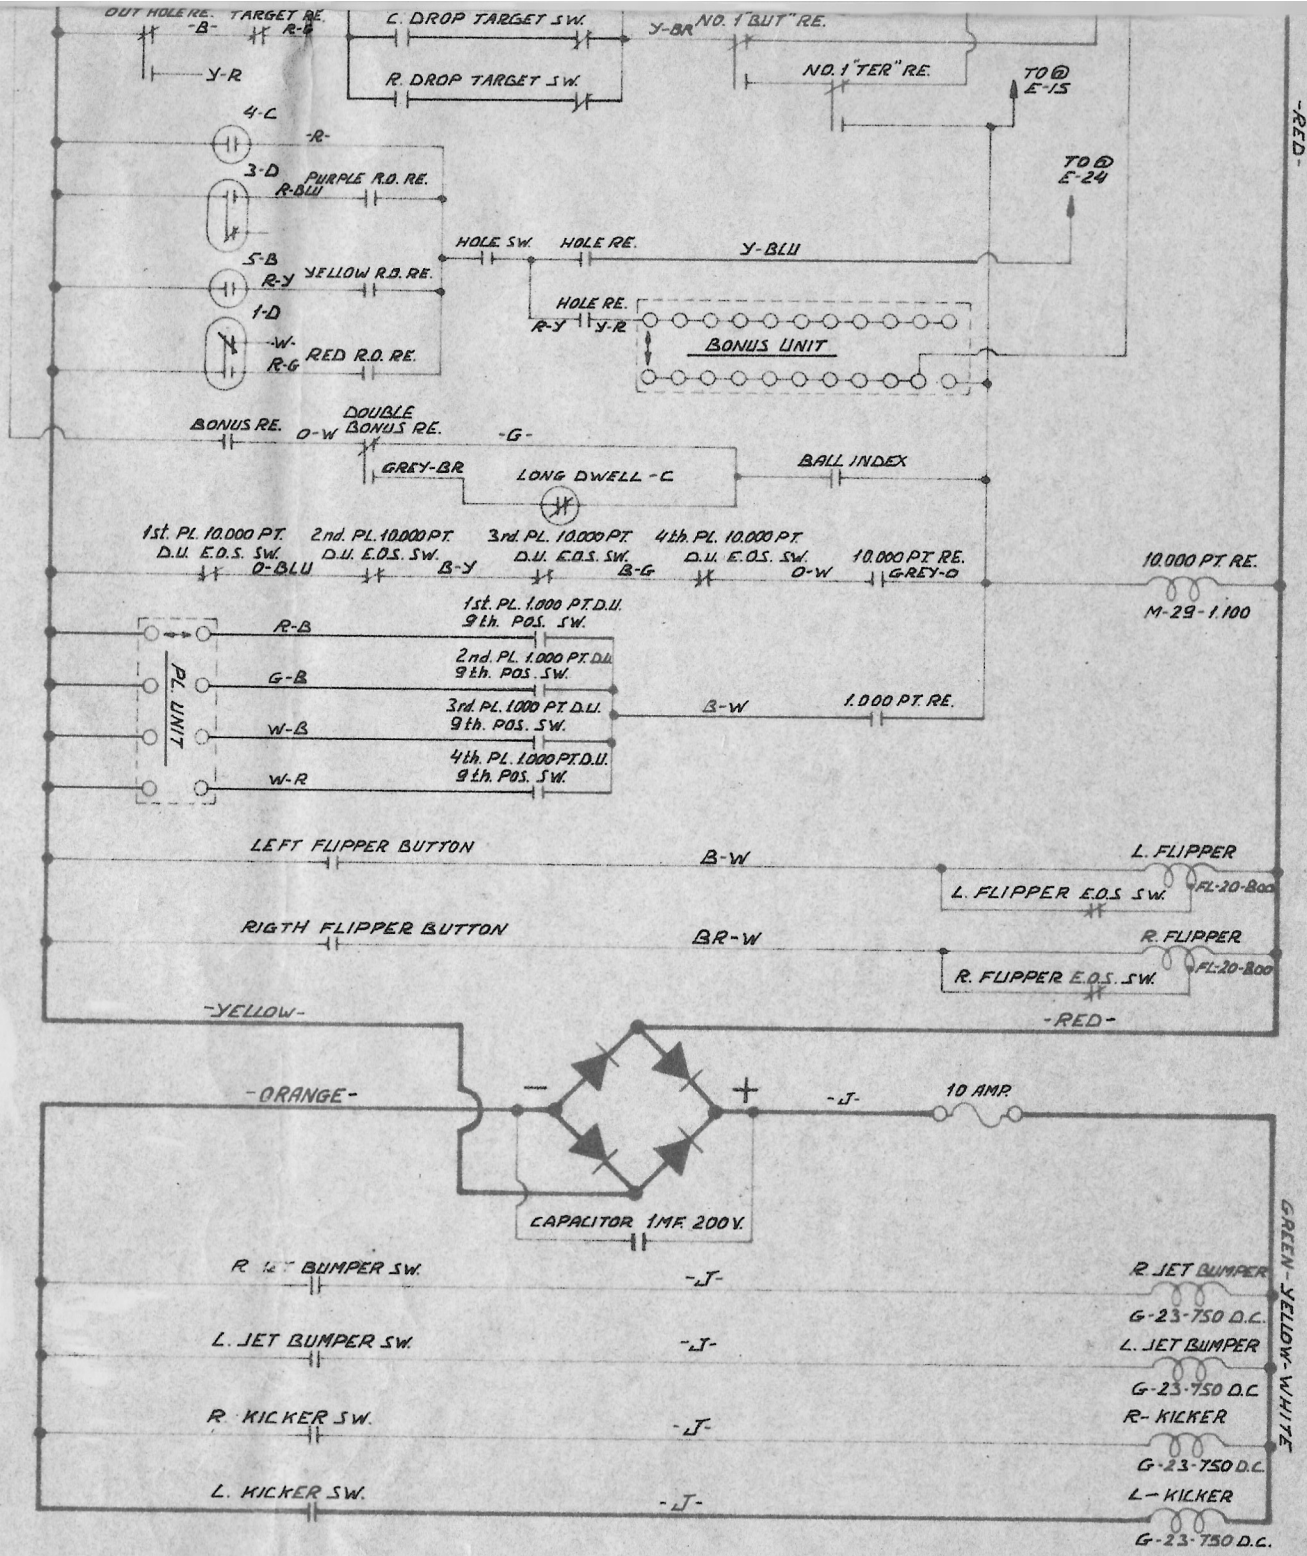

30

31

32