

"CAMPUS QUEEN" ADJUSTMENTS

The playfield panel on "Campus Queen" can be made more conservative towards scoring by moving the posts under (2) bottom slingshot kickers down to widen the opening of "out lanes" on left and right side of panel. Spotting holes and slotted plastic shields are provided for this purpose. To decrease scoring potential even more and also cut down on playing time, rear leg levelers can be turned out to increase pitch of game from front to rear.

BELL ADJUSTMENT PLUG:

Located on back box insert. This plug provides positions to ring bell for 10 point scores, 100 point scores, or 10 and 100 point scores.

HI-SCORE REPLAY ADJUSTMENT PLUGS:

Located on back box insert. These (2) plugs combine to provide a wide range of coverage to award replays for point scoring. Plugs can be set to award replays from 100 point score thru 7000 point score (see Hi-Score replay adjustment card in back box for complete instructions on these plugs).

REPLAY FEATURE ADJUSTMENT PLUG:

Located on mounting board. When plug is in "ON" position, replays are awarded for Hi-Score, Specials, and Match Numbers. When plug is in "OFF" position, 100 points are awarded for specials only.

BALLS PER GAME ADJUSTMENT PLUG:

Located on mounting board. When plug is in "3" position, game ends after 3 balls are played. When plug is in "5" position, game ends after 5 balls are played.

NOTE: Use corresponding 3 or 5 ball score cards when plug is changed.

MATCH FEATURE ADJUSTMENT PLUG:

Located on mounting board. When plug is in "ON" position, replay is awarded for each player whose last number in point score matches number that lites on backglass at end of game. When plug is in "OFF" position, match feature is not in use and match number will not lite at end of game.

Campus Queen Adjustments continued

2nd & 3rd COIN CHUTE ADJUSTMENT PLUG:

Located on mounting board. This plug provides positions to give 2-3-4-5 or 6 plays per coin, thru either the 2nd coin chute or the 3rd coin chute. (See form coin chute adjustment (1-R) for complete instructions on this plug)

1st COIN CHUTE ADJUSTMENT PLUG:

Located on alternator unit on mounting board. This plug provides positions to give 1 play per coin or 1 play per 2 coins. (See form coin chute adjustment (1-R) for complete instructions on this plug)

NOVELTY FLIPPER GAMES
COIN CHUTE ADJUSTMENT PLUGS

1st COIN CHUTE ADJUSTMENT PLUG:

Position 1 gives one play per coin.

Position 2 gives one play per two coins.

2nd & 3rd COIN CHUTE ADJUSTMENT PLUG:

Thru 2nd Coin Chute Jack: (Yellow-Black Wire)

Position 2 gives one play and one credit per coin.

Position 3 gives one play and two credits per coin.

Position 4 gives one play and three credits per coin.

Position 5 gives one play and four credits per coin.

Position 6 gives one play and five credits per coin.

Thru 3rd Coin Chute Jack: (Orange-White Wire)

Position 2 gives one play and one credit per coin.

Position 3 gives one play and two credits per coin.

Position 4 gives one play and three credits per coin.

Position 5 gives one play and four credits per coin.

Position 6 gives one play and five credits per coin.

Neue ausschwenkbare Spielmechanik

1. Entferne Frontleiste und Geldkassette. Kippe Spielfeld in hoechste Stellung.
 2. Entferne Bolzen und Scheiben (4) und loese die beiden Schrauben, welche die Montageplatte zum Gehaeuse festhalten.
 3. Schalte Geraet aus und loese die Steckerverbindung an der linken vorderen Ecke der Montageplatte.
 4. Ziehe die Montageplatte ca. 2,5 cm nach vorne sodass sich die Platte nach oben hebt. Achte auf Bewegungsfreiheit beim Ausziehen. Setze zur Sicherung der Montageplatte den Holzklotz an die skizzierte Stelle.
 5. Stelle Steckerverbindung zur Kassentuer her und schalte Geraet wieder ein. Das Geraet kann nun fuer Servicezwecke in Betrieb genommen werden, wobei alle elektrischen Bauteile fuer den Service leicht zugaenglich gemacht worden sind.
 6. Vor Wiedereinbau der Montageplatte ist das Geraet wieder abzuschalten, der Stecker zur Kassentuer zu ziehen und die Montageplatte langsam in das Gehaeuse zurueckzulassen. Stelle die Steckerverbindung an der Montageplatte wieder her, schalte das Geraet ein, es ist dann wieder betriebsbereit.
- Hinweis; Es ist nicht erforderlich, die (4) Sicherungsbolzen und Scheiben wieder anzubringen wenn das Geraet auf einem Aufstellplatz steht. Die (2) Sicherungsschrauben reichen aus, um die Montageplatte festzuhalten.

