


FRONT MOLDING LOCK

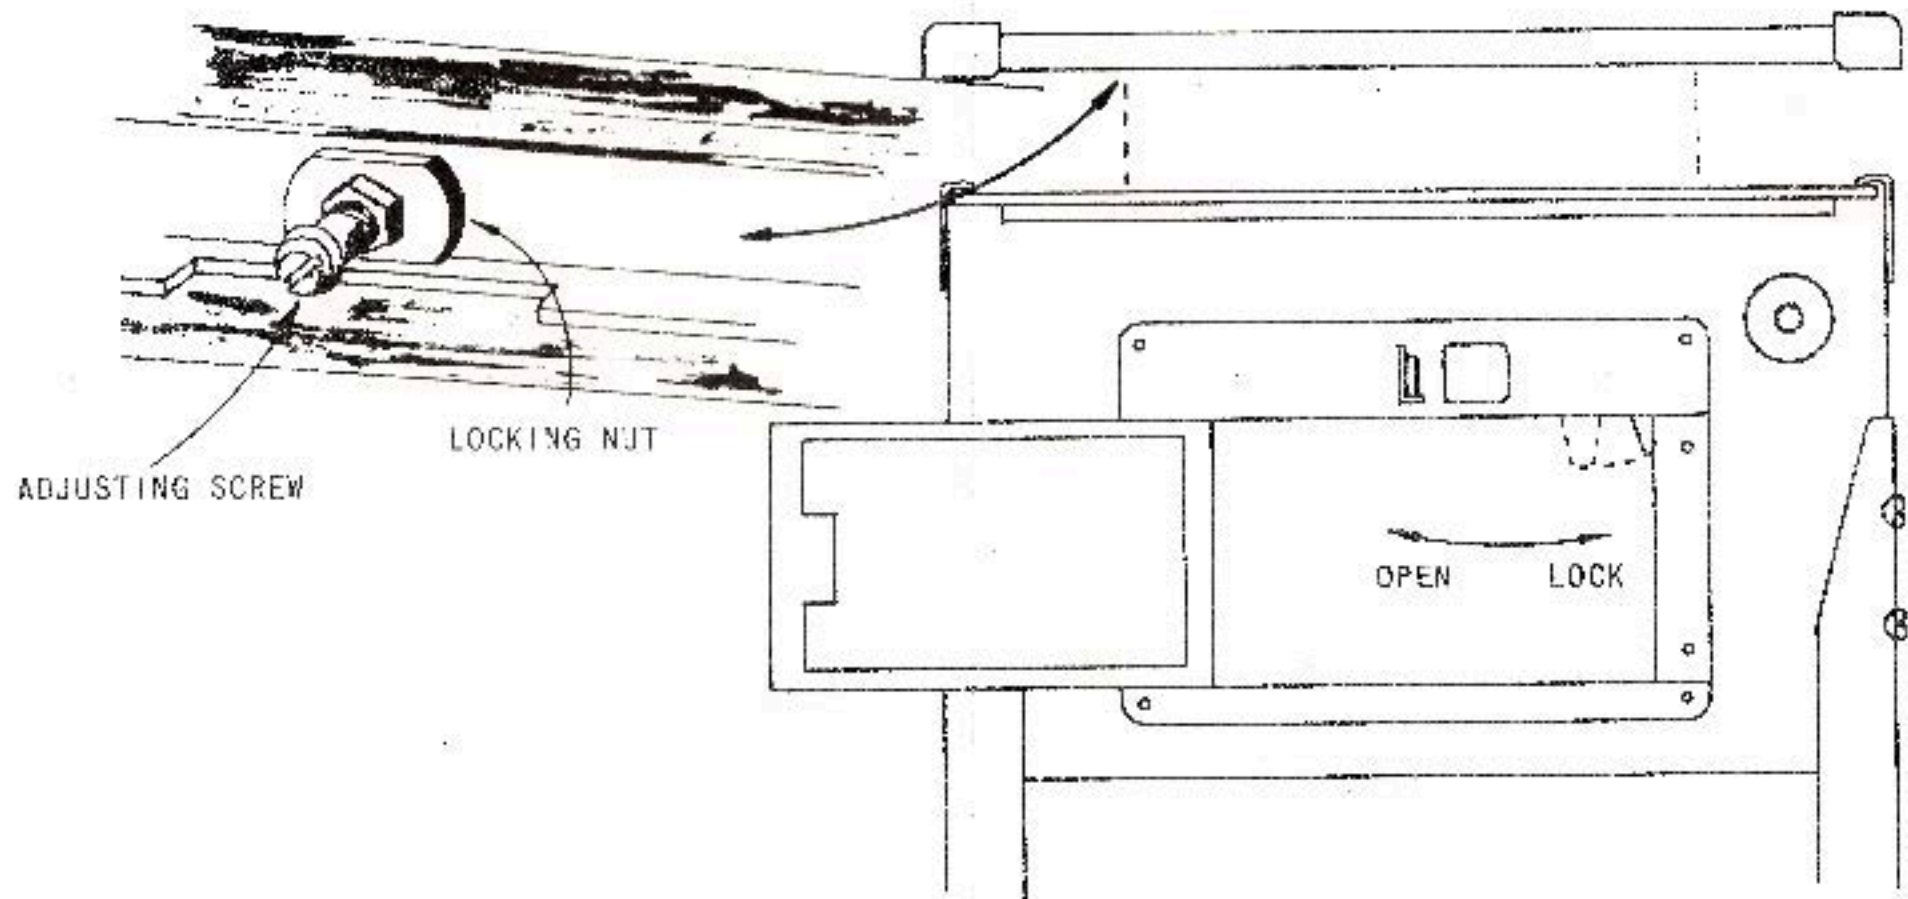

ADJUSTING

LOOSEN LOCKING NUT 1/4 TURN. TURN ADJUSTING SCREW OUT IF FITTING IS TIGHT. TURN ADJUSTING SCREW IN IF FITTING IS LOOSE ON GAME.

TO REMOVE

SWING HANDLE TO OPEN POSITION. HOLDING HANDLE IN OPEN POSITION, REMOVE MOLDING FROM THE GAME BY LIFTING IN THE CENTER.

TO REPLACE

HOLD HANDLE IN OPEN POSITION AND SEAT MOLDING IN PROPER LOCATION. SWING HANDLE TO LOCK POSITION. IF HANDLE HAS TO BE FORCED TO LOCK, ADJUSTMENT IS NECESSARY (SEE ADJUSTMENT NOTE).