



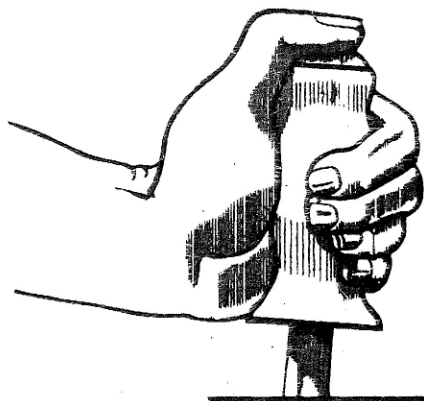

INSTRUCTIONS
FOR OPERATING
SHAKER BALL™

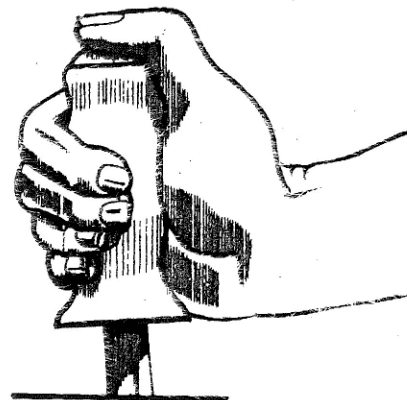

1. INSERT COIN AND OBSERVE THE TRAVEL OF THE MOVING BALL.
2. GRIP A SHAKER HANDLE IN EACH HAND AND PRESS EITHER TOP BUTTON TO RELEASE THE BALL AT A FAVORED POSITION DURING ITS TRAVEL.
3. TO CONTROL BALL IN PLAY, SHAKE THE PLAYING FIELD BY MOVING EITHER OF THE SHAKER HANDLES.
4. PRESS EACH FLIPPER BUTTON ON SHAKER HANDLES TO ACTIVATE FLIPPERS AND MAINTAIN BALL CONTROL.
5. ANY ATTEMPT TO MOVE THE SHAKER HANDLES BEYOND NORMAL LIMITS WILL RESULT IN "TILT!"