


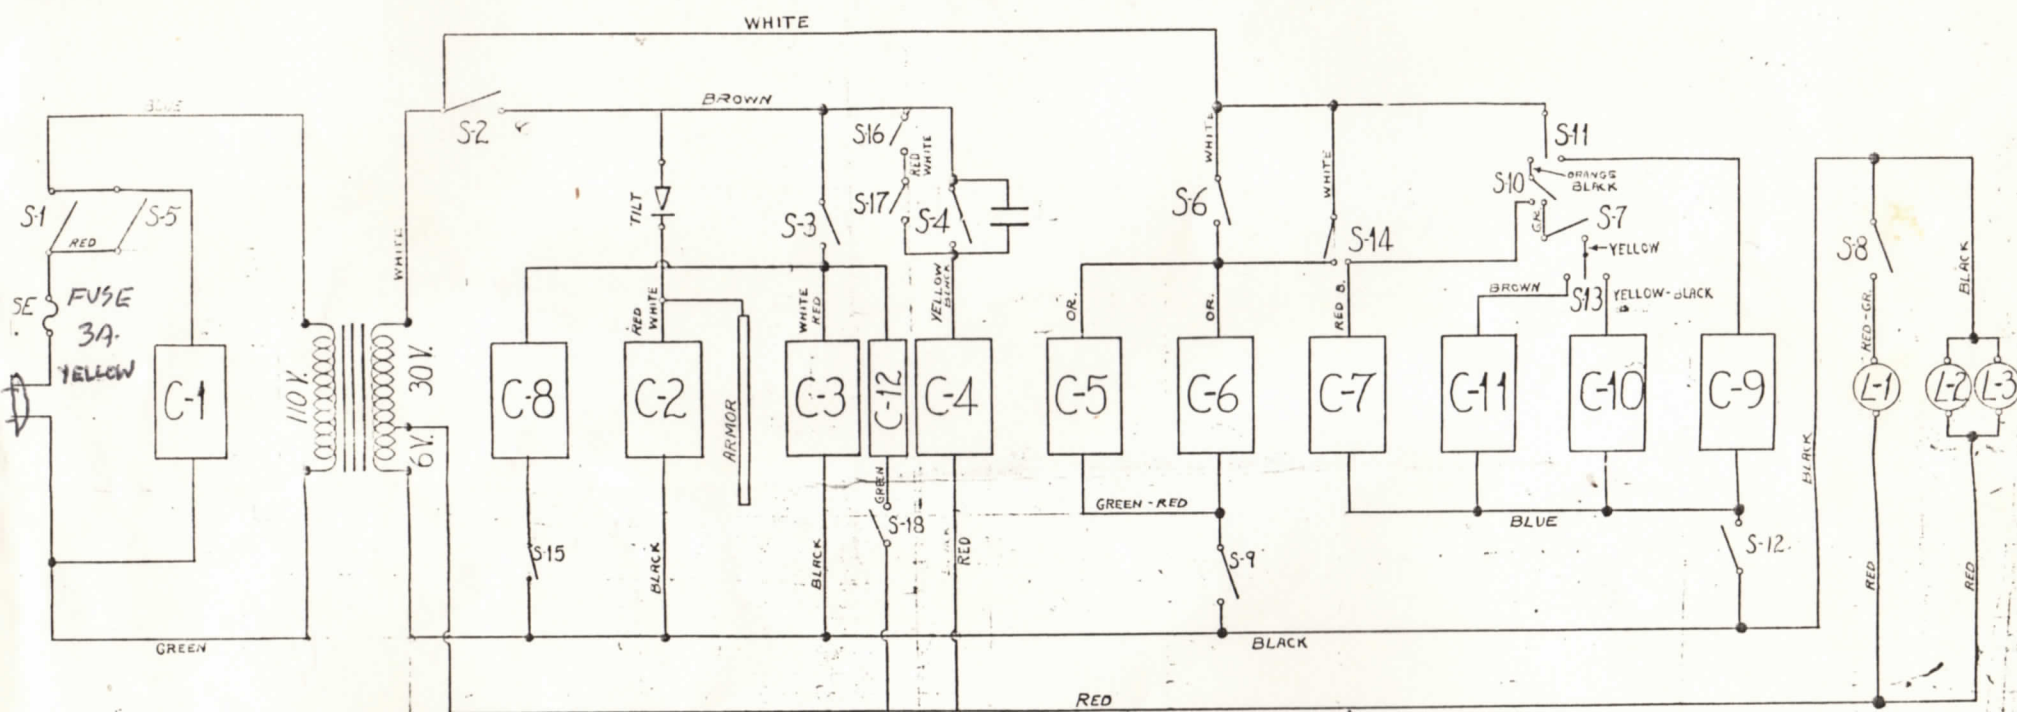

- C-1 A.C. RELAY
 2 TILT RELAY
 3 STEP-UP COIL
 4 1ST " RELAY
 5 RESET COIL
 6 " RELAY
 7 FREE GAME RESET COIL
 8 " STEP-UP COIL
 9 COIN SHUTE COIL
 10 METER COIL
 11 PAYOUT UNIT
 12 2ND STEP-UP RELAY
 L-1 TILT LIGHT
 2 PROJ. LIGHT
 3 FREE GAME LIGHT

- S-1 CLOCK
 2 OPEN BY TILT RELAY
 3 CLOSED BY STEP-UP RELAY
 4 COIL SPRING CONTACTS ON PANEL
 5 CLOSED BY COIN CHUTE (CLOCK)
 6 " RESET RELAY
 7 OPEN BY SHUFFLE
 8 CLOSED BY TILT RELAY
 9 OPENED - PROJ. AT RESET
 10 CLOSED - HAND TO RESET FREE GAMES
 11 " AND OPENED BY COIN CHUTE
 12 " BY FREE GAME WHEN STEPPED UP
 13 KNIFE SWITCH
 14 CLOSE BY SHUFFLE
 15 " CAM ON SCORE PROJ.

- S-16 OPEN BY 2ND STEP-UP RELAY
 IN ENERGIZED POSITION
 17 CLOSED BY 1ST STEP-UP RELAY
 IN ENERGIZED POSITION
 18 CLOSED BY 1ST STEP-UP RELAY
 IN ENERGIZED POSITION

SKIPPER
 WIRING DIAGRAM

SKIPPER