

DELUXE SHORT-STOP Adjustment Instructions

ALL FEATURE REPLAY ADJUSTMENT

Located on insert panel.

When plug is in off position, no replays will register.

PREVIOUS HI SCORE REPLAY ADJUSTMENT

Located on insert panel.

When plug is in REPLAY position . . . topping previous hi-score registers 5 replays at end of game. All feature plug must be in REPLAY position.

When plug is in OFF position . . . topping previous hi-score registers once on corresponding meter.

"SHORT-STOP" REPLAY ADJUSTMENT

Located on insert panel.

When plug is in ON position, 5 REPLAYS will register at end of game when arrow is under "P". All feature jack must be in REPLAY position.

When plug is in METER position, corresponding meter will register once when arrow is under "P".

"T" & "T" REPLAY ADJUSTMENT

Located on name unit on mechanism board.

When plug is in ON position, one replay will register when arrow is under first "T" and one replay will register when arrow is under 2nd "T" when plug is in OFF position, this feature is disconnected.

NUMBER MATCH REPLAY ADJUSTMENT

Located in insert.

When REPLAY PLUG is in replay position, one replay will register each time a number is matched at end of game.

When METER plug is in OFF position, it will register once on number match meter at end of game when number is matched.

When NO. MATCH plug is in OFF position, and REPLAY plug is in OFF position, no replays will register and NO number match will register.

NUMBER MATCH ADJUSTMENT

Located on insert panel.

When plug is in MYSTERY, number match lite will appear at end of game.

When plug is in SKILL, number match lite will appear at all times during game.

When plug is in OFF, number match unit will not function.

NOTE: when plug is in OFF, NUMBER MATCH REPLAY AND METER plug should be in OFF position.

AUTOMATIC HI-SCORE RESET ADJUSTMENT

Located on RUN UNIT DISC on insert panel.

The HI-SCORE units will reset automatically to 20 at end of game when the maximum hi-score is reached. The maximum hi-score can be set at 45, 40, 34, or 30 runs by inserting phone tip in corresponding slot. By removing phone tip, the hi-score units will not reset automatically.

MANUAL HI-SCORE RESET

Located on insert panel.

The HI-SCORE UNITS may be manually reset to 20 by impulsing the manual reset switch until the units no longer receive impulses. The HI-SCORE UNITS MUST BE AT 20 OR MORE TO OPERATE PROPERLY.

THREE FOR 25c - FIVE FOR 25c ADJUSTMENT

Located on mechanism panel near 25c relay.

When plug is inserted in 3 for 25c - 3 credits will register when 25c is played.

When plug is inserted in 5 for 25c - 5 credits will register when 25c is played.
(For 5c play).