

GENERAL INSTRUCTIONS FOR LITTLE LEAGUE

1. INSTALLATION:

- Fasten the 4 legs to cabinet with furnished bolts.
- Install the back-box on the cabinet with furnished bolts and attach all disconnect jacks.
- Put the five 13/16 diameter steel balls into opening of ball return through which is accessible above the cash box.
- Level the game and adjust the front tilt switch.
- Plug the line cord into A.C. only, 60 cycles, 115 volts; the power is controlled by a toggle switch located under the front part of the game.

2. VOLTAGE CONTROL: In low voltage areas (105 volts or less) an additional boost in the output voltage of the transformer can be obtained by inserting the transformer voltage control fuse into the "LOW LINE" fuse position.

3. TO SERVICE TARGET PANEL, remove from rear of game.

4. TO SERVICE PLAYFIELD OR FRONT MOULDING, open front door to make the latches accessible.

5. 25¢ JACK is located in the back-box to give 3, 4 or 5 replays.

6. THE BAT POWER is controlled by a variable resistor (rheostat) which is accessible from the front door. Turn the knob clockwise for less power or counter-clockwise for more power.

7. THE CURVE BALL JACK, located in the back box, will control the number of curve balls during the game.

8. TOP SPECIAL SCORES are shown on the back glass. A top the score jack is located in the back box to adjust the scores.

Midway Mfg. Co.

REPLAY PERCENTAGE CONTROL FOR LITTLE LEAGUE

- Replays occur when the score matches or is higher than the Top Special Score values on the back glass. An adjustment jack is located on the back door to control the scores.
- One replay occurs when 11 HOMERS are completed. A 10, 11, 12, or 13 homers adjustment jack is located in the back box.
- One replay occurs when 5 double hits are made. A 3, 4, 5, or 6 double hits jack is located in the back box.
- One replay is given when the yellow star is lit. Instructions for controlling the frequency of the star are located on the back door.
- Additional control over replays are found in the curve ball magnet adjustment jack, located in the back box. This varies the number of curve balls during the game.
- The bat power controls the accuracy in hitting the pitched ball. Stronger bat power results in the highest scores and consequently more replays. A variable resistor (rheostat) is accessible from the front door. Turn the knob clockwise for less power and counter-clockwise for more power.
- For maximum replays, install the Top score jack in lowest scores position, the curve ball jack in the minimum curves position and the homer and double hits jacks in lower positions.
- For minimum replays reverse above jack positions.

Midway Mfg. Co.

10136 W. PACIFIC AVENUE

FRANKLIN PARK, ILLINOIS