

ADJUSTMENTS

This game can be operated on 1 - 2 - or 3 innings. We recommend 1 or 2 inning operation. When operating game on 1 inning we suggest the special adjustment be set at medium or liberal. When set for 2 inning operation we suggest a setting of medium or conservative. When set for three inning operation we suggest a setting of conservative or tight. If 3 inning game is either too liberal or takes too long to play then change adjustment to tight.

INSERT

There are four adjustment Jacks located in the back box.

1. On left side of back box wall is the SCORE REPLAY ADJUSTMENT TAG. This pertains to the Jack mounted on the top of the Second Player Run Unit. Phone tips should be inserted into the positions at which replays are to be awarded, that is to correspond to the SCORE CARD used.
2. HI-SCORE Reset on side of above mentioned 2ND Player Run Unit. Put phone tip into Jack at score at which HI-SCORE drums are to be reset.
3. MATCH ADJUSTMENT can be set for Mystery, Skill or off.
4. Replay On — OFF adjustment.

PLAYFIELD

1. Bat Rheostat to adjust bat power.
2. Bat timing, ANYTIME or ON PITCH ONLY

MECH PANEL

1. 25c ADJUSTMENT, 5-4-3-2 per coin.
2. INNING ADJUSTMENT, plug in for 3, 2 or 1 Inning play to correspond with Score Card.
3. SPECIAL FEATURE, this circuit converts the OUT holes in left field and right field, at short-stop and 2ND base, and pitcher to single base hits when lit. With a runner on first base the left and right field holes revert back to OUTS. A runner on second base converts the short-stop and 2ND baseman back to OUTS. A runner on third changes the pitcher hole back to an OUT. This feature is controlled thru the OUT unit and an adjustment jack is provided to regulate its frequency. This adjustment is made by the use of 3 phone tips. With all 3 phone tips, unplugged, in open sockets on left (ON) side of jack, the game is Liberal, the feature is on thru entire game. With 1 phone tip plugged in right side at 1 the feature is OFF with 1 OUT registered, this is Medium. With a phone in right side at 0 and 1 the feature will be OFF with 0 and 1 OUT registered, this is Conservative. With all 3 phone tips in right hand side, the feature will never appear, this is Tight.
4. RED DRUMS RESET, plugged in at top position opposite 35. PREVIOUS HI-SCORE DRUMS will reset to 35; plugged in at 30 they will reset to 30, plugged in at 25 they will reset to 25; and plugged in at 20 they will reset to 20.

ALL R.P.
ON.
OFF.
HI-SCORE
TOPPED
ON.
OFF.
MATCH
ON.
OFF.

MATCH ADJ.
MYSTERY
SKILL
OFF

HI-SCORE
RESET
31.
35.
41.
45.

REPLAY ADJUSTMENT
FOR SCORE -
PUT PHONE TIPS IN
JACK AT SCORES
DESIRED.

POST	AT TOP OF JACK
10	26
12	28
14	30
16	32
18	34
20	36
22	38
24	40

FRONT BACK.

BAT TIMING
ANY TIME •
PITCH ONLY •

DEC INC
BAT POWER

SPECIAL
FEATURE
ADJ.
ON-0-OFF
ON-1-OFF
ON-2-OFF

INNING
ADJ.
1.
2.
3.

25c ADJ.
5.
4.
3.
2.

RED DRUMS
RESET
35.
30.
25.
20.

232-A-36