


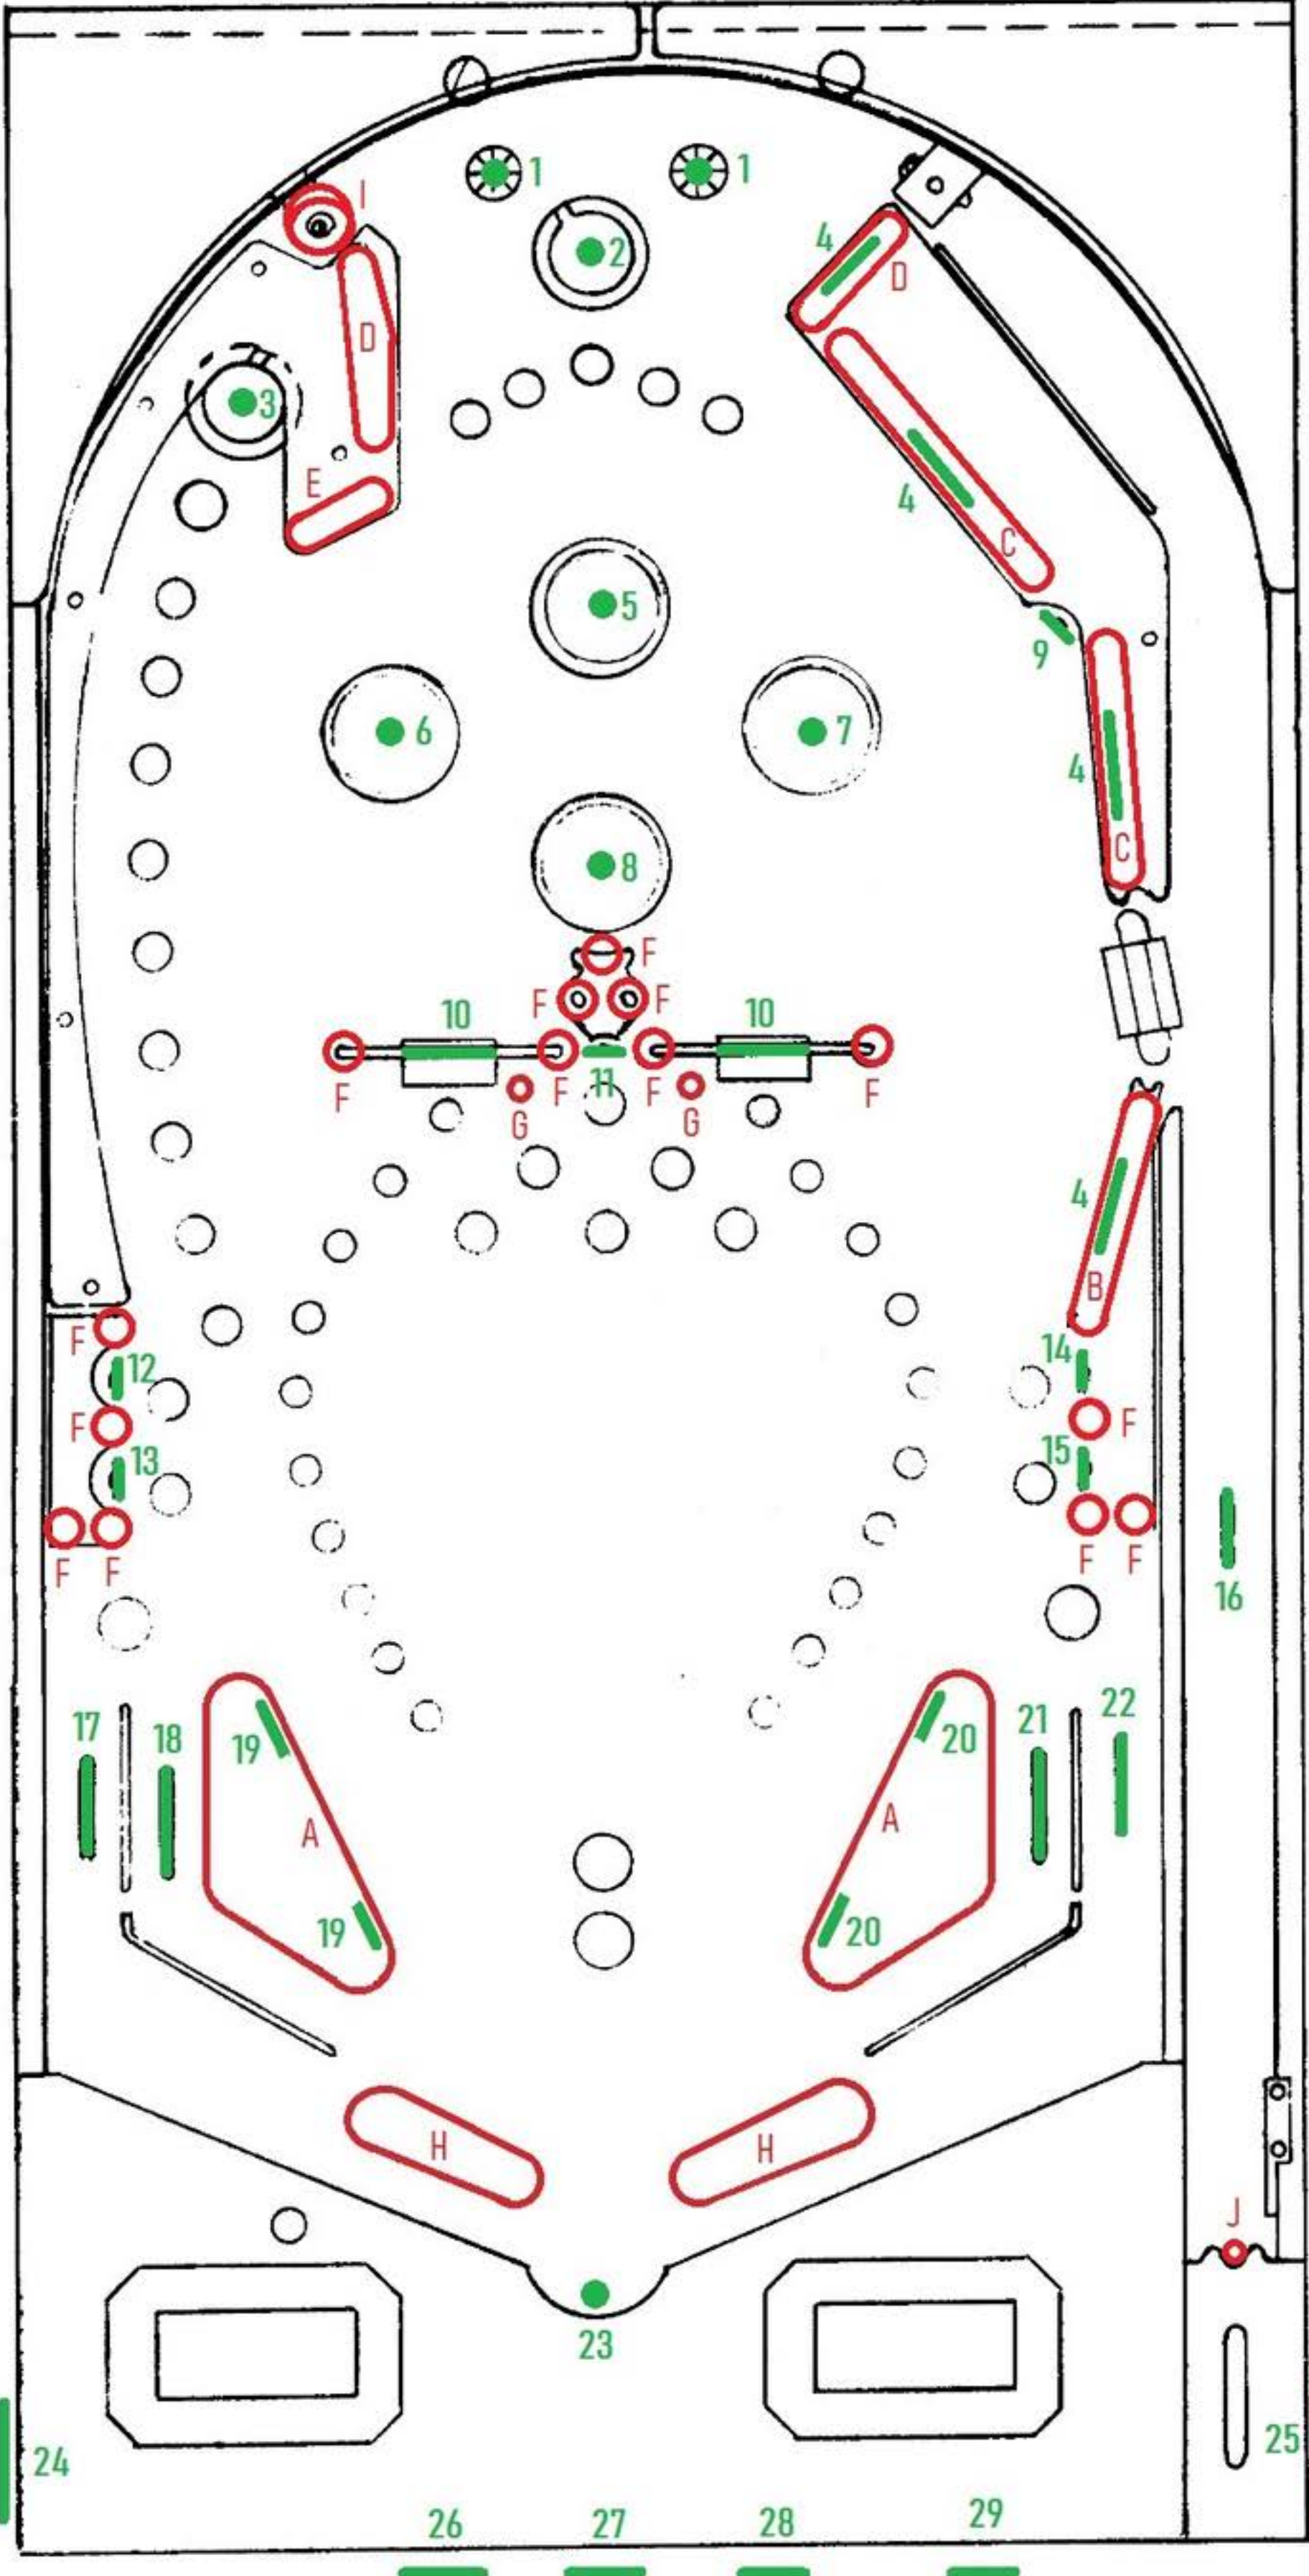

RUBBER PARTS

- A 2 3"
- B 1 2 1/2"
- C 2 2"
- D 2 1 1/2"
- E 1 1"
- F 14 5/16"
- G 2 T-NUT
- H 2 FLIPPER 1 1/2" YELLOW
- I 1 REBOUND 1 1/2"
- J 1 BALL SHOOTER TIP

SWITCHES

- | | | | |
|---------|-------------------------|------|------|
| 1 | TOP R.O. BUTTON (2) | H 14 | |
| 2 | TOP HOLE SW. | G 39 | |
| 3 | BONUS HOLE SW. | G 39 | |
| 4 | REBOUND (4) | G 20 | |
| 5 | A THUMPER BUMPER | H 20 | |
| 6 | B THUMPER BUMPER | H 21 | |
| 7 | C THUMPER BUMPER | H 21 | |
| 8 | D THUMPER BUMPER | H 21 | |
| 9 | TOP TARGET SW. | H 10 | H 26 |
| 10 | SPIN SW. (2) | H 10 | |
| 11 | CENTER TARGET | H 9 | H 40 |
| 12 | "A" TARGET | H 16 | |
| 13 | "B" TARGET | H 17 | |
| 14 | "C" TARGET | H 17 | |
| 15 | "D" TARGET | H 18 | |
| 16 | SHOOTER TROUGH | H 16 | H 27 |
| 17 | LEFT OUTER LANE R.O. | E 27 | H 30 |
| 18 + 21 | BOTTOM INNER LANES R.O. | H 9 | H 15 |
| 19 + 20 | SLING SHOTS | H 20 | |
| 22 | RIGHT OUTER LANE R.O. | D 26 | H 30 |
| 23 | OUT HOLE SW. | G 5 | |
| 24 | LEFT FLIPPER BUTTON | H 33 | |
| 25 | RIGHT FLIPPER BUTTON | H 33 | |
| 26 | 1st COIN CHUTE | C 5 | |
| 27 | 2nd COIN CHUTE | C 6 | |
| 28 | 3rd COIN CHUTE | C 6 | |
| 29 | CREDIT BUTTON | C 10 | |