


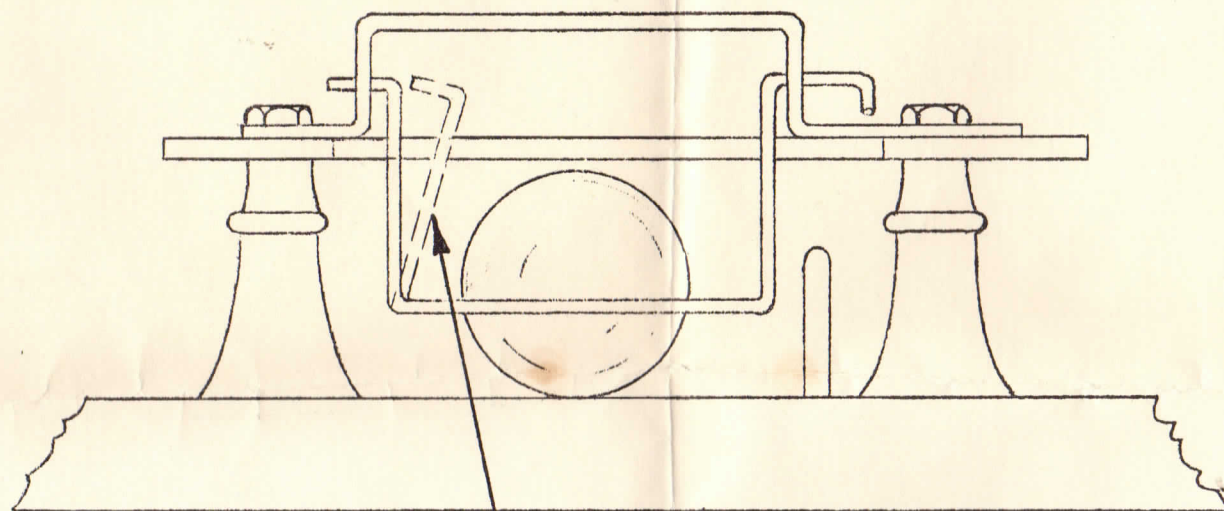

DEPRESS WIRE, INSERT CAPTIVE BALL.