

GAME OH03
FORM NO. OH03-00300-0200




Parts Manual

Bally
MIDWAY™

10601 W. Belmont Ave. • Franklin Park, Illinois 60131 • U.S.A.
Telephone: (312) 451-9200 • Fax No.: 312-451-4150
Cable Address: MIDCO • Telex No.: 72-1596



TOP PLAYFIELD ASSEMBLY W/PLASTICS
PART NO. AH03-00004-0000

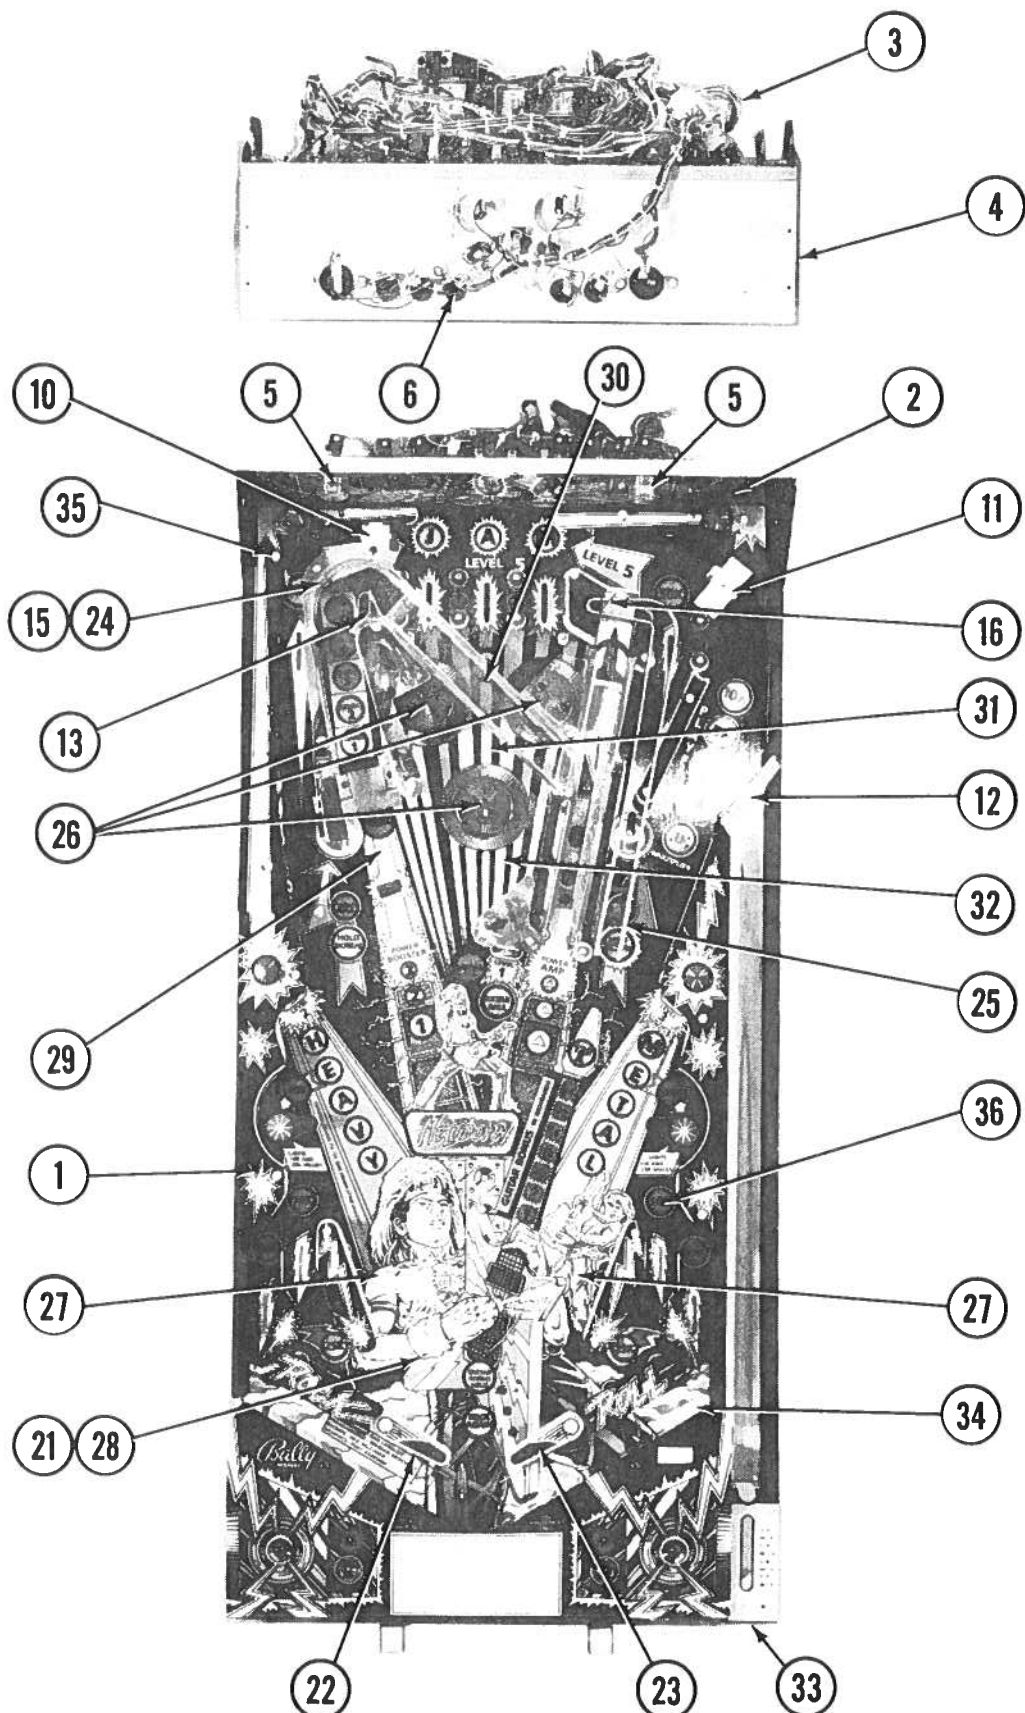

TOP PLAYFIELD ASSEMBLY W/PLASTICS - PART LIST
PART NO. AH03-00004-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	AH03-00011-00XF	SCREENED PLASTICS SET W/BUSHING
	OH03-00901-00XF	BUTYRATE: FORMED BOTTOM ARCH
	OH03-00901-00XA	BUTYRATE: SCREEN W/DIE-CUT
	0017-00042-0745	LIGHT-DOME: PLASTIC; CLEAR (4 REQ'D.)
	0967-00710-00XF	SPACER: BUSHING (6 REQ'D.)
	AH03-00009-0000	BACKBOARD ASSY. (INCLUDES ITEMS 2 THRU 9)
2	AH03-00011-00XF	SCREENED PLASTICS SET W/BUSHING
3	AH03-00024-0000	BACKBOARD CABLE ASSY.
4	AH03-00502-0000	BACKBOARD: W/INSERTS
5	0017-00042-0748	LIGHT-DOME: PLASTIC; AMBER (2 REQ'D.)
6		SEE COMMON SOCKET ASSY. (SEE PAGE 34)
7	0017-00101-0017	6 X 1/2" SLOTTED HEX W/WASHER SCREW (12 REQ'D.) (NOT SHOWN)
8	0017-00101-0025	8 X 1/2" SLOTTED HEX W/WASHER SCREW (4 REQ'D.) (NOT SHOWN)
9	0017-00101-0117	8 X 5/8" PHILLIPS TRUSS SCREW (5 REQ'D.) (NOT SHOWN)
10	AH03-00031-0000	BALL GATE & HOLD DOWN ASSY.
	AH03-00030-0000	HOLD-DOWN BRKT. ASSY.
	0011-00002-0900	ROD: GATE-BRKT.
	0360-00304-0000	BRKT.: GATE
11	A365-00337-0000	BALL GATE & BRKT. ASSY.: RIGHT
	0011-00003-3900	ROD
	0365-00200-00XF	BRKT.: GATE & BALL
	0365-00203-0000	BRKT.: GATE
12	AA40-00034-0000	GATE BRKT. & WIRE-FORM ASSY.
	0A40-00909-0000	WIRE-FORM: GATE-BRKT.

TOP PLAYFIELD ASSEMBLY W/PLASTICS - PARTS LIST, CONT'D.
PART NO. AH03-00004-0000

ORDER BY PART NUMBER **ONLY**


ITEM	PART NO.	DESCRIPTION
	0370-00116-0000	BRKT.: GATE
	AH03-00018-0000	RAMP ASSY.: PLASTIC (INCLUDES ITEMS 13 THRU 15)
13	AH03-00029-0000	SWITCH W/WIRE-FORM & DIODE ASSY.
	0017-00032-0123	SWITCH: MICRO; LOW-TORQUE
	0365-00970-0004	WIRE-FORM: MICRO-SWITCH
14	OH03-00109-00XF	BRKT.: SWITCH
15	OH03-00908-0000	RAMP: PLASTIC
	A365-00336-0000	BALL TRAP RAMP ASSY. (INCLUDES ITEMS 16 THRU 20)
16	AE35-00030-0000	MICRO-SWITCH W/WIRE & DIODE ASSY.
	0017-00032-0123	SWITCH: MICRO; LOW-TORQUE
	0365-00970-0002	WIRE-FORM: MICRO-SWITCH
17	OH03-00107-00XF	BRKT.: WIRE-SUPPORT (NOT SHOWN)
18	OH03-00114-00XF	BRKT.: RAMP-EXIT (NOT SHOWN)
19	OH03-00123-00XF	BRKT.: RAMP (NOT SHOWN)
20	OH03-00124-00XF	BRKT.: BALL-STOP (NOT SHOWN)
21	AH03-00501-00XF	PLAYFIELD & INSERTS: SCREENED
22	A365-00312-0300	FLIPPER W/CAP ASSY.: (BLACK) LEFT

TOP PLAYFIELD ASSEMBLY W/PLASTICS - PARTS LIST, CONT'D.
PART NO. AH03-00004-0000

ORDER BY PART NUMBER **ONLY**

ITEM	PART NO.	DESCRIPTION
23	A365-00312-0400	FLIPPER W/CAP ASSY.: (BLACK) RIGHT
24	OH03-00909-0000	COVER: RAMP
25	OH03-00910-00XF	RAMP: WIRE-BALL TRAP
26	0017-00042-0518	CAP: THUMPER BUMPER; RED (3 REQ'D.)
27	0017-00091-0071	MYLAR: SHIELD; SLINGSHOT (2 REQ'D.)
28	OH03-00903-0000	MYLAR: PLAYFIELD
29	OH03-00903-0100	MYLAR: RAMP-PROTECTOR
30	0365-00982-0180	MYLAR: PROTECTIVE SHIELD 180°
31	0365-00982-0270	MYLAR: PROTECTIVE SHIELD 270°
32	0365-00982-0360	MYLAR: PROTECTIVE SHIELD 360°
33	OH03-00100-00XF	SHOOTER GAUGE
34	0370-00918-1000	EXTENSION: BOTTOM-ARCH
35	0017-00009-0302	ACORN NUT: #5 NYLON (22 REQ'D.)
36		SEE COMMON SOCKET ASSY. (SEE PAGE 34)

TOP PLAYFIELD ASSEMBLY W/O PLASTICS
PART NO. AH03-00004-0000

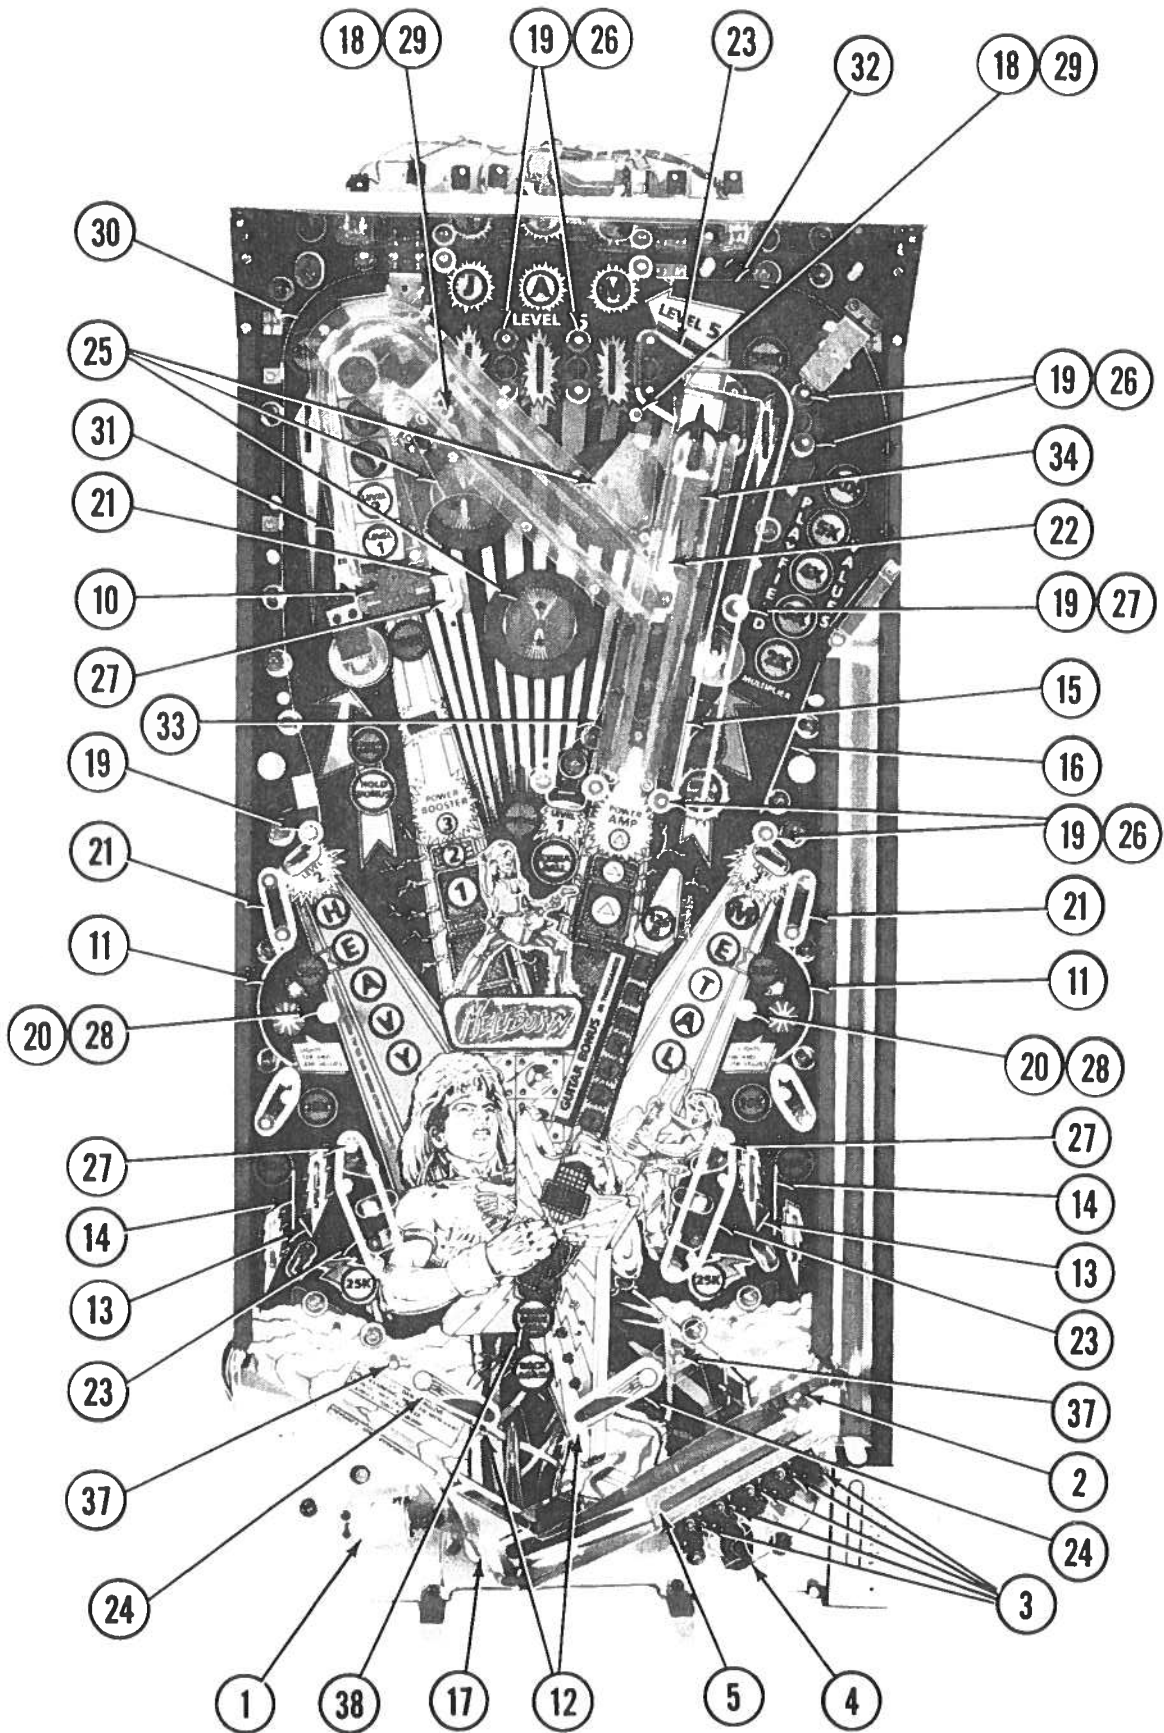

TOP PLAYFIELD ASSEMBLY W/O PLASTICS - PARTS LIST
PART NO. AH03-00004-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A360-00234-0000	KICKER ASSY.: TOP MOUNTED (SEE PAGE 8)
2	AH01-00027-0000	MULTI-BALL KICKER ASSY. (SEE PAGE 32)
	A365-00339-0500	SWITCH-TO-TROUGH COVER ASSY.: 5-BALL (INCLUDES ITEMS 3 THRU 6)
3	AH01-00033-0000	WIRE-TO-SWITCH ASSY. (5 REQ'D.)
	0017-00007-0015	NUT: 1/8" PUSH
	0017-00032-0123	SWITCH: MICRO; LOW-TORQUE
	0365-00970-0003	WIRE-FORM; MICRO-SWITCH
4	A365-00349-0500	CONTROLLER CABLE ASSY.: 5-BALL
5	OH01-00111-00XF	BRKT.: BALL TROUGH COVER
6	OH01-00913-0000	INSULATOR: MICRO-SWITCH (NOT SHOWN)
7	OH01-00110-00XF	BRKT.: BALL LOADING-RAMP (NOT SHOWN)
8	OH03-00108-00XF	BRKT.: WIRE-GUIDE, BALL TRAP RAMP (NOT SHOWN)
9	OH03-00113-00XF	BRKT.: RAMP-SUPPORT (NOT SHOWN)
10	OH03-00122-0000	PLATE: RAMP-ENTRANCE
11	OH03-00102-0000	WIRE FORM (2 REQ'D.)
12	0360-00175-5300	WIRE FORM: BALL GUIDE 2-3/8" (2 REQ'D.)
13	0365-00151-0750	WIRE FORM: BALL GUIDE 3/4" (2 REQ'D.)
14	0365-00151-2250	WIRE FORM: BALL GUIDE 2-1/4" (2 REQ'D.)
15	0365-00151-4500	WIRE FORM: BALL GUIDE 4-1/2"
16	0365-00151-5000	WIRE FORM: BALL GUIDE 5"
17	0365-00190-00XF	GUIDE: BALL RETURN
18	0017-00041-0633	BUMPER: WHITE RUBBER (2 REQ'D.)
19	0017-00041-0637	BUMPER: WHITE RUBBER (18 REQ'D.)
20	0017-00041-0641	BUMPER: I.D. = 15/16" RUBBER (2 REQ'D.)

TOP PLAYFIELD ASSEMBLY W/O PLASTICS - PARTS LIST, CONT'D.
PART NO. AH03-00004-0000


ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
21	0017-00041-0643	BUMPER: I.D. = 1" RUBBER (5 REQ'D.)
22	0017-00041-0644	BUMPER: I.D. = 1-1/2" RUBBER
23	0017-00041-0646	BUMPER: I.D. = 2-1/2" RUBBER (3 REQ'D.)
24	0017-00041-0653	FLIPPER-RUBBER: YELLOW (2 REQ'D.)
25	0017-00042-0566	COLLAR: THUMPER BUMPER (RED) (3 REQ'D.)
26	0017-00042-0588	POST: L=1" (RED) (30 REQ'D.)
27	0017-00042-0596	POST: L=1-3/16" (RED) (10 REQ'D.)
28	0360-00733-00XF	POST: BUMPER (NICKEL) (11 REQ'D.)
29	0365-00700-00XF	POST: BUMPER 10/32 X 7 (2 REQ'D.)
30	AH03-00019-0000	BALL SCOOP ASSY.: LEFT
31	AH03-00020-0000	BALL SCOOP ASSY.: LEFT; INSIDE
32	AH03-00021-0000	BALL SCOOP ASSY.: RIGHT; UPPER
33	AH03-00022-0000	BALL SCOOP ASSY.: CENTER
	A365-00336-0000	BALL TRAP RAMP ASSY. (INCLUDES THE FOLLOWING ITEM)
34	0E35-00114-00XF	BRKT.: ATOM-SMASHER RUNWAY
35	0360-00738-01XF	STUD: 6 X 1-11/16" (12 REQ'D.)
36	0360-00738-02XF	STUD: 6 X 1-1/2" (4 REQ'D.)
37	0017-00042-0348	NYLON SPACER (8 REQ'D.)
38		SEE COMMON SOCKET ASSY. (SEE PAGE 34)



THIS PAGE WAS LEFT BLANK INTENTIONALLY

BOTTOM PLAYFIELD ASSEMBLY
PART NO. AH03-00004-0000

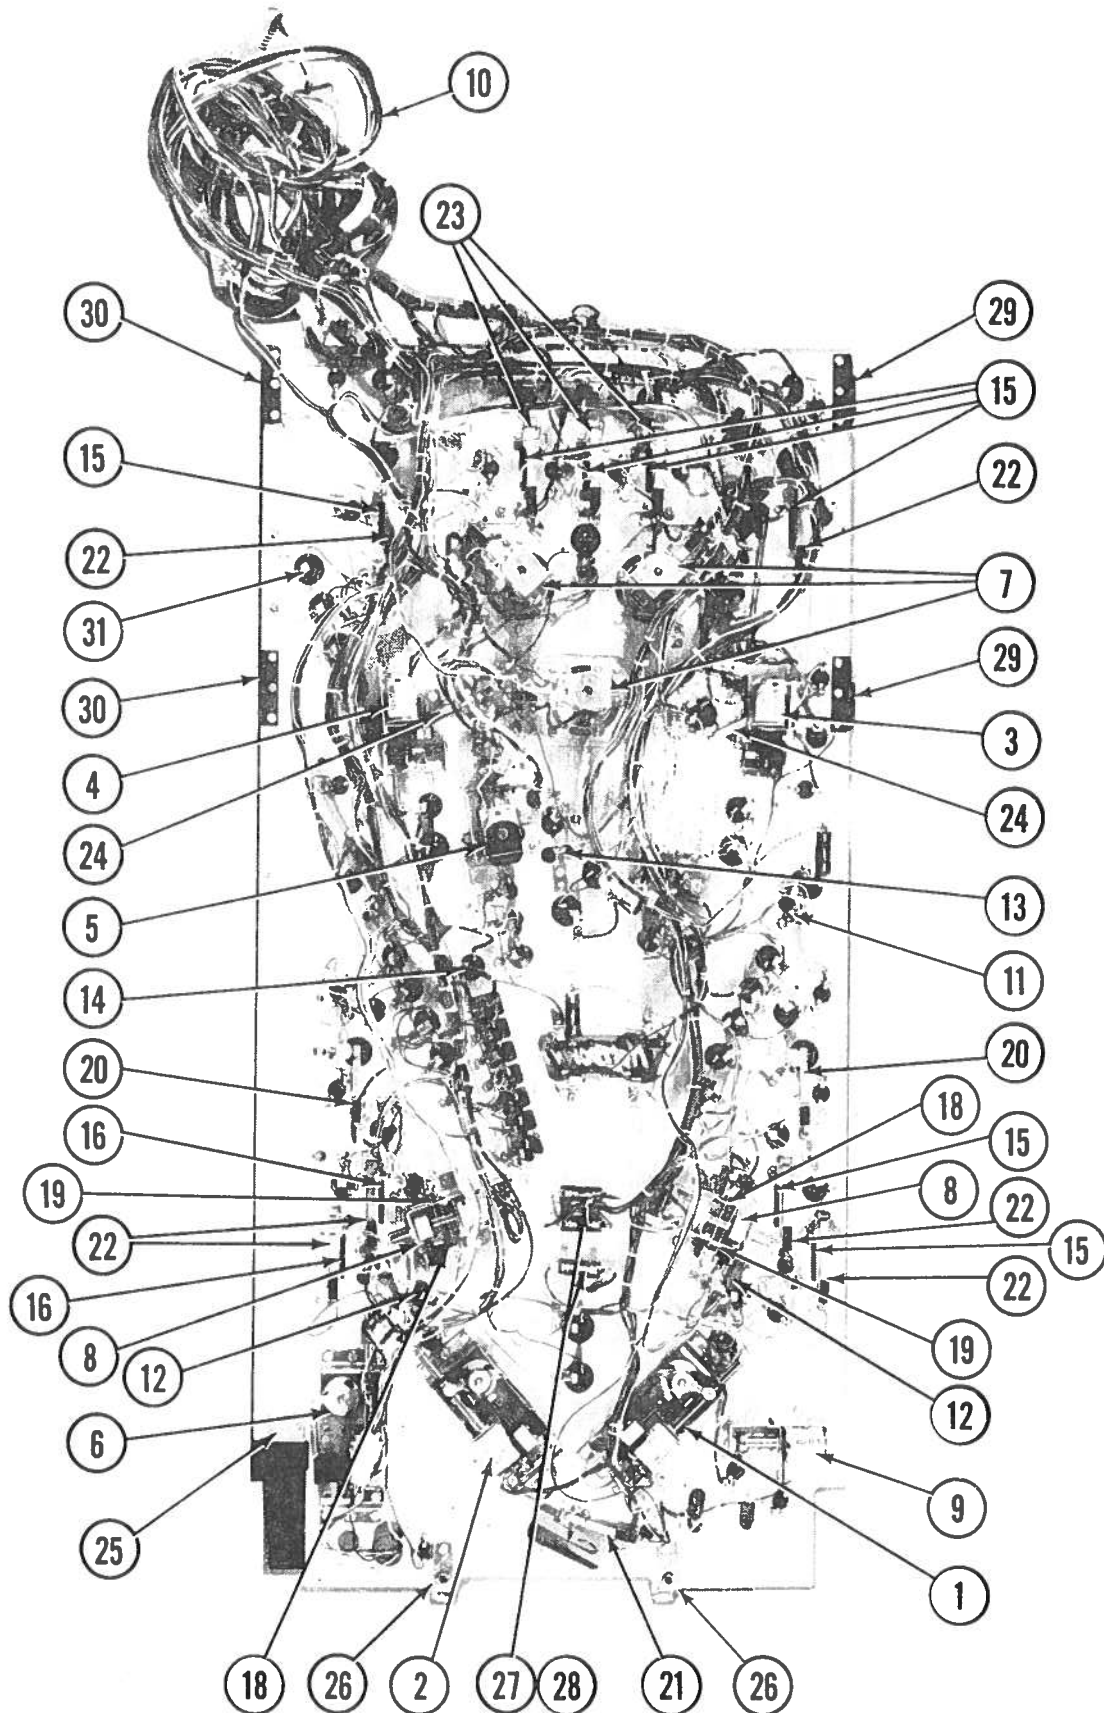

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST
PART NO. AH03-00004-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	AC70-00022-0200	FLIPPER ASSY. SINGLE SW/LT. (SEE PAGE 22)
2	AC70-00022-0100	FLIPPER ASSY. SINGLE SW/RT. (SEE PAGE 24)
3	A365-00342-0100	EJECT HOLE ASSY.: LEFT (SEE PAGE 28)
4	A365-00341-0100	EJECT HOLE ASSY.: RIGHT (SEE PAGE 30)
5	AH03-00028-0000	BALL STOP & COIL ASSY. (SEE PAGE 26)
6	AH01-00027-0000	KICKER ASSY.: MULTI-BALL (SEE PAGE 32)
7	A967-00053-0100	THUMPER BUMPER ASSY. (3 REQ'D.) (SEE PAGE 14)
8	A967-00059-0000	SLINGSHOT KICKER ASSY. (2 REQ'D.) (SEE PAGE 16)
9	A360-00235-0000	KNOCKER ASSY. 2-LUG (SEE PAGE 7)
10	AH03-00005-0000	PLAYFIELD CABLE ASSY.
11	A365-R0300-F002	TARGET W/SWITCH & BRKT.: (BLUE) LUG-RT.
	A365-R0300-0002	TARGET W/SWITCH ASSY.: (BLUE)
	A967-00076-0100	SWITCH ASSY.: TARGET
12	A365-R0300-F003	TARGET W/SWITCH & BRKT.: (YELLOW) LUG-RT. (2 REQ'D.)
	A365-R0300-0003	TARGET W/SWITCH ASSY.: (YELLOW)
	A967-00076-0100	SWITCH ASSY.: TARGET
13	A365-R0300-F005	TARGET W/SWITCH & BRKT.: (WHITE) LUG-RT.
	A365-R0300-0005	TARGET W/SWITCH ASSY.: (WHITE)
	A967-00076-0100	SWITCH ASSY.: TARGET
14	A365-R0300-F007	TARGET W/SWITCH & BRKT.: (ORANGE) LUG-RT.
	A365-R0300-0007	TARGET W/SWITCH ASSY.: (ORANGE)
	A967-00076-0100	SWITCH ASSY.: TARGET
15	A331-00042-0000	BRKT. W/WIRE FORM ASSY. ROLLOVER LT. (7 REQ'D.)
	0360-00135-0000	BRKT.: ROLLOVER-WIRE, LT.

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST, CONT'D.
PART NO. AH03-00004-0000

ORDER BY PART NUMBER **ONLY**

ITEM	PART NO.	DESCRIPTION
	0360-00929-0200	WIRE-FORM: ROLLOVER, LT.
16	A360-00216-0000	BRKT. W/WIRE FORM ASSY. ROLLOVER, RT. (2 REQ'D.)
	0360-00134-0000	BRKT.: ROLLOVER-WIRE, RT.
	0360-00930-0000	WIRE-FORM: ROLLOVER, RT.
17	A360-00217-0000	BRKT. W/WIRE FORM ASSY. ROLLOVER, LT.
	0360-00135-0000	BRKT.: ROLLOVER-WIRE, LT.
	0360-00931-0000	WIRE-FORM: ROLLOVER, LT.
18	A360-00230-0000	SWITCH W/BRKT. & PLATE ASSY.: SLINGSHOT (2 REQ'D.)
	A360-00069-0000	SWITCH ASSY.
19	A360-00239-0000	SWITCH W/BRKT. & DIODE ASSY.: SLINGSHOT (4 REQ'D.)
	A360-00069-0000	SWITCH ASSY.
20	A360-00603-0002	SWITCH W/DIODE & CAP ASSY. (2 REQ'D.)
	A360-00244-0000	SWITCH W/DIODE ASSY.: ROLLOVER BUTTON
	A360-00059-0000	SWITCH ASSY.: ROLLOVER BUTTON
21	A365-00034-0000	SWITCH W/DIODE & PLATE ASSY.
	A360-00055-0000	SWITCH ASSY.
22	A365-00035-0000	SWITCH W/DIODE & PLATE ASSY. (7 REQ'D.)
	A360-00243-0000	SWITCH & DIODE ASSY.
	A360-00061-0000	SWITCH ASSY.
23	A365-00035-0100	SWITCH W/DIODE, PLATE & CAP ASSY. (4 REQ'D.)
	A360-00243-0000	SWITCH & DIODE ASSY.
	A360-00061-0000	SWITCH ASSY.
24	A365-00036-0000	SWITCH W/DIODE & PLATE ASSY. (2 REQ'D.)

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST, CONT'D.
PART NO. AH03-00004-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	A967-00068-0000	SWITCH & DIODE ASSY.
	A967-00075-0000	SWITCH ASSY.
25	0B42-00100-00XF	BALL CONTROL PLATE
26	0B42-00102-00XF	BRKT.: BOTTOM ARCH (2 REQ'D.)
27	0720-00001-0100	FUSE-CLIP ASSY. 1-POSITION
28	0017-00003-0103	FUSE: MDL 3AG 1A 250V SLOW-BLOW
29	0365-00170-02XF	PLATE: HINGE-PLAYFIELD, LEFT (2 REQ'D.)
30	0365-00170-01XF	PLATE: HINGE-PLAYFIELD, RIGHT (2 REQ'D.)
31		SEE COMMON SOCKET ASSY. (SEE PAGE 34)

