

GAME NO. 0E34

Form No. 0E34-00300-0200

LADY Luck

Parts Manual



Bally/MIDWAY MFG. CO.

10601 W. Belmont Ave. Franklin Park, Illinois 60131

Telephone (312) 451-9200



WARNING

**THIS GAME MUST BE GROUNDED. FAILURE TO DO SO MAY
RESULT IN DESTRUCTION TO ELECTRONIC COMPONENTS.**

WARNING: This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a CLASS A computing device pursuant to SUBPART J of PART 15 of FCC RULES, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

ELECTRICAL BULLETIN: FOR ALL APPARATUS COVERED BY THE CANADIAN STANDARDS ASSOCIATION (CSA) STANDARD C22.2 NO. 1, WHICH EMPLOYS A SUPPLY CORD TERMINATED WITH A POLARIZED 2-PRONG ATTACHMENT PLUG.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION: POUR PREVENIR CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR. UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

***Bally*/MIDWAY**
T.M.

Invites You To Use

**OUR TOLL FREE NUMBER FOR
SERVICE INFORMATION CONCERNING THIS GAME, OR ANY
OTHER BALLY/MIDWAY™ GAME YOU NOW HAVE ON LOCATION.**

**CALL US FOR PROMPT, COURTEOUS
ANSWERS TO YOUR PROBLEMS.**

Video or Pinball - Continental U.S. 800-323-7182

***Bally*/MIDWAY**
T.M.

10601 West Belmont Avenue Franklin Park, Illinois, 60131 phone (312) 451-9200

©COPYRIGHT MCMLXXXVI BY BALLY MIDWAY MFG. CO. ALL RIGHTS RESERVED.

NO PART OF THIS PUBLICATION MAY BE REPRODUCED BY ANY MECHANICAL, PHOTOGRAPHIC, OR ELECTRONIC PROCESS, OR IN THE FORM OF A PHONOGRAPHIC RECORDING, NOR MAY IT BE TRANSMITTED, OR OTHERWISE COPIED FOR PUBLIC OR PRIVATE USE, WITHOUT PERMISSION FROM THE PUBLISHER. THIS MANUAL IS FOR SERVICE USE ONLY, AND NOT FOR GENERAL DISTRIBUTION. FOR PERMISSION REQUESTS, WRITE: BALLY MIDWAY MFG. CO., 10601 W. BELMONT AVE., FRANKLIN PARK, IL 60131.

Printed in U.S.A.


LADY LUCK

TABLE OF CONTENTS

ILLUSTRATED PARTS BREAKDOWN

DESCRIPTION	PAGE
Lady Luck External Parts Picture	2
Lady Luck External Parts Breakdown	3
Lady Luck Internal Parts Picture	4
Lady Luck Internal Parts Breakdown	5-6
Knocker Assy. Illustration & Parts Breakdown	7
Ball Shooter Rod & Spring Assy. Illustration	8
Ball Shooter Rod & Spring Assy. Parts Breakdown	9
Back Cabinet Assy. Picture	10
Back Cabinet Assy. Parts Breakdown	11
Top Mounted Kicker Assy. Illustration	12
Top Mounted Kicker Assy. Parts Breakdown	13
Thumper Bumper Assy. Illustration	14
Thumper Bumper Assy. Parts Breakdown	15
Slingshot Kicker Assy. Illustration	16
Slingshot Kicker Assy. Parts Breakdown	17
Coin Door Assy. Illustration	18
Coin Door Assy. Parts Breakdown	19-21
Flipper Assy.-Single Switch Right Illustration	22
Flipper Assy.-Single Switch Right Parts Breakdown	23
Flipper Assy.-Single Switch Left Illustration	24
Flipper Assy.-Single Switch Left Parts Breakdown	25
Flipper Assy.-Double Switch Right Parts Breakdown	26
Bottom Playfield Assy. Picture	27
Bottom Playfield Assy. Parts Breakdown	28-29
Top Playfield Assy. Picture W/Plastics	30
Top Playfield Assy. Parts Breakdown w/Plastics	31
Top Playfield Assy. Picture W/Plastics	32
Top Playfield Assy. Parts Breakdown w/o Plastics	33-34
Drop Target Assy. Illustration	35
Drop Target Assy. Parts Breakdown	36-37
Free Gate Relay Assy. Illustration	38
Free Gate Relay Assy. Parts Breakdown	39
Lamp Socket Illustration & Parts Breakdown	40
Spare Parts Kit	41

LADY LUCK EXTERNAL PARTS

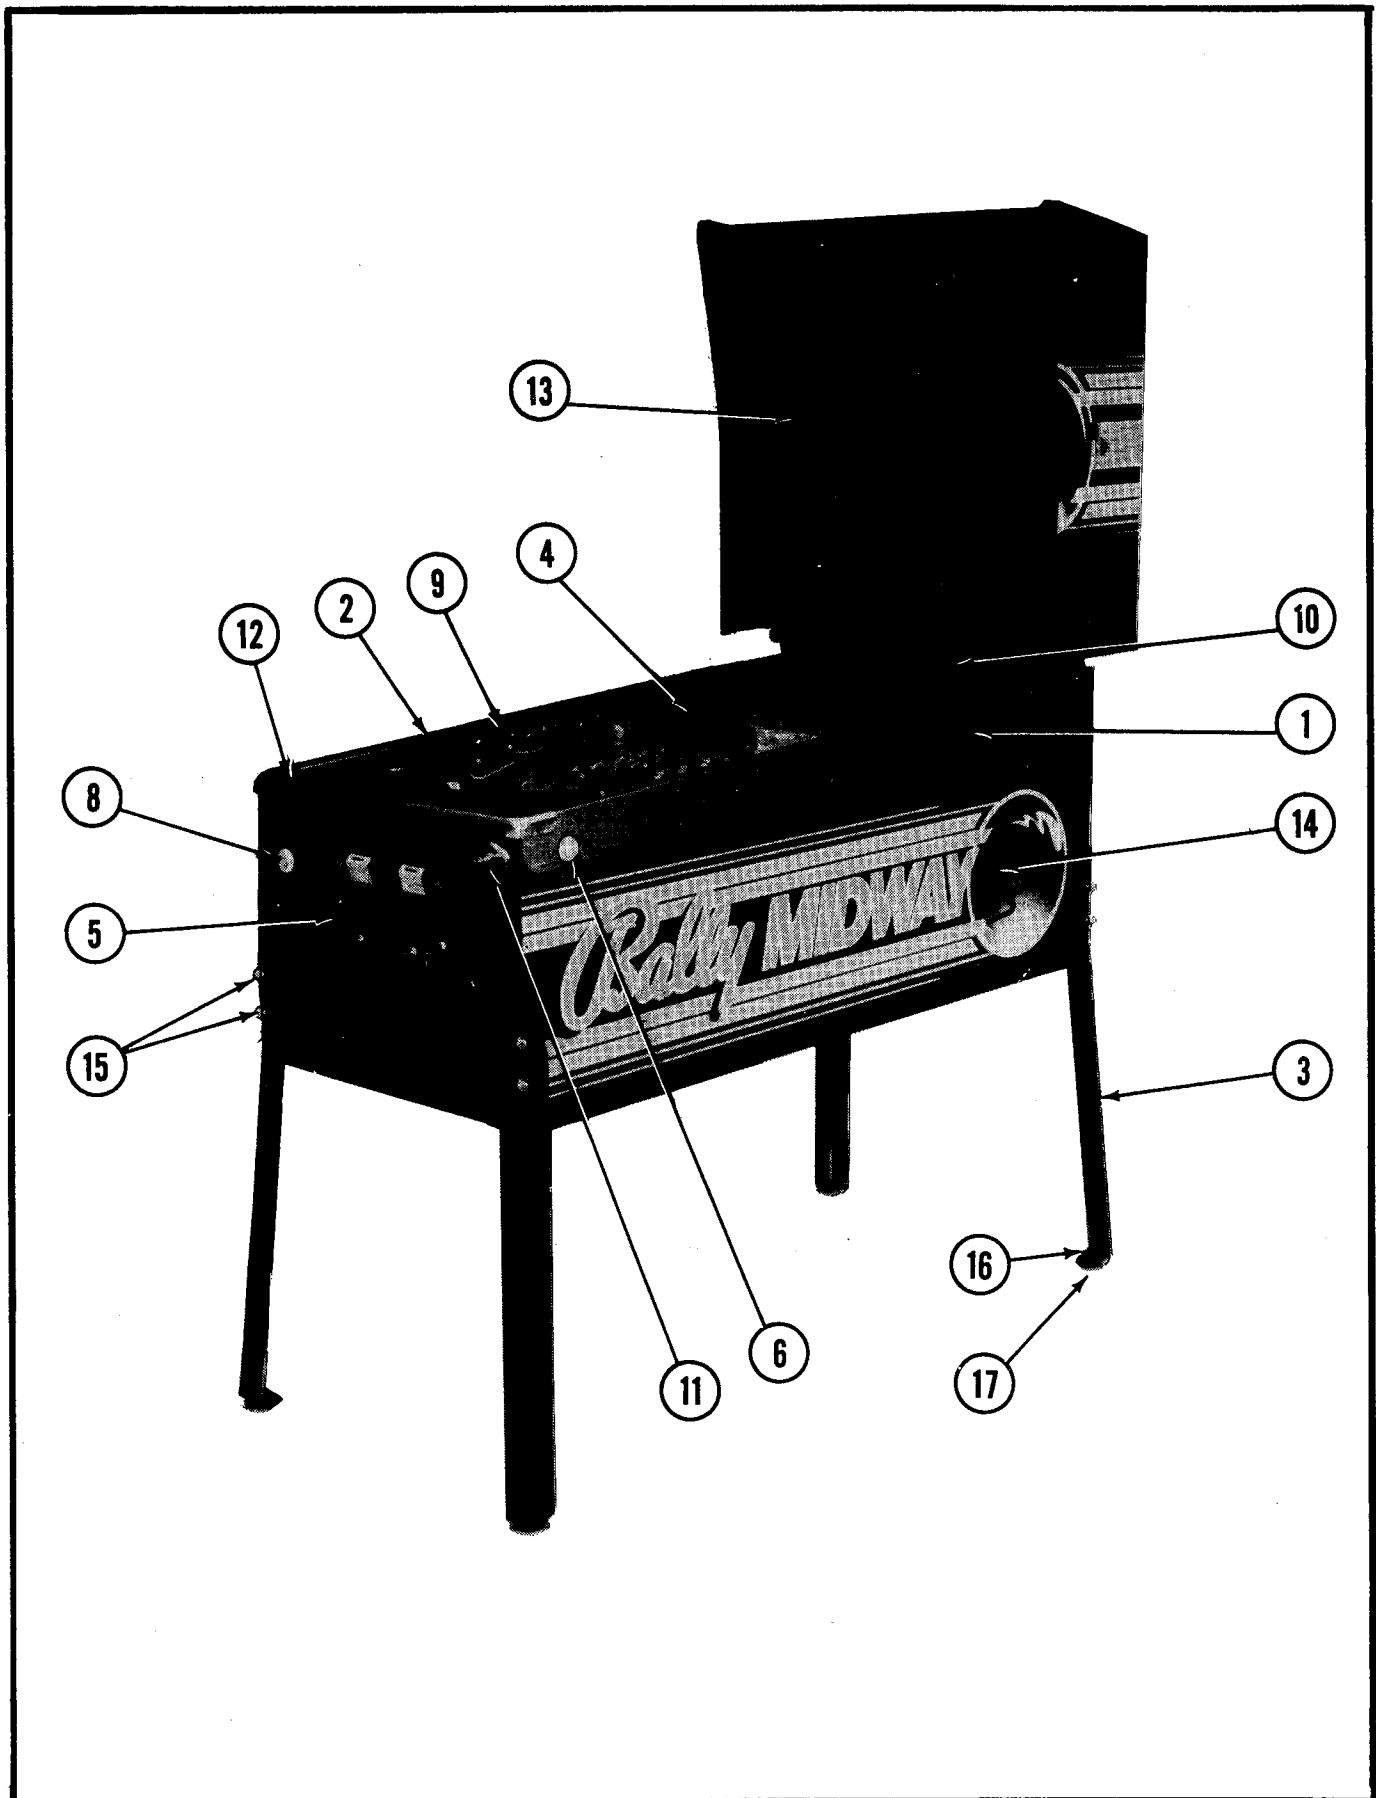


LADY LUCK EXTERNAL PARTS - PARTS LIST

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	0360-00178-0100	SIDE MOLDING RIGHT
2	0360-00178-0200	SIDE MOLDING LEFT
3	0360-00937-00XF	LEG PAINTED (4 REQ'D.)
4	0360-00921-0000	GLASS: PLAYFIELD, CLEAR
5	0090-00002-04BK	DOOR FRAME: LARGE, BLACK DOUBLE
6	0017-00042-0260	BUTTON: PUSH ROUND, WHITE
7	A982-00014-0013	COIN DOOR W/CABLE U.S.A. BLK-PIN (SEE COMMON ASSY.)
8	0017-00042-0684	START BUTTON: PUSH ROUND, RED/WHITE
9	0017-00042-0630	PLYFLD GLASS CHANNEL L=49 3/16 (2 REQ'D.)
10	0365-00924-0000	EXTRUSION: PLAYFIELD GLASS
11	A360-00280-0000	SHOOTER ROD ASSY. (SEE COMMON ASSY.)
12	A365-00079-0000	FRONT MOLDING ASSY.
13	0E34-00900-00XF	BACK GLASS LADY LUCK
14	AE34-00500-0000	CABINET ASSY. LADY LUCK
15	0017-00102-0063	3/8-16 X 3/8" UNSLOTTED HEX HEAD BOLT (8 REQ'D.)
16	0017-00103-0026	HEX NUT 3/8-16 (4 REQ'D.)
17	0017-00102-0082	LEG ADJUSTER (4 REQ'D.)

LADY LUCK INTERNAL PARTS

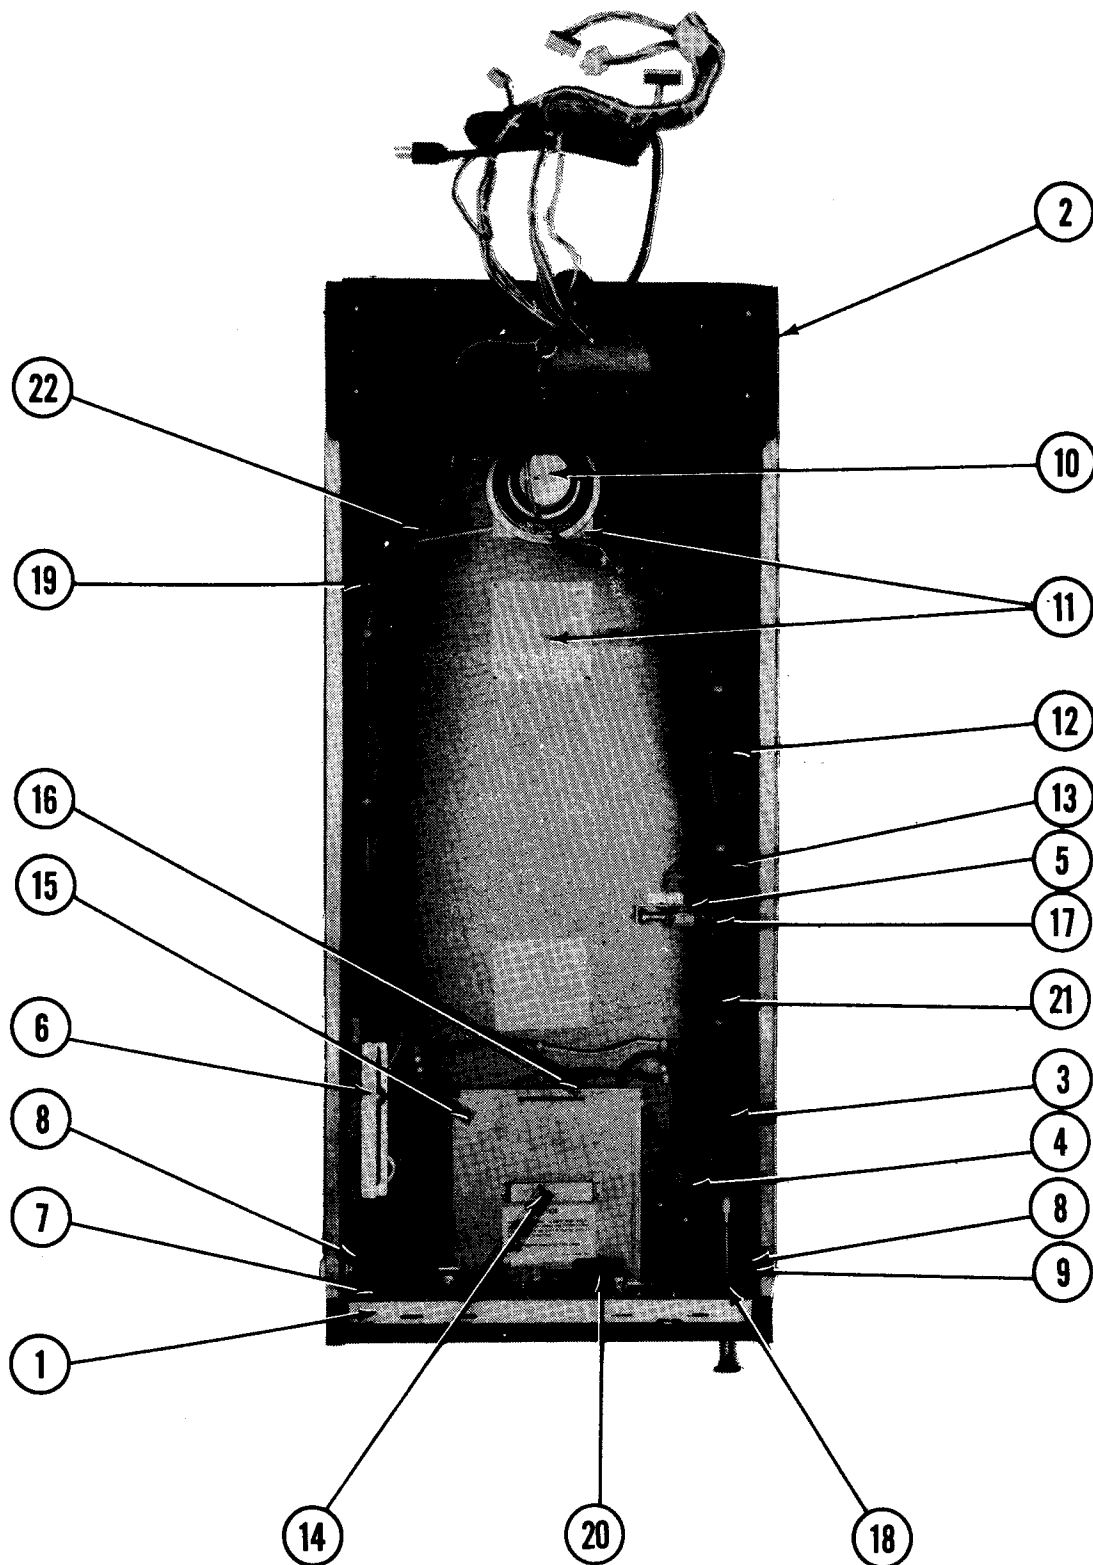

LADY LUCK INTERNAL PARTS - PARTS LIST

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A365-00062-0000	FRONT RAIL ASSY.
2	AE34-00500-0000	CABINET ASSY.: LADY LUCK
	0360-00953-00XF	TEENUT DOUBLE (4 REQ'D.)
3	A365-00074-0000	KEYPAD ASSY.
4	A945-00062-0000	ON/OFF SWITCH & PLATE ASSY.
	0017-00032-0105	SWITCH 2 PST 6 AMP .187 FAST
5	A360-00235-0000	KNOCKER ASSY. (SEE COMMON ASSY.)
6	A360-00264-0000	TILT BOARD ASSY.
	A360-00054-0000	SWITCH ASSY.
	0360-00199-00XF	BRKT: BALL TILT
	0360-00168-0000	BRKT: TILT HANGER
	0360-00170-0000	TILT HANGER
	0360-00312-0000	BRKT: OUTLET
	0360-00502-0000	TILT BOARD (WOOD)
	0360-00922-00XF	WIRE: PLUMB BOB
7	A365-00060-0100	PUSH BUTTON ASSY.: START SWITCH
8	A360-00071-0000	SWITCH ASSY. (2 REQ'D.)
9	A370-00078-0000	SWITCH ASSY.
10	0017-00003-0476	SPEAKER 4 OHM 10 WATT 6-1/2" DIA.
11	0017-00009-0490	GRILL: VENT
12	0365-00116-00XF	BRACKET
13	0365-00115-00XF	STAY ARM: PLAYFIELD
14	A365-00064-0000	COIN BOX COVER & HANDLE ASSY.
15	0365-00123-0000	COIN BOX
16	0365-00124-0000	BRKT: LOCATING COIN BOX (UNDER COIN BOX)

LADY LUCK INTERNAL PARTS - PARTS LIST (CONT'D.)


ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
17	0360-00116-00XF	PLATE: STOP KNOCKER
18	0967-00115-00XF	PLATE: BALL SHOOTER
19	A365-00043-0000	LINE CORD & FILTER ASSY.
	0017-00003-0114	FILTER: LINE 5A 115V
	0017-00003-0475	OUTLET CONVENIENCE
	0017-00003-0500	LINE CORD 3-CONDUCTOR 18AWG
20	0017-00007-0019	KEY HOOK: PIN DOOR
21	AE34-00025-0000	CABINET CABLE ASSY.
22	AB38-00032-0000	HIGH VOLTAGE CABLE ASSY.


KNOCKER ASSEMBLY - PARTS LIST
PART NO. A360-00235-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	0017-00041-0635	BUMPER: PLUG RUBBER BLACK
2	A360-00011-00XF	PLUNGER & STRIKER ASSY.
3	0360-00318-00XF	BRKT & COIL
4	A360-00046-0000	COIL & TUBING ASSY.
5	0010-00274-0175	SPRING: COMPRESSION
6	0360-00909-00XF	FRAME: COIL

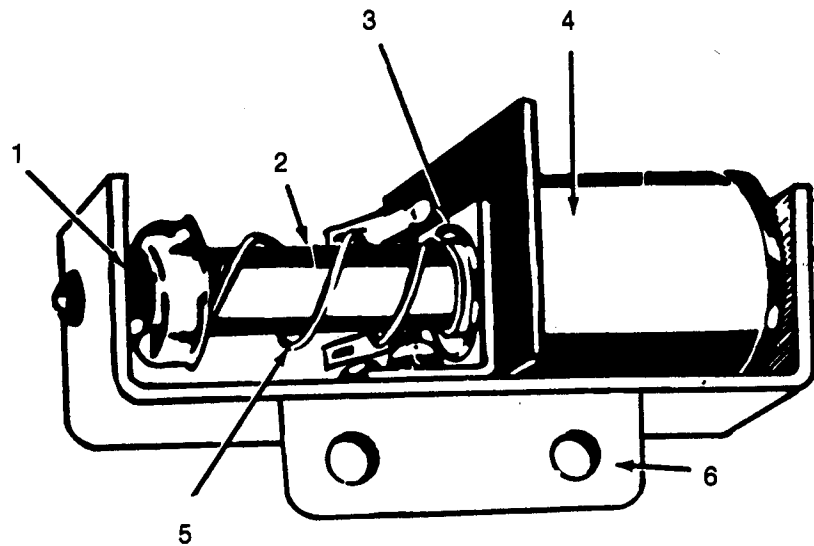

BALL SHOOTER ROD & SPRING ASSEMBLY
PART NO. A360-00280-0000

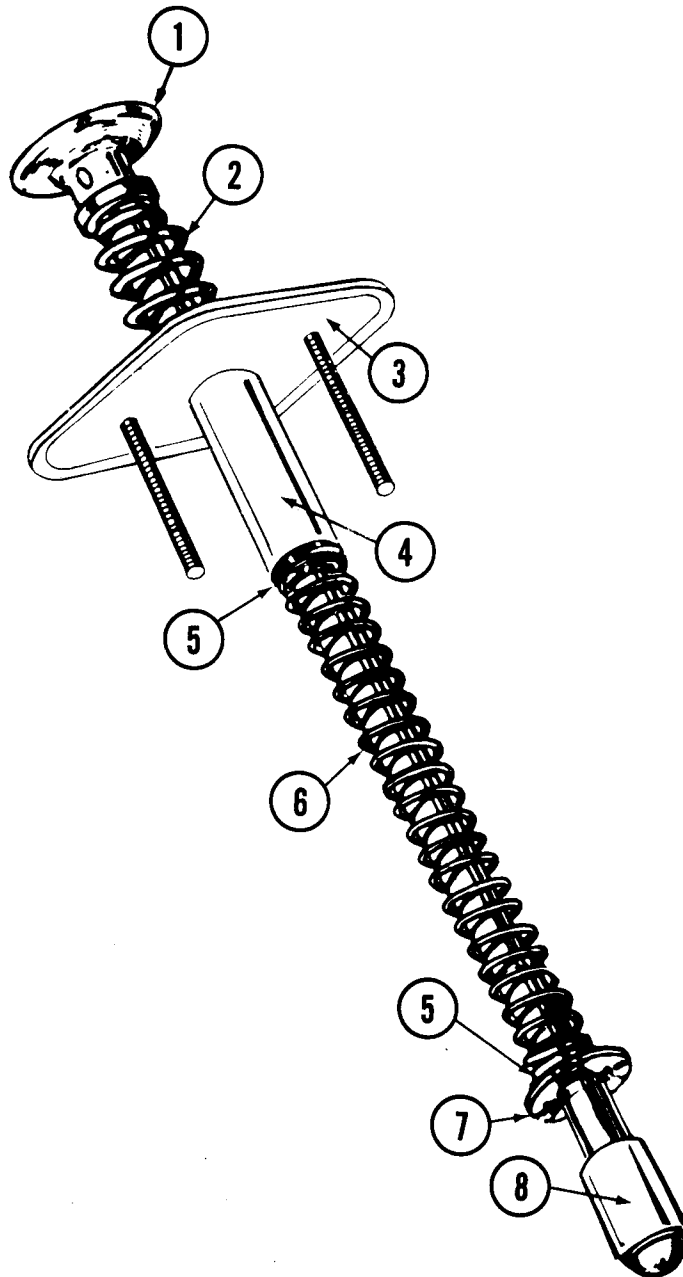


BALL SHOOTER ROD & SPRING ASSEMBLY - PARTS LIST
PART NO. A360-00280-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	0017-00009-0610	BALL - SHOOTER ROD ASSY. - MOLDED
2	0010-00271-0000	SPRING: COMPRESSION
3	A360-00040-00XF	SHOOTER GUIDE COVER WELD ASSY.
4	0017-00042-0347	GUIDE: BALL SHOOTER
5	0017-00104-0076	FLAT WASHER: .395 I.D., .500" O.D. & .032" TH. (3 REQ'D.)
6	0010-00274-0024	SPRING: COMPRESSION
7	0017-00100-0037	E-RING .375 DIA.
8	0017-00041-0631	SHOOTER-TIP: ROUND, RUBBER

BACK CABINET ASSEMBLY
PART NO. AE34-00008-0000

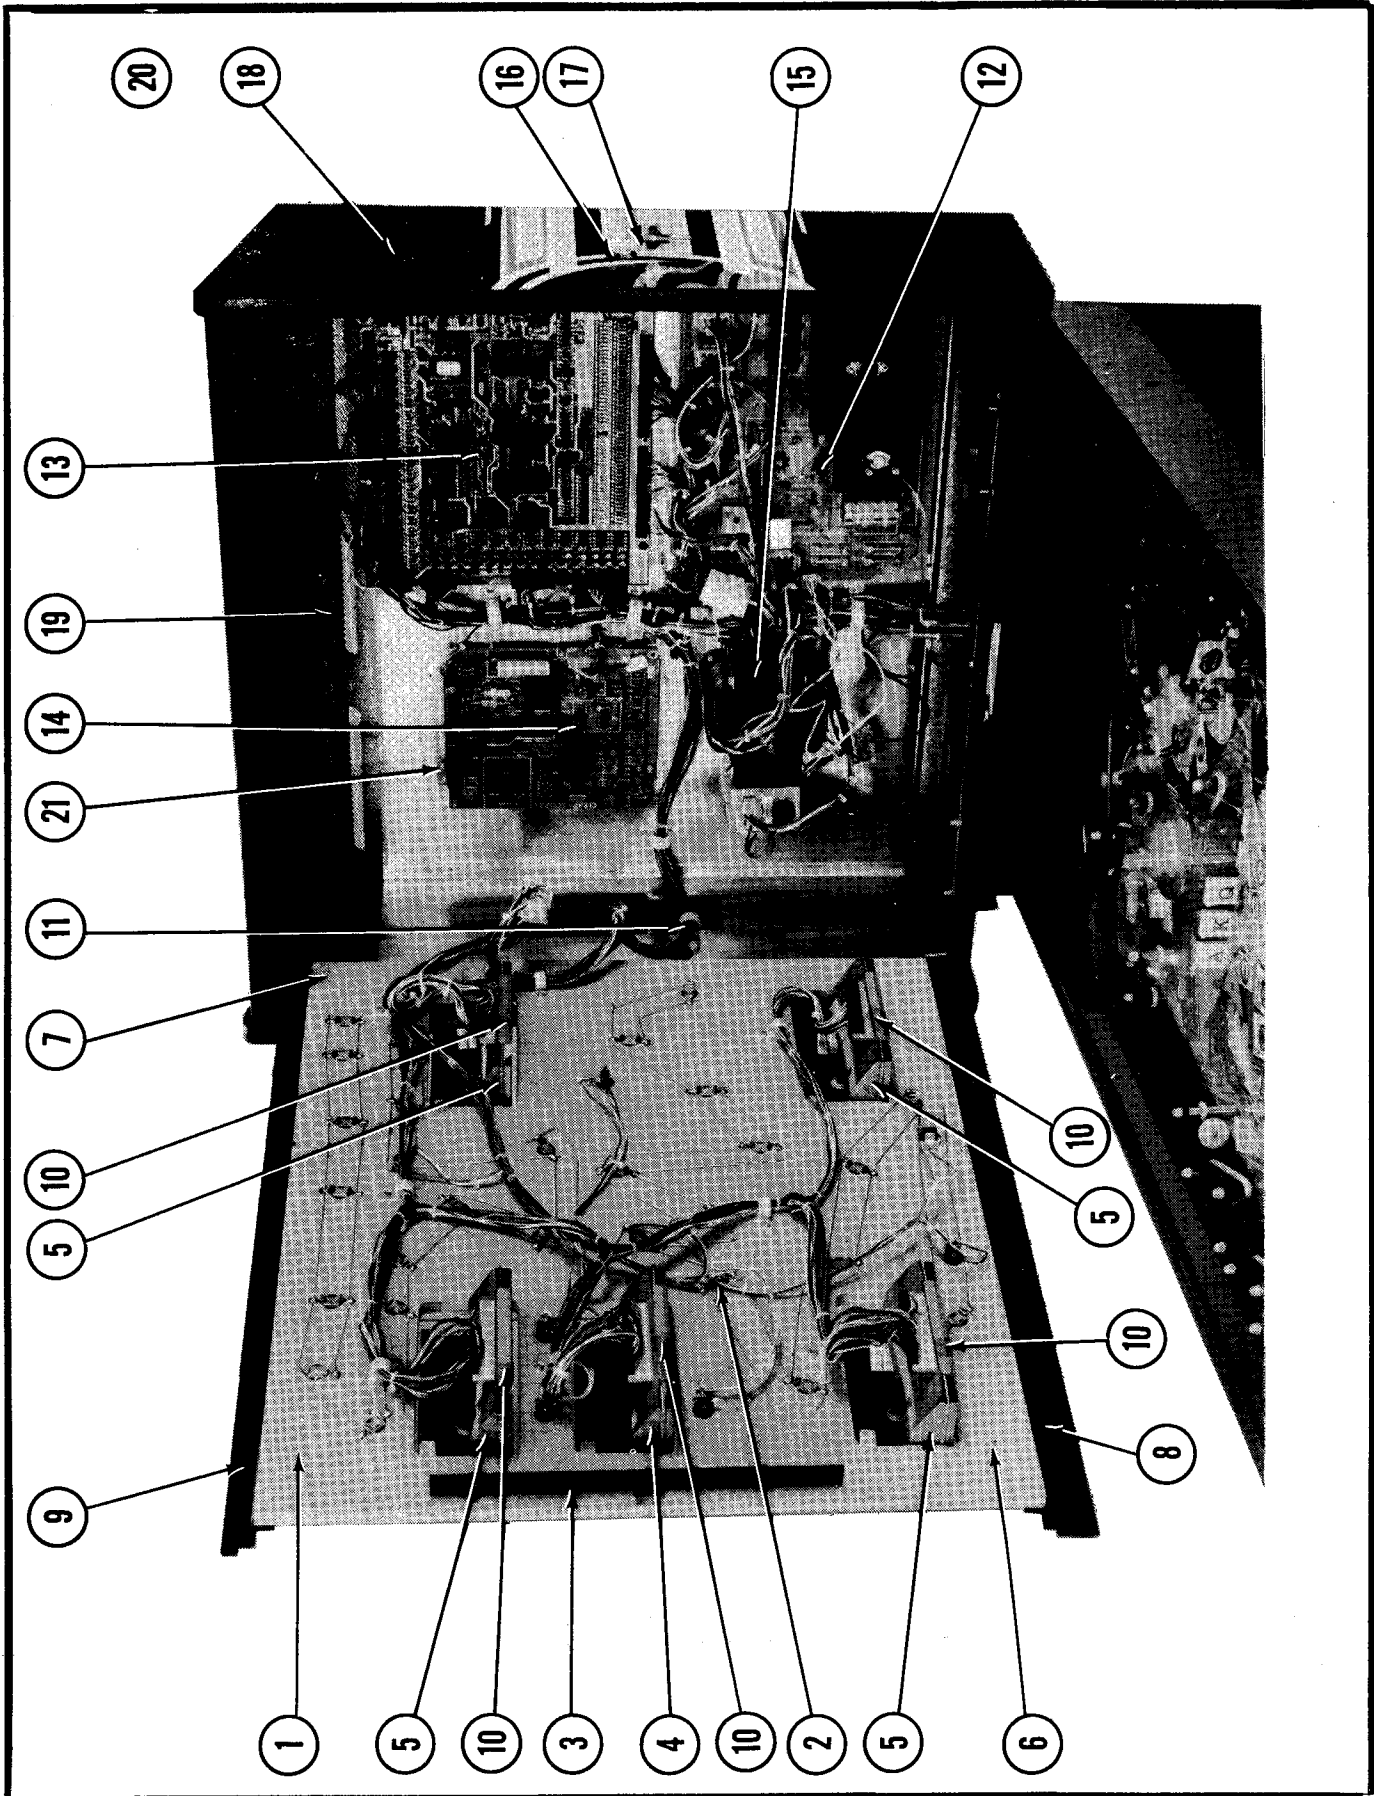


**BACK CABINET ASSY.
PART NO. AE34-00008-0000**

ORDER BY PART NUMBER ONLY.

ITEM	PART NO.	DESCRIPTION
1	AE34-00006-0000	INSERT ASSY.
2	AE34-00007-0000	INSERT CABLE ASSY.
3	A365-00058-00XF	LOCKING BRKT. ASSY.
4	B084-91491-A000	6 DIGIT DISPLAY ASSY.
5	B084-91617-A000	7 DIGIT DISPLAY ASSY.
6	0E34-00502-0000	INSERT (WOOD ONLY)
	0360-00935-0000	SHADOW BOX (NOT SHOWN) (8 REQ'D.)
7	0365-00118-00XF	HINGE: LIGHT PANEL
8	0365-00933-0000	EXTRUSION: GLASS BTM 26 11/32
9	0365-00934-0000	EXTRUSION: GLASS TOP 26 11/32
10	0967-00137-0000	TRAY: DISPLAY BOARDS (5 REQ'D.)
11	AE34-00009-0000	BACK CABINET CABLE ASSY.
12	B084-91785-C000	6803 POWER MOD ASSY.
13	B084-91786-AE34	PROG 6803 CONTROL BOARD ASSY.
14	B084-91603-AE34	PROG CHEAP SQUEAK ASSY.
15	MT00-00141-A000	XFRMR: ISOLATION
16	0017-00005-0050	KEYS: 750 SERIES DOOR LOCK W/2 INDIVIDUAL
17	0017-00005-0209	PLATE LOCK
18	0365-00521-0200	BACK BOX: LADY LUCK
19	0365-00104-00XF	VENT: GRILL
20	0360-00190-02XF	BRKT: MTG 10" P.C. BOARD (4 REQ'D.)
21	0360-00190-03XF	BRKT: MTG 6" P.C. BOARD (2 REQ'D.)

TOP MOUNTED KICKER (BALL RETURN) ASSEMBLY
PART NO. A360-00234-0000

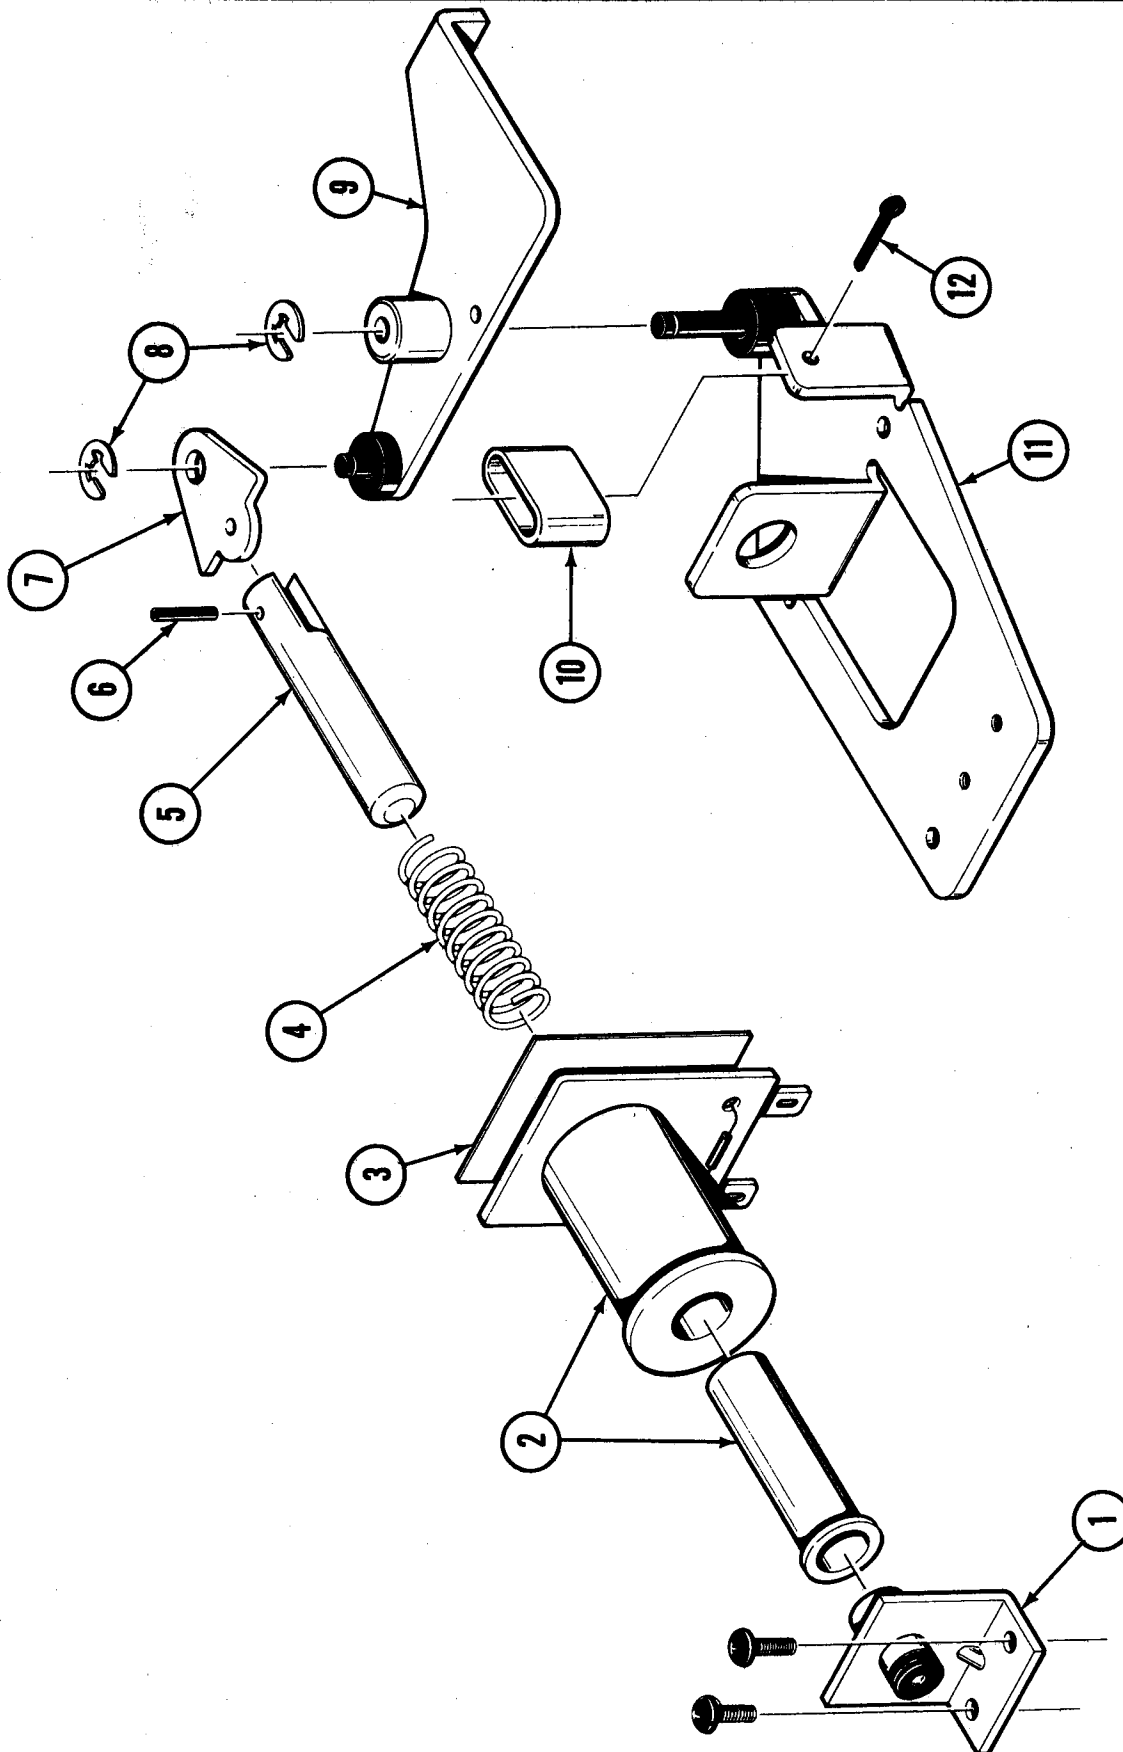


TOP MOUNTED KICKER (BALL RETURN) ASSEMBLY - PARTS LIST
PART NO. A360-00234-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A360-00013-0000	CORE PLUG ASSY.
2	A360-00044-0000	COIL & TUBING ASSY.
	103E-00002-0015	IN4004GP 400V 1A DIODE
3	0360-00901-0000	FISHPAPER INSULATOR
4	0010-00274-0189	COMPRESSION SPRING
	A360-00278-0000	PLUNGER & LINK ASSY. (ITEMS 5, 6, & 7)
5	0360-00735-00XF	PLUNGER
6	0017-00007-0073	ROLL PIN
7	0360-00941-0000	KICKER LINK
8	0017-00100-0116	RING RER .218" DIA, (2 REQ'D)
9	A360-00036-0000	KICKER ARM ASSY. (BALL RETURN)
10	0017-00042-0346	STRIKER RING
11	A360-00037-0000	BASE PLATE ASSY.
12	0017-00007-0124	COTTER PIN

THUMPER BUMPER ASSEMBLY
PART NO. A967-00053-0000

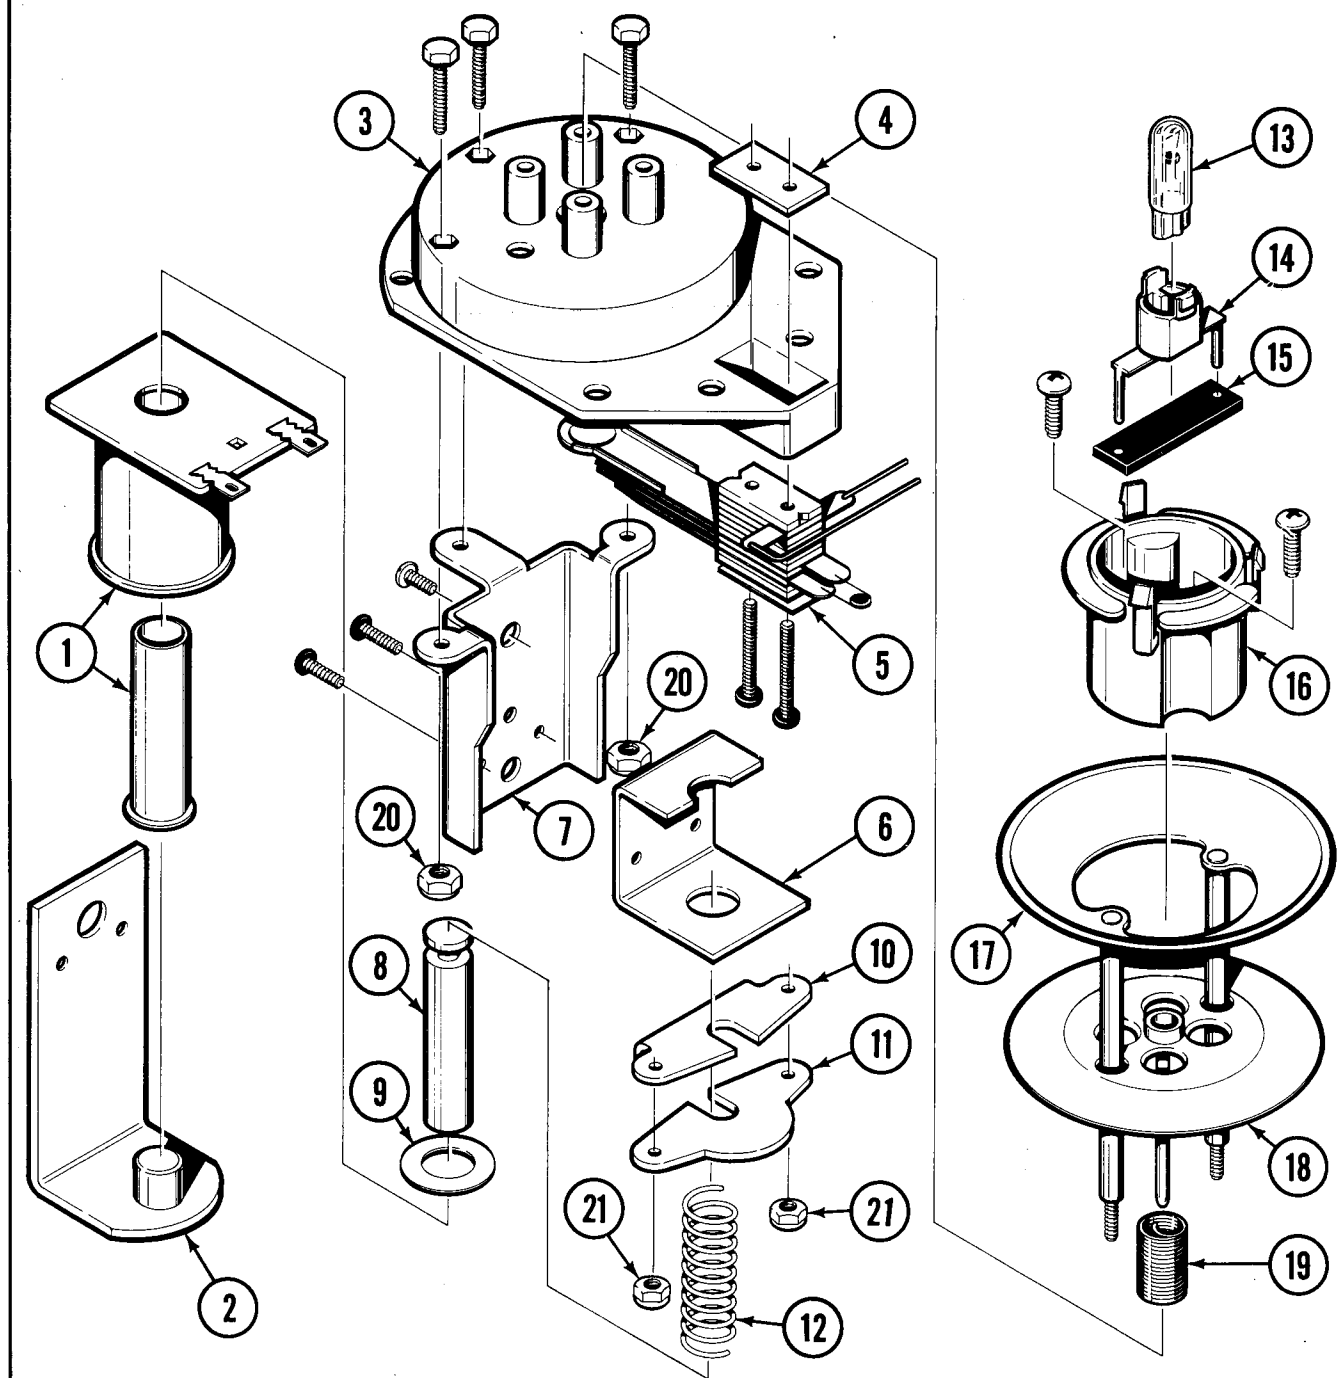


THUMPER BUMPER ASSEMBLY - PARTS LIST
PART NO. A967-00053-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A360-00044-0000	COIL & TUBING ASSY.
	103E-00002-0015	1N4004GP 400V 1A DIODE
2	A967-00010-0000	CORE PLUG ASSY.
3	0017-00042-0452	BASE: THUMPER BUMPER - WHITE
4	0020-00202-0000	SWITCH PLATE
5	A967-00074-0000	MAKE SWITCH ASSY. - THUMPER BUMPER
6	0967-00117-00XF	BRACKET - THUMPER BUMPER PLUNGER
7	0967-00129-00XF	MOUNTING BRACKET: THUMPER BUMPER
8	0967-00705-00XF	PLUNGER
9	0017-00104-0073	SPRING WASHER .515" I.D., .875" O.D. & .013" TH.
10	0967-00116-00XF	PLATE
11	0967-00904-0000	PLATE
12	0010-00274-0196	COMPRESSION SPRING
13	0017-00003-0501	LAMP, #555: WEDGE BASE
14	0017-00031-0060	SOCKET: LAMP (WEDGE BASE)
15	0090-00409-0000	PLATE
16	0017-00042-0460	BODY: THUMPER BUMPER - WHITE
17	A967-00013-0000	FLANGE & STUD ASSY.
18	0017-00042-0444	WAFER: THUMPER BUMPER - WHITE
19	0010-00274-0177	COMPRESSION SPRING
20	0017-00103-0041	NUT: 8-32 LOCKING (3 REQ'D.)
21	0017-00103-0052	NUT: 6-32 LOCKING (2 REQ'D.)

SLINGSHOT KICKER ASSEMBLY
PART NO. A967-00059-0000

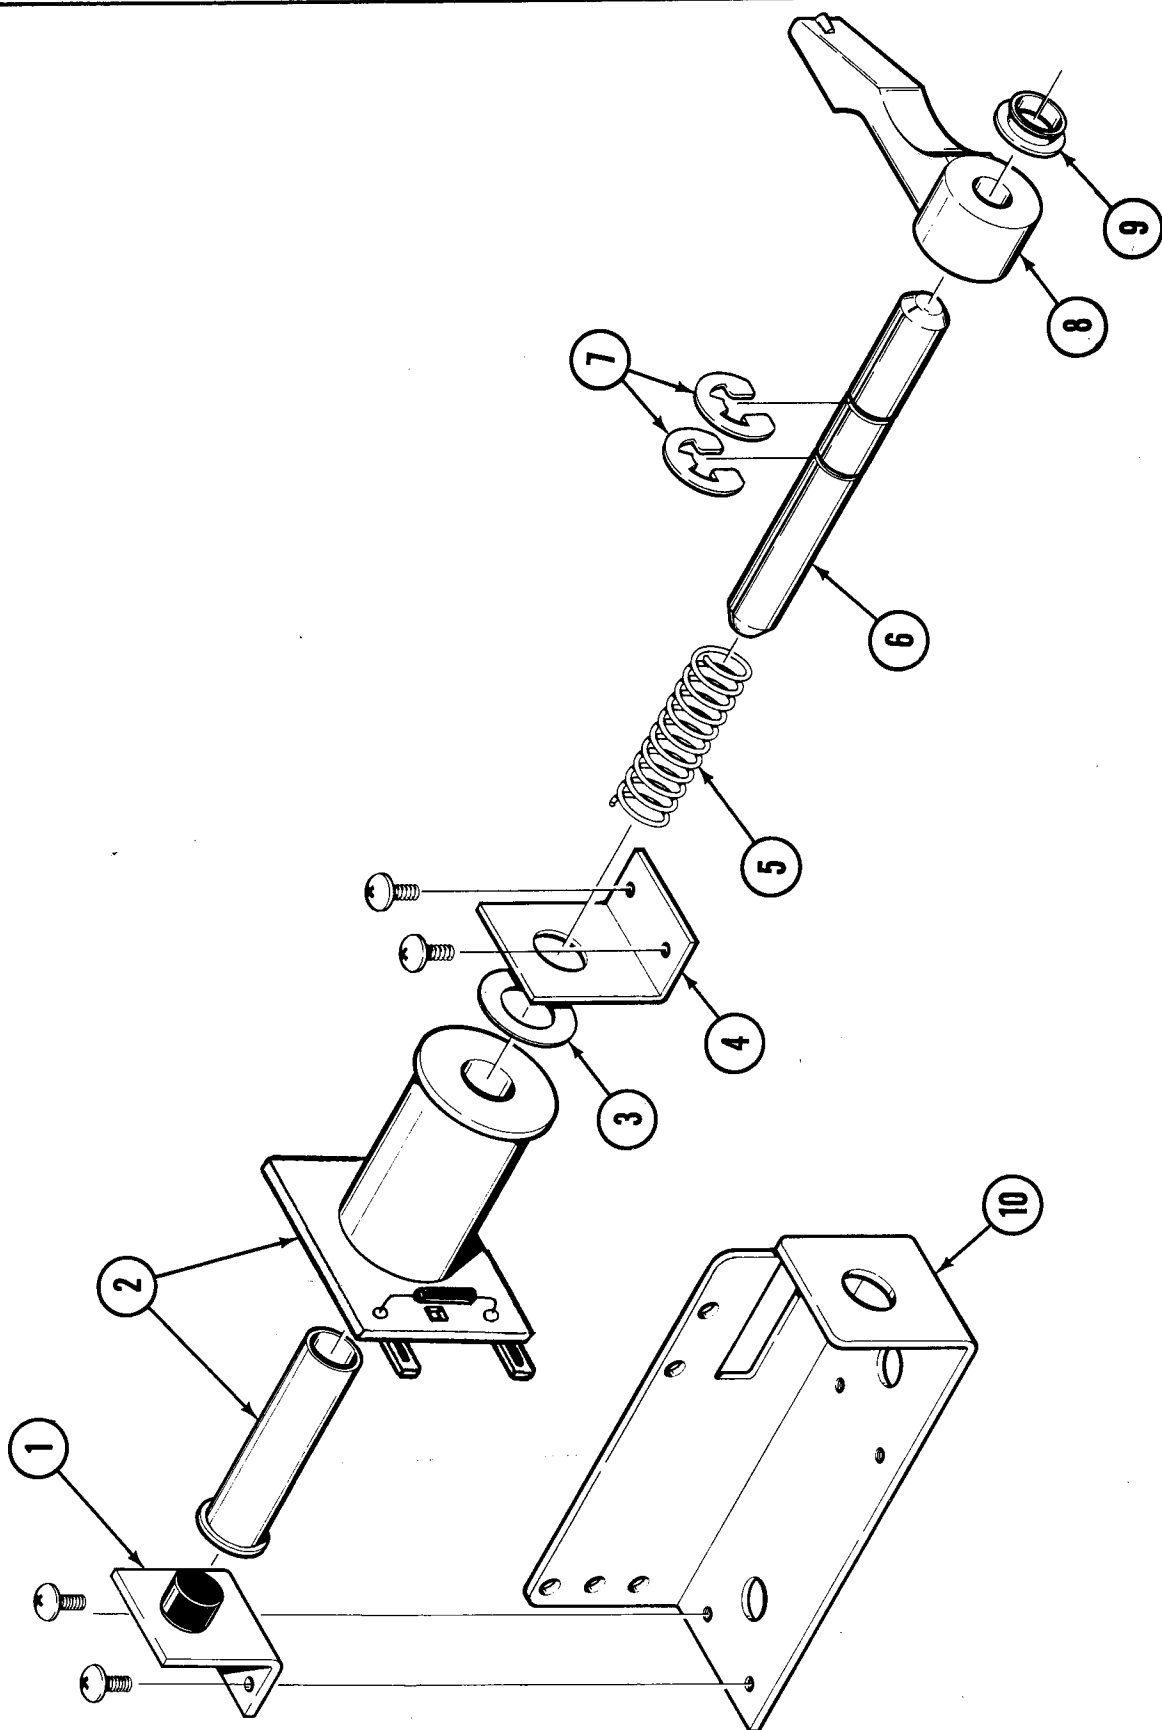

**SLINGSHOT KICKER ASSY.
PART NO. A967-00059-0000**

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A967-00011-0000	CORE PLUG & BRACKET ASSY.
2	A967-00046-0000	COIL & TUBING ASSY.
	103E-00002-0015	IN4004GP 400V 1A DIODE
3	0017-00104-0073	SPRING WASHER .515" I.D., .875" O.D. & .013" TH.
4	0360-00318-00XF	COIL BRACKET
5	0010-00274-0212	COMPRESSION SPRING
6	0967-00701-00XF	PLUNGER
7	0017-00100-0115	RING RER .438" DIA. (2 REQ'D)
8	0967-00901-0000	KICKER-ARM: SLINGSHOT
9	0017-00042-0430	NYLINER: SNAP-IN, COIL
10	0967-00130-00XF	MOUNTING BRACKET: SLINGSHOT

COIN DOOR WITH CABLE ASSEMBLY - PINBALL GAME - U.S.A. 25¢
PART NO. A982-00014-0013



COIN DOOR WITH CABLE ASSEMBLY - PINBALL GAME - U.S.A. 25¢ - PARTS LIST
PART NO. A982-00014-0013

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1*	0090-00002-04BK	DOUBLE ENTRY COIN DOOR FRAME
2*	0017-00101-0121	#6-32 X 5/16 PHIL. TRS. HD. SCR. (3 REQ'D.)
3	A090-00072-06BK	COIN DOOR: 2-HOLE PAINTED
4	0017-00101-0123	#8 X 1/4 UNSLOT. HEX HD. SCREW (9 REQ'D.)
5	0017-00103-0059	PUSH NUT (4 REQ'D.)
6	0090-00912-0000	COIN ENTRY PLATE - (2 REQ'D.)
7A	0017-00005-0200	LOCK - INDIV. KEYED W/2 KEYS
7B	0017-00103-0079	3/4 HEX NUT
7C	0017-00101-0125	#10 - 32 X 1/4 SLOT. PAN HD. SCREW
8	A090-00096-0000	ANTI-SLAM SWITCH & BRKT. ASSY.
8A	0090-00185-00XF	DOOR TILT SWITCH BRKT.
8B	A090-00095-0000	DOOR ANTI-SLAM SWITCH
8C	0090-00126-01XF	SWITCH BACK-UP PLATE
8D	0017-00101-0155	#4-40 X 9/16 PHIL. PAN HD. (2 REQ'D.)
9	0017-00005-0238	DOOR CAM
10	0090-00903-9500	25¢ WINDOW (2 REQ'D.)
11	0090-00143-0000	COIN PLEX RETAINER
12	0017-00003-0501	6.3 VOLT LAMP - WEDGE BASE #555 (2 REQ'D.)
13	0017-00031-0048	WEDGE SOCKET W/BRKT. (2 REQ'D.)
14	A090-00647-0000	BRKT. & SWITCH ASSY.
14A	0090-00179-0000	CABLE & SWITCH MTG. BRKT.
14B	0017-00032-0120	PUSH-BUTTON SWITCH
14C	0360-00171-00XF	BRACKET: VOLUME CONTROL MOUNTING
14D	105E-00003-0001	POT: 0-100 OHMS WIREWOUND
14E	0017-00101-0123	#8 X 1/4 UNSLOT. HEX HD. SCR. (2 REQ'D.)
*		NOT PART OF ABOVE ASSEMBLY & MUST BE ORDERED SEPARATELY

COIN DOOR WITH CABLE ASSEMBLY - U.S.A. 25¢ - BLACK - PIN - PARTS LIST (CON'T.)
PART NO. A982-00014-0013

ORDER BY PART NUMBER ONLY


ITEM	PART NO.	DESCRIPTION
15	0017-00103-0084	#6-32 HEX NUT W/SEMS (4 REQ'D.)
16	0090-00434-00XF	SWITCH GUARD
17	0017-00101-0124	#6 X 1/4 UNSLOT HEX HD. SCR. (4 REQ'D.)
18	0090-00911-0000	INSULATOR (2 REQ'D.)
19	A090-00087-0000	COIN CHUTE & TOP ASSY. (2 REQ'D.)
	A090-00081-00XF	COIN CHUTE & BRKT. ASSY.
	0090-00172-00XF	COIN CHUTE TOP
	0017-00101-0140	#4-40 X 5/16 PHIL. PAN HD. (3 REQ'D.)
	0017-00007-0162	COTTER PIN (4 REQ'D.)
20	0010-00134-0000	SPRING
21	0010-00181-0000	SPRING
22	A090-00115-0000	COIN ACCEPTOR FRAME SUB-ASSY. (2 REQ'D.)
22A	A090-00118-0000	COIN ACCEPTOR & BUSH. ASSY.
22B	A090-00116-0000	REJECT LEVER ASSY. (2 REQ'D.)
22BA	0090-00182-00XF	REJECT LEVER
22BB	0090-00129-00XF	POST: PIVOT REJECTOR
22BC	0090-00167-00XF	PIVOT LEVER
22BD	0017-00100-0012	E-RING .125 DIA.
22C	0017-00007-0083	1/8 X 1-5/8 ROLL PIN
22D	0093-00145-01XF	LATCH - LEFT
22E	0093-00145-00XF	LATCH - RIGHT
	0017-00072-0036	120 X .218 X 7/32 RIVET (2 REQ'D.)
	0090-00910-00XF	REJECT BUTTON

COIN DOOR WITH CABLE ASSEMBLY - U.S.A. 254 - BLACK - PIN - PARTS LIST (CON'T.)
PART NO. A982-00014-0013

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	0090-00183-0000	BUTTON STOP
	0017-00101-0140	#4-40 X 5/16 PHIL. PAN HD.
23	0151-00086-0000	COIN ACCEPTOR W/STRING CUTTER (2 REQ'D.)
24	A090-00064-0100	ANTI-PENNY DEVICE (2 REQ'D.)
25	0017-00101-0099	#6 X 1/4 SLT. HEX HD. M.S. (4 REQ'D.)
26	A090-00077-0000	COIN GUIDE & SWITCH ASSY.
26A	0090-00162-00XF	COIN SWITCH MTG. BRKT.
26B	0017-00005-0203	COIN SWITCH CHUTE
26C	A090-00059-0400	COIN SWITCH & WIRE ASSY.
26CA	0017-00005-0195	COIN SWITCH
26CB	0010-00599-0000	COIN SWITCH WIRE
26CC	0017-00007-0015	PUSH-ON RING
26D	0017-00101-0147	#4-40 X 3/4 PHIL. PAN. HD. (4 REQ'D.)
		ADDITIONAL PARTS LIST
	0090-00184-0000	COIN SWITCH COVER (2 REQ'D.)
	A982-00015-0007	PINBALL COIN DOOR CABLE (STANDARD)

FLIPPER ASSEMBLY - SINGLE SWITCH RIGHT
PART NO. AC70-00022-0100

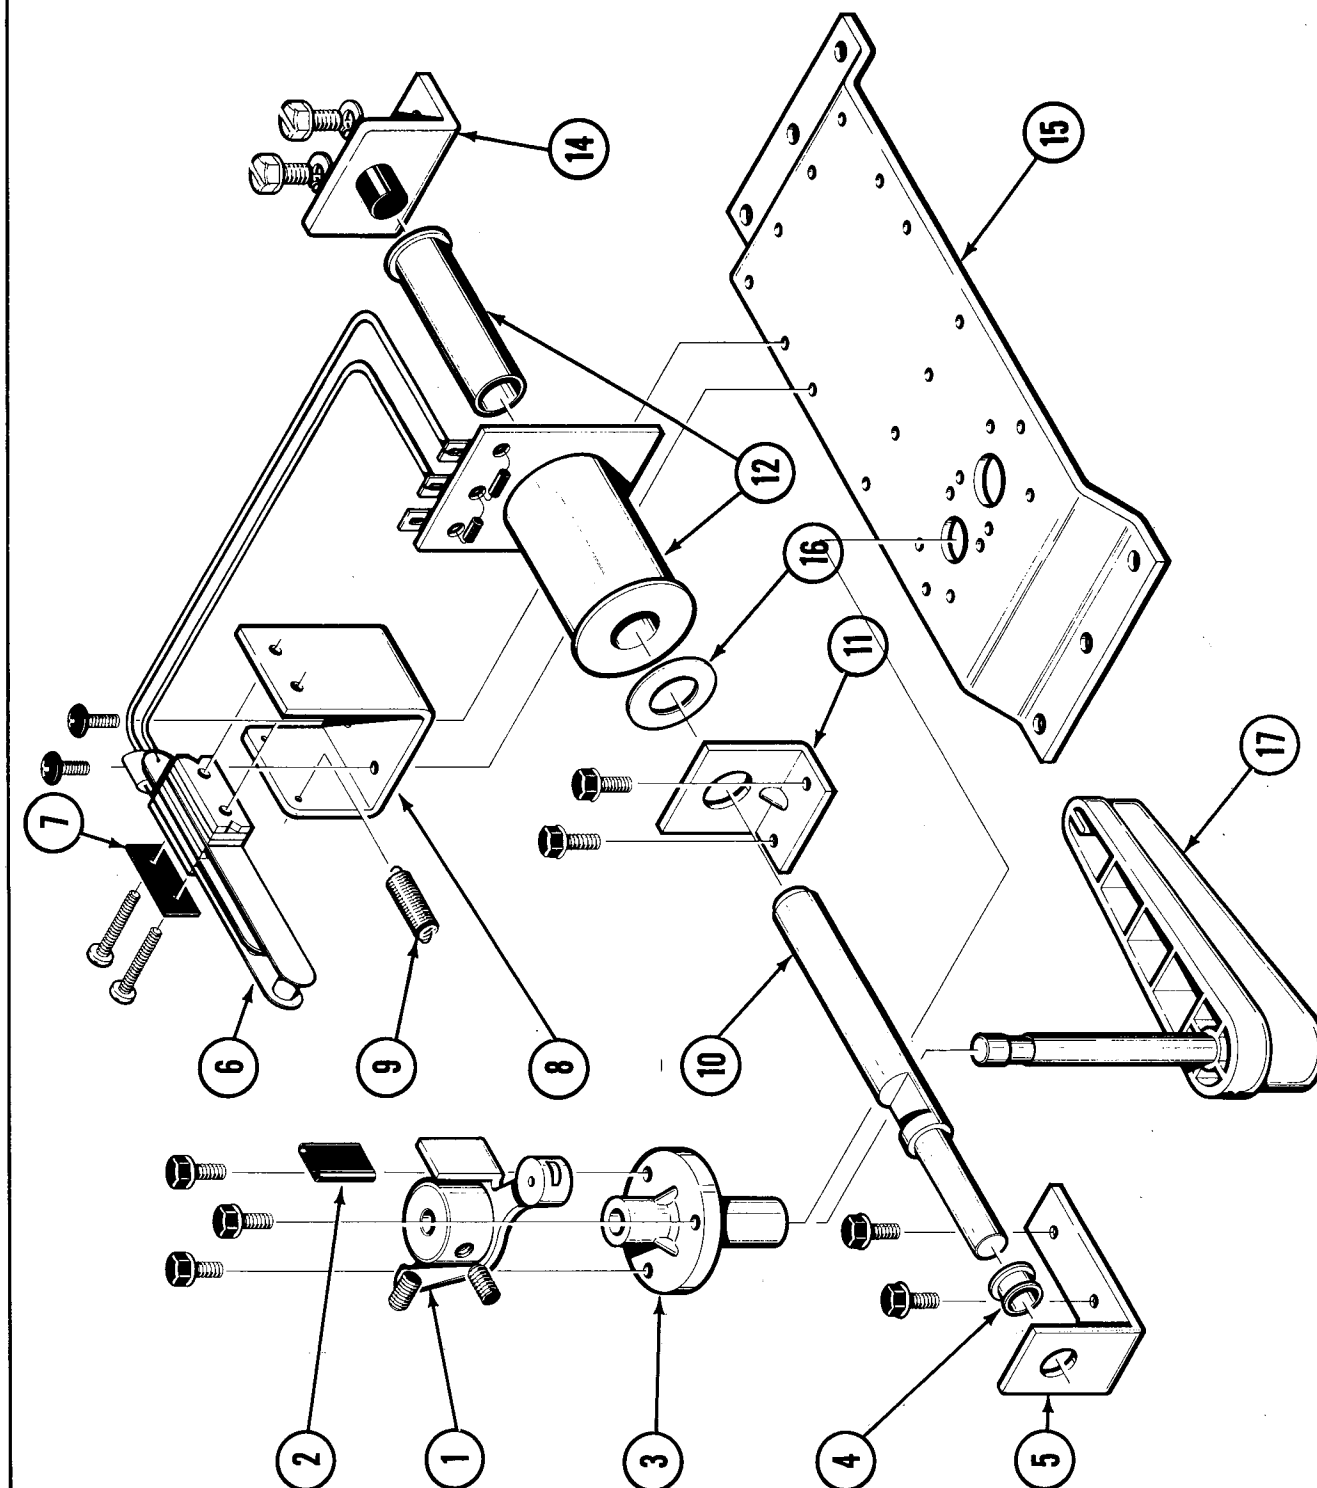


FLIPPER ASSY - SINGLE SWITCH RIGHT - PARTS LIST
PART NO. AC70-00022-0100

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	A360-00039-0000	LEVER ARM ASSY. (RIGHT) (ITEMS 1 & 2)
1	A365-00001-0000	CAP, HUN & LEVER ARM ASSY. (RIGHT)
2	0360-00945-0000	TUBING 5/16 X 1/2
3	0017-00042-0413	FLIPPER BEARING
4	0017-00042-0418	NYLINER: SNAP-IN COIL
5	0360-00152-02XF	BRKT: RIGHT FLIPPER STOP
	A365-00047-0000	SWITCH & BRKT. ASSY. (RIGHT) (ITEMS 6 & 7)
6	A365-00045-0000	FLIPPER BREAK SWITCH ASSY.
7	0020-00202-0000	SWITCH PLATE
8	0360-00145-00XF	SWITCH BRACKET
9	0010-00275-0353	EXTENSION SPRING
10	0360-00718-00XF	PLUNGER
11	0360-00318-00XF	COIL BRACKET
12	AC70-00026-0000	COIL & TUBING ASSY.
14	A365-00024-0000	CORE PLUG & BRACKET ASSY.
15	0365-00101-00XF	FLIPPER MOUNTING BRACKET
16	0017-00104-0073	SPRING WASHER .515" I.D., .875" O.D. & .013" TH.
17 *	A967-00031-0000	MOLDED FLIPPER ASSY. - WHITE
*	0017-00041-0682	BUMPER: FLIPPER 3" RED RUBBER
*		NOT PART OF ABOVE ASSY. & MUST BE ORDERED SEPARATELY

FLIPPER ASSEMBLY - SINGLE SWITCH LEFT
PART NO. AC70-00022-0200

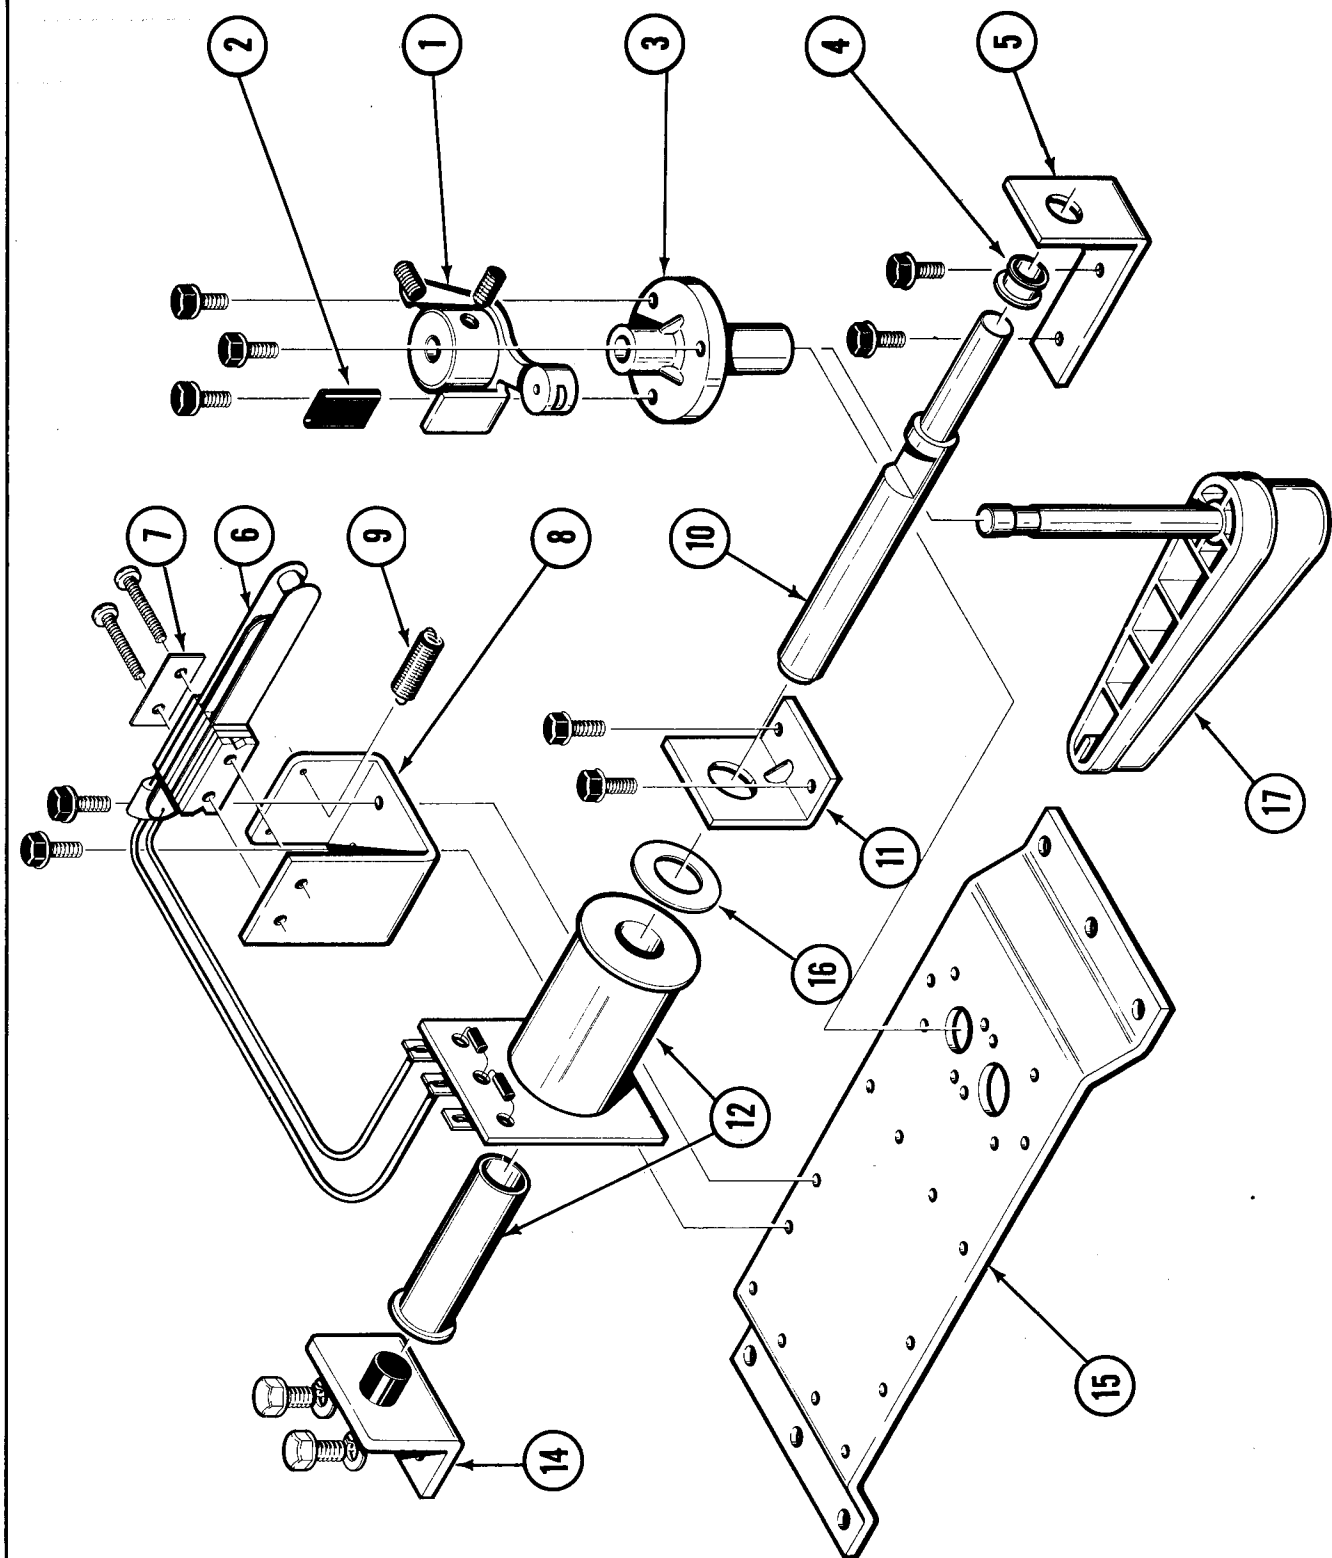

FLIPPER ASSY - SINGLE SWITCH LEFT - PARTS LIST
PART NO. AC70-00022-0200

ORDER BY PART NUMBER ONLY


ITEM	PART NO.	DESCRIPTION
	A360-00038-0000	LEVER ARM ASSY. (LEFT) (ITEMS 1 & 2)
1	A365-00001-0100	CAP, HUB & LEVER ARM ASSY.
2	0360-00945-0000	TUBING 5/16 X 1/2
3	0017-00042-0413	FLIPPER BEARING
4	0017-00042-0418	NYLINER: SNAP-IN COIL
5	0360-00152-01XF	BRKT: LEFT FLIPPER STOP
	A365-00048-0000	SWITCH & BRKT. ASSY. (LEFT) (ITEMS 6 & 7)
6	A365-00045-0000	FLIPPER BREAK SWITCH ASSY.
7	0020-00202-0000	SWITCH PLATE
8	0360-00145-00XF	SWITCH BRACKET
9	0010-00275-0353	EXTENSION SPRING
10	0360-00718-00XF	PLUNGER
11	A360-00318-00XF	COIL BRACKET
12	AC70-00026-0000	COIL & TUBING ASSY.
14	A365-00024-0000	CORE PLUG & BRACKET ASSY.
15	0365-00101-00XF	FLIPPER MOUNTING BRACKET
16	0017-00104-0073	SPRING WASHER .515" I.D., .875" O.D. & .013" TH.
17 *	A967-00031-0000	MOLDED FLIPPER ASSY. - WHITE
*	0017-00041-0682	BUMPER: FLIPPER 3" RED RUBBER
*		NOT PART OF ABOVE ASSY. & MUST BE ORDERED SEPARATELY

FLIPPER ASSY. - DOUBLE SWITCH RIGHT - PARTS LIST
PART NO. AC70-00023-0100

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	A365-00046-0000	FLIPPER SWITCH ASSY.
	0017-00101-0530	5-40 X 16 PHL RND
*		ALL OTHER PARTS SAME AS AC70-00023-0100

BOTTOM PLAYFIELD ASSEMBLY
PART NO. AE34-00004-0000

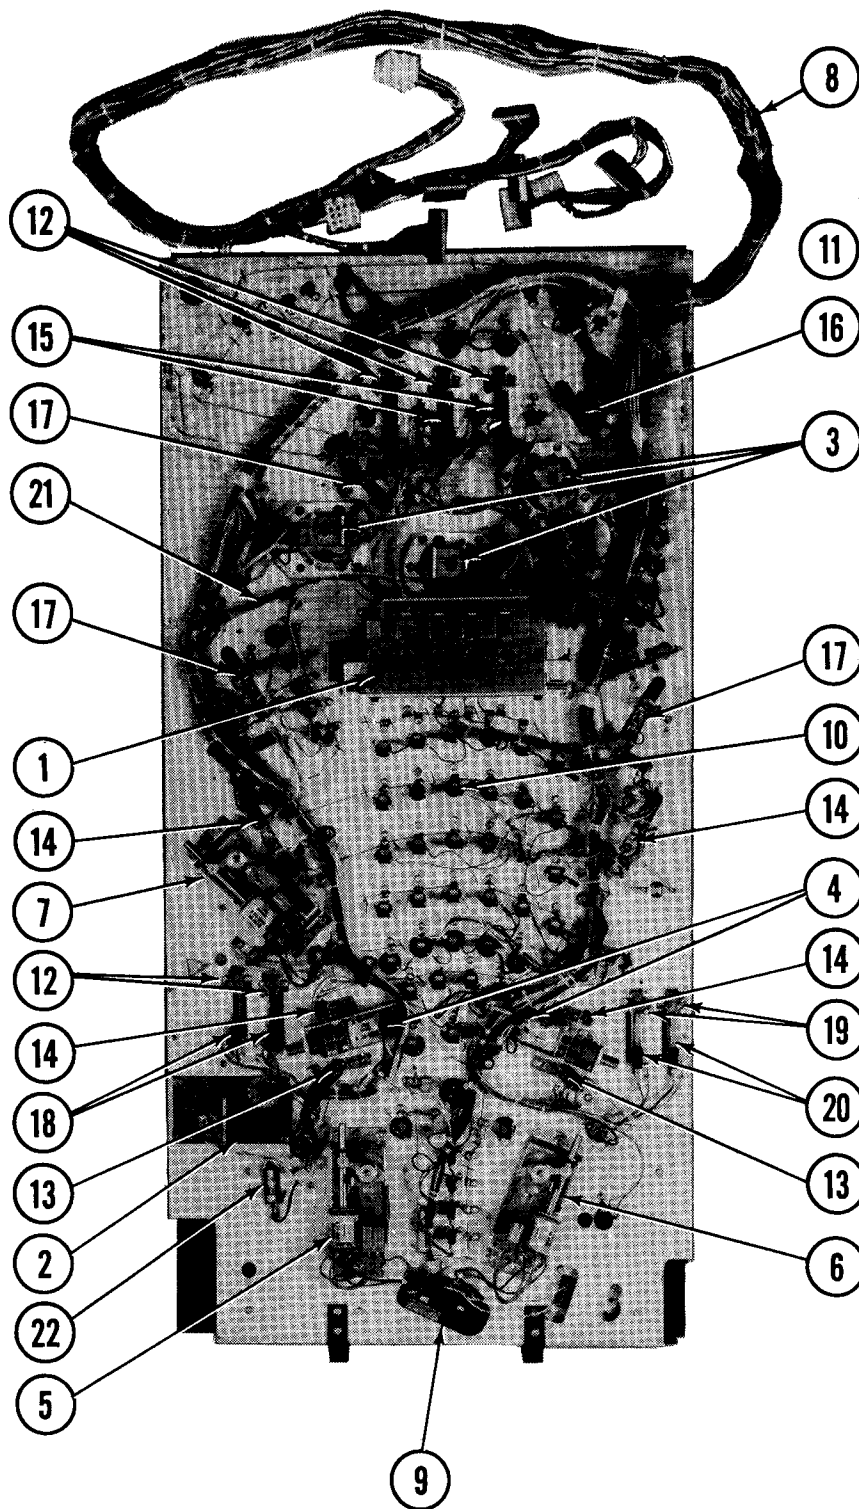

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST
PART NO. AE34-00004-0000

ORDER BY PART NUMBER ONLY


ITEM	PART NO.	DESCRIPTION
1	AE34-00013-0000	DROP TARGET ASSY. 5 BANK (SEE COMMON ASSY.)
2	AE34-00021-0000	FREE GATE RELAY ASSY. (SEE COMMON ASSY.)
3	A967-00053-0000	THUMPER BUMPER ASSY. (SEE COMMON ASSY.)
4	A967-00059-0000	SLINGSHOT KICKER COIL ASSY. (SEE COMMON ASSY.)
5	AC70-00023-0100	FLIPPER ASSY. DOUBLE SWITCH RIGHT (SEE COMMON ASSY.)
6	AC70-00022-0200	FLIPPER ASSY. SINGLE SWITCH LEFT (SEE COMMON ASSY.)
7	AC70-00022-0100	FLIPPER ASSY. SINGLE SWITCH RIGHT (SEE COMMON ASSY.)
8	AE34-00005-0000	PLAYFIELD CABLE ASSY.
9	AB38-00024-0000	SWITCH, BRKT. AND DIODE ASSY.
	0017-00005-0183	SWITCH: BALL RETURN
	0614-00102-0000	BRKT: BALL RETURN KICKOUT
10		SEE COMMON SOCKET PAGE
11	AB38-00028-0000	SWITCH, DIODE, PLATE & CAP (R/O BTN.)
	A360-00069-0000	SWITCH
12	A360-00215-0000	WIRE ACTUATOR ASSY. RIGHT (5 REQ'D.)
	0360-00134-0000	BRKT: ROLLOVER WIRE RIGHT
	0360-00929-0100	WIRE FORM: ROLLOVER RIGHT
13	A360-00230-0000	SWITCH & BRKT. ASSY.: SLINGSHOT (2 REQ'D.)
	A360-00069-0000	SWITCH
14	A360-00239-0000	SWITCH & DIODE ASSY. (4 REQ'D.)
	A360-00069-0000	SWITCH
15	A360-00603-0003	SWITCH, DIODE & CAP ASSY. (3 REQ'D.)
	A360-00061-0000	SWITCH
16	A360-00603-0006	SWITCH, DIODE & CAP ASSY. TARGET
	A360-00029-0000	SWITCH

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST (CONT'D.)
PART NO. AE34-00004-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
17	A360-00603-0007	SWITCH, DIODE & CAP ASSY. WHITE TARGET (3 REQ'D.)
	A360-00028-0000	SWITCH
18	A365-00035-0000	SWITCH, DIODE & PLATE ASSY. (R-O WIRE) (2 REQ'D.)
	A360-00061-0000	SWITCH
19	A967-00062-0000	WIRE ACTUATOR ASSY. (2 REQ'D.)
	0010-00611-0000	WIRE FORM: ROLLOVER LEFT
	0360-00135-0000	BRKT: ROLLOVER WIRE LEFT
20	A967-00067-0000	SWITCH & DIODE ASSY. (R/O WIRE) (2 REQ'D.)
	A360-00065-0000	SWITCH
21	A360-00245-0000	SPINNER SWITCH (1 REQ'D.)
22	0017-00003-0103	FUSE: MDL 3AG 1 AMP 250V S-B (1 REQ'D.)

TOP PLAYFIELD w/ PLASTICS
PART NO. AE34-00004-0000

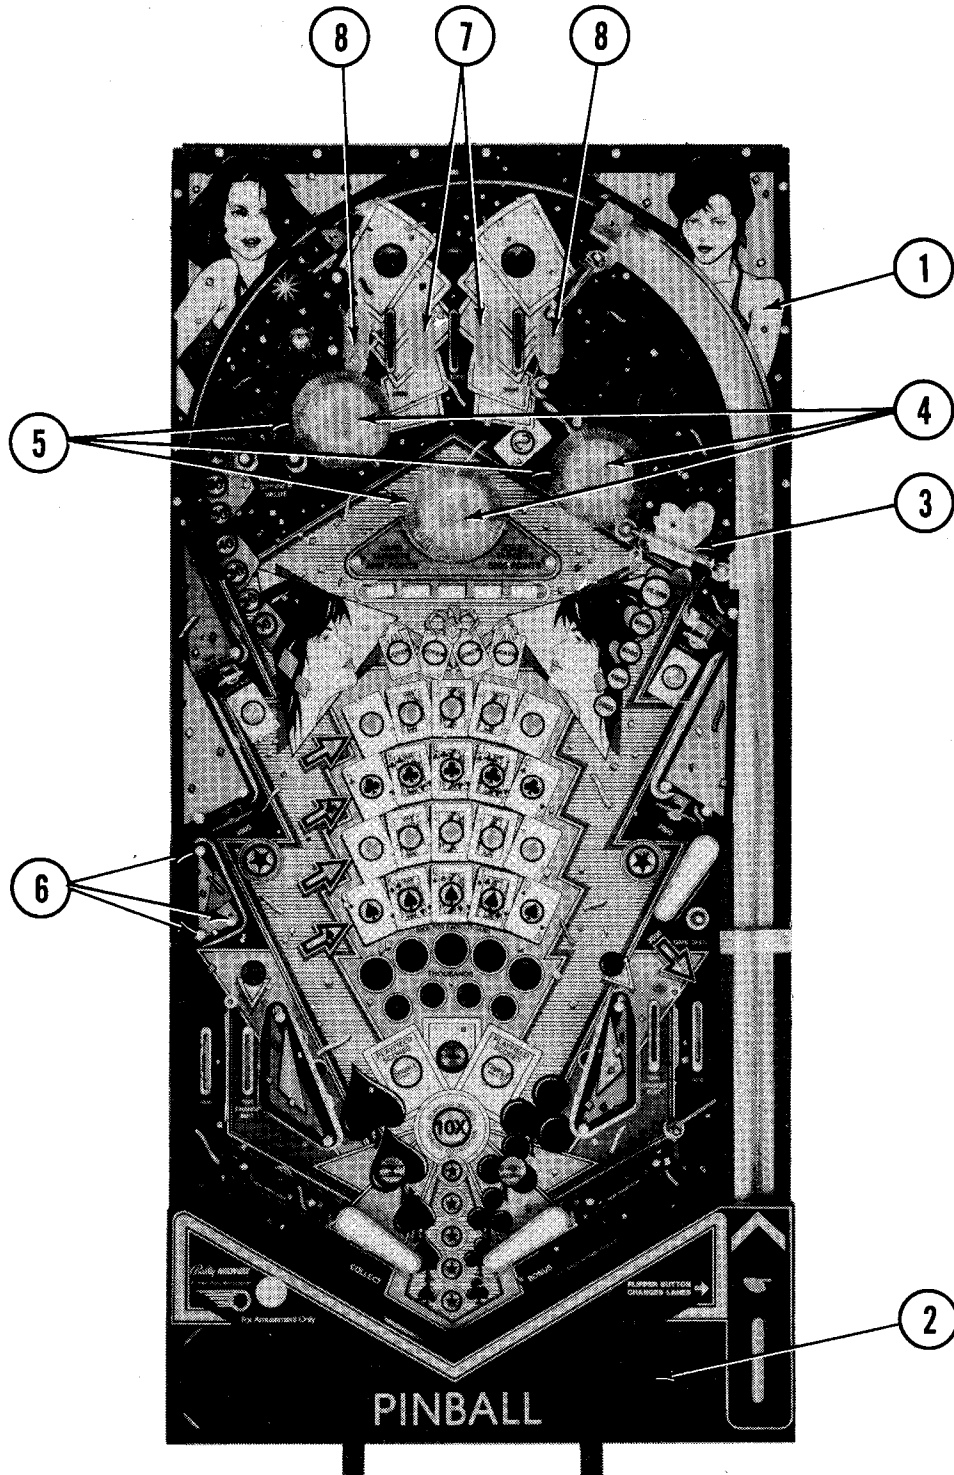


TOP PLAYFIELD ASSEMBLY W/PLASTICS - PARTS LIST
PART NO. AE34-00004-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	AE34-00011-00XF	SCREENED PLASTICS W/BUSHING
	OE34-00901-00XF	SCREENED & DIE CUT PLASTICS
	0967-00710-00XF	SPACER BUSHING
2	0365-00955-0300	BOTTOM ARCH: LADY LUCK
	0614-00905-0300	BALL RUNWAY PLASTIC
3	AE34-00018-0000	SPINNER & GATE ASSY.
	AE34-00019-00XF	SPINNER & WIRE ASSY. SCREENED: LADY LUCK
	0360-00926-0000	WIRE FORM: SPINNER TARGET
	0627-00148-0000	BRKT: TARGET HOLDER
4	AE34-00017-0000	THUMPER BUMPER CAP (HOT STAMPED)
5	0017-00042-0403	COLLAR THUMPER BUMPER - AMBER
	0017-00042-0414	LOCKING RING THUMPER BUMPER CAP (3 REQ'D.)
6	0017-00009-0302	NUT 5 ACORN (23 REQ'D.)
7	0017-00042-0335	GUIDE RAIL: 1-1/2" PURPLE (2 REQ'D.)
8	0017-00042-0532	GUIDE RAIL: 1-1/2" PURPLE (2 REQ'D.)

TOP PLAYFIELD ASSEMBLY w/o PLASTICS
PART NO. AE34-00004-0000

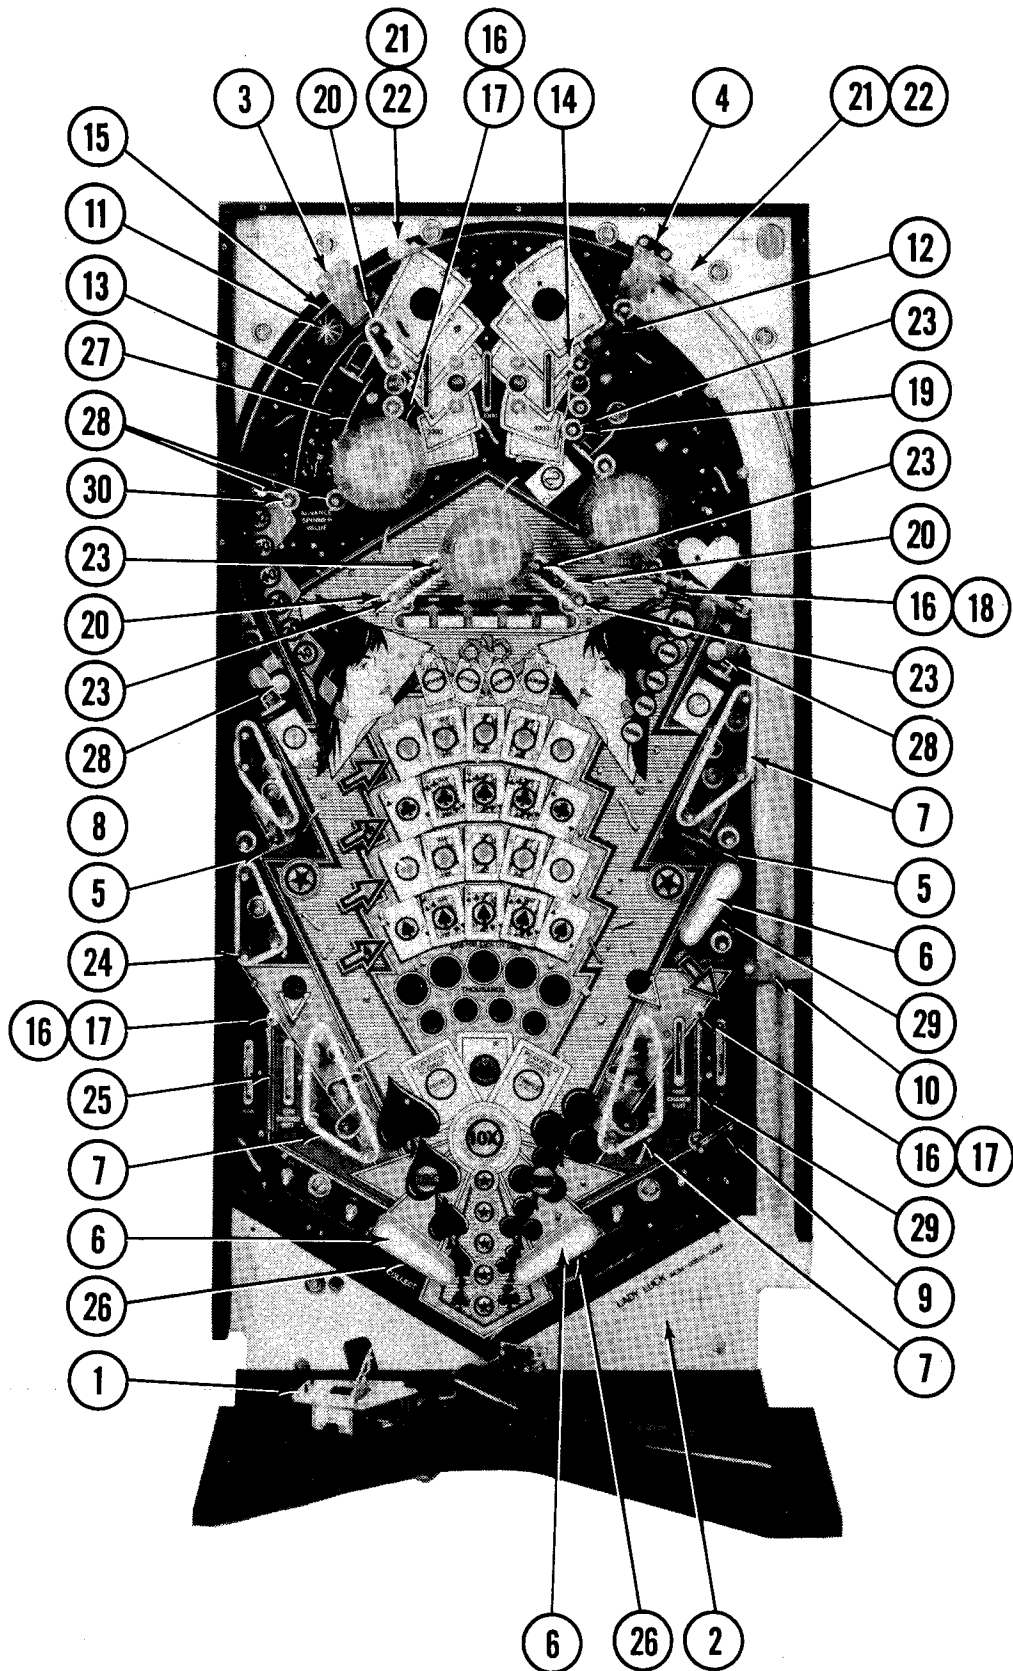

TOP PLAYFIELD ASSEMBLY W/O PLASTICS - PARTS LIST
PART NO. AE34-00004-0000

ORDER BY PART NUMBER ONLY


ITEM	PART NO.	DESCRIPTION
1	A360-00234-0000	TOP MOUNTED KICKER (SEE COMMON ASSY.)
2	AE34-00501-00XF	PLAYFIELD SCREENED (WOOD ONLY)
3	A360-00023-0000	BALL-GATE ASSY. RIGHT
4	A360-00022-0000	BALL-GATE ASSY. LEFT
5	A390-00017-0000	TARGET SWITCH (RED SQUARE)
6	A967-00031-0000	MOLDED FLIPPER: WHITE
7	0017-00041-0646	BUMPER ID 2-1/2"
8	0017-00041-0644	BUMPER ID 1-1/2"
9	0390-00110-0000	WIRE FORM: FREE BALL GATE
10	0967-00107-00XF	HOOD: SHOOTER LANE
11	0017-00042-0405	BUTTON ROLLOVER: WHITE
12	A967-00058-0000	BALL-GATE WIRE ASSY.
	0010-00613-0000	WIRE FORM GATE
	0967-00108-0000	BRKT: GATE
13	0E34-00100-0000	WIRE-FORM: BALL GUIDE
14	0E34-00101-0000	WIRE-FORM: BALL GUIDE (SMALL)
15	0011-00008-35XF	ROD
16	0017-00041-0633	BUMPER: WHITE RUBBER (3 REQ'D.)
17	0360-00732-00XF	POST: BUMPER 10 X 7 US (3 REQ'D.)
18	0365-00700-00XF	POST: BUMPER
19	0017-00041-0637	BUMPER: WHITE RUBBER (13 REQ'D.)
20	0017-00041-0643	BUMPER: I.D. = 1" (3 REQ'D.)
21	0017-00042-0125	POST: RAIL - NYLON (2 REQ'D.)
22	0017-00042-0126	CAP: RAIL POST - NYLON (2 REQ'D.)
23	0017-00042-0585	POST: L = 1" AMBER (6 REQ'D.)
24	0017-00042-0593	POST: L = 1 3/16" AMBER (23 REQ'D.)

TOP PLAYFIELD ASSEMBLY W/O PLASTICS - PARTS LIST (CONT'D.)
PART NO. AE34-00004-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
25	0360-00175-0106	WIRE: FORM, BALL GUIDE 3-5/8" (1 REQ'D.)
26	0360-00175-5300	WIRE: FORM, BALL GUIDE 2-3/8" (2 REQ'D.)
27	0360-00175-6700	BALL GUIDE: WIRE 4" 32 DEG. (1 REQ'D.)
28	0017-00041-0641	BUMPER: RUBBER (4 REQ'D.)
29	0360-00175-5600	WIRE: FORM, BALL GUIDE 2" (2 REQ'D.)
30	0360-00733-00XF	POST: BUMPER NICKEL (13 REQ'D.)
		ADDITIONAL PARTS
	0E34-00903-0000	MYLAR: PLAYFIELD LADY LUCK (1 REQ'D.)
	0E34-00905-0000	SHIELD: THUMPER BUMPER CUT 20 DEG. (2 REQ'D.)
	0371-00913-0000	SHIELD: PROTECTIVE (1 REQ'D.)

DROP TARGET ASSEMBLY (5 POS.)
PART NO. AE34-00013-0000

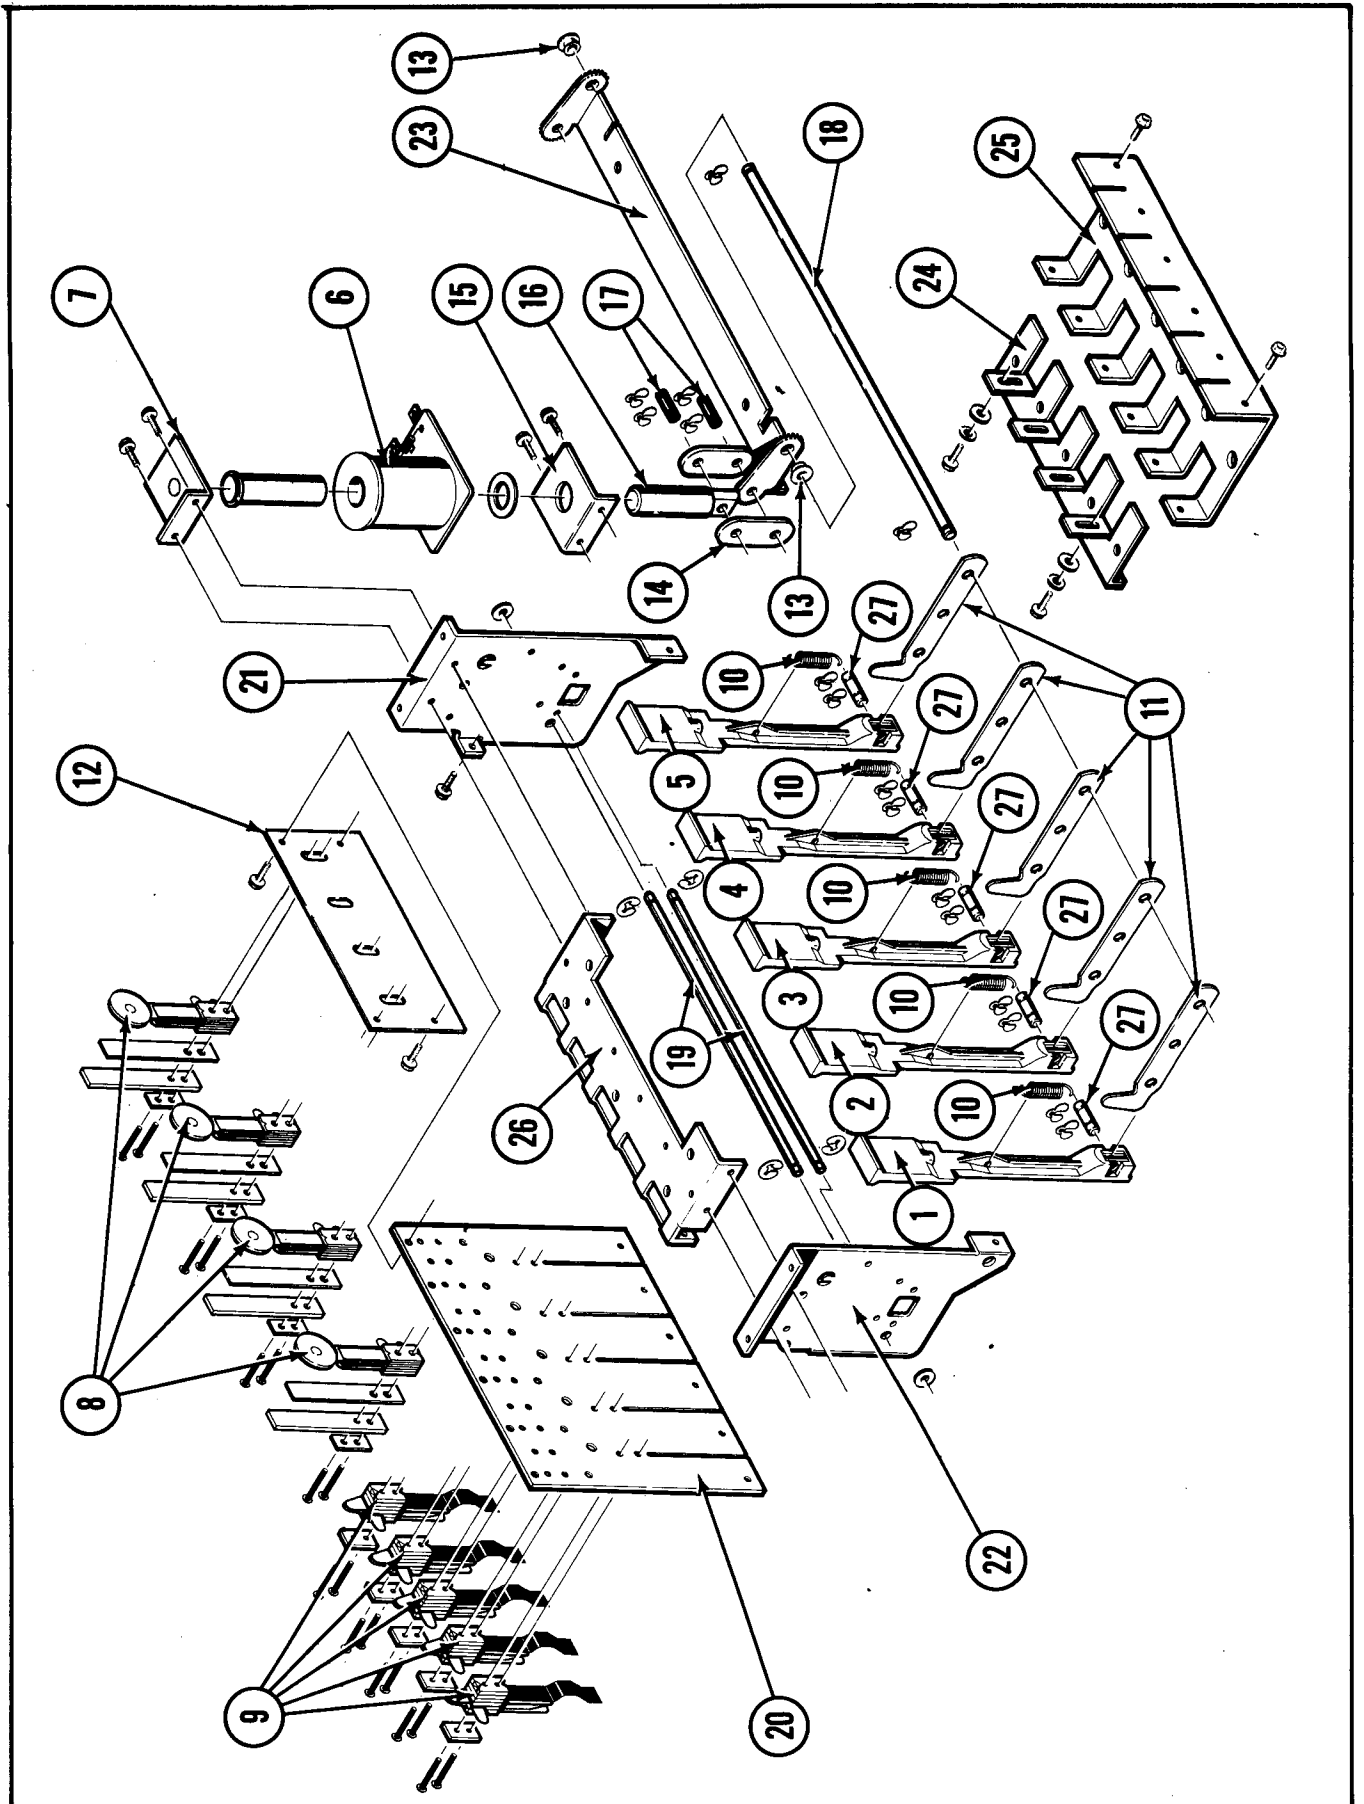

DROP TARGET ASSEMBLY (5 POS.)
PART NO. AE34-00013-0000

ORDER BY PART NUMBER ONLY


ITEM	PART NO.	DESCRIPTION
1	AE34-00015-0100	TARGET & HOT STAMP (A)
2	AE34-00015-0200	TARGET & HOT STAMP (K)
3	AE34-00015-0300	TARGET & HOT STAMP (Q)
4	A390-00012-0000	TARGET & HOT STAMP (J)
5	A390-00011-0000	TARGET & HOT STAMP (10)
6	A360-00209-0000	COIL & TUBING ASSY.
7	A360-00014-0000	CORE PLUG & BRKT. ASSY.
8	A365-00030-0200	SWITCH, DIODE & CAP ASSY. RED (4 REQ'D.)
	A967-00076-0100	SWITCH (4 REQ'D.)
9	A967-00066-0000	SWITCH & DIODE (5 REQ'D.)
	A360-00062-0000	SWITCH (5 REQ'D.)
10	0010-00279-0314	SPRING EXTENSION
11	0360-00117-00XF	LINK: DROP TARGET (5 REQ'D.)
12	0E34-00907-0000	INSULATOR
13	0017-00042-0429	NYLINER: SNAP IN, COIL
14	0360-00118-0000	LINK: DROP TARGET (2 REQ'D.)
15	0360-00122-00XF	BRKT: COIL
16	0360-00717-00XF	PLUNGER
17	0360-00721-00XF	PIN: LINK
18	0360-00722-00XF	SHAFT: DROP TARGET
19	0360-00723-00XF	ROD: SPRING L = 6.875 (2 REQ'D.)
20	0371-00123-14XF	PLATE: L = 6-1/2
21	0371-00124-00XF	PLATE: END - DROP TARGET
22	0371-00125-00XF	PLATE: END - DROP TARGET

DROP TARGET ASSEMBLY (5 POS.) (CONT'D.)
PART NO. AE34-00013-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
23	0967-00141-00XF	RESET BAR: DROP TARGET
24	0967-00142-05XF	PLATE: BOTTOM - ADJUST L = 5-5/16
25	0967-00143-05XF	PLATE: BOTTOM STANDARD L = 6-7/16
26	0967-00144-15XF	PLATE: LATCH
27	0360-00720-00XF	PIN: TARGET PIVOT (5 REQ'D.)

FREE GATE RELAY ASSEMBLY - FULL PLATE
PART NO. AE34-00021-0000

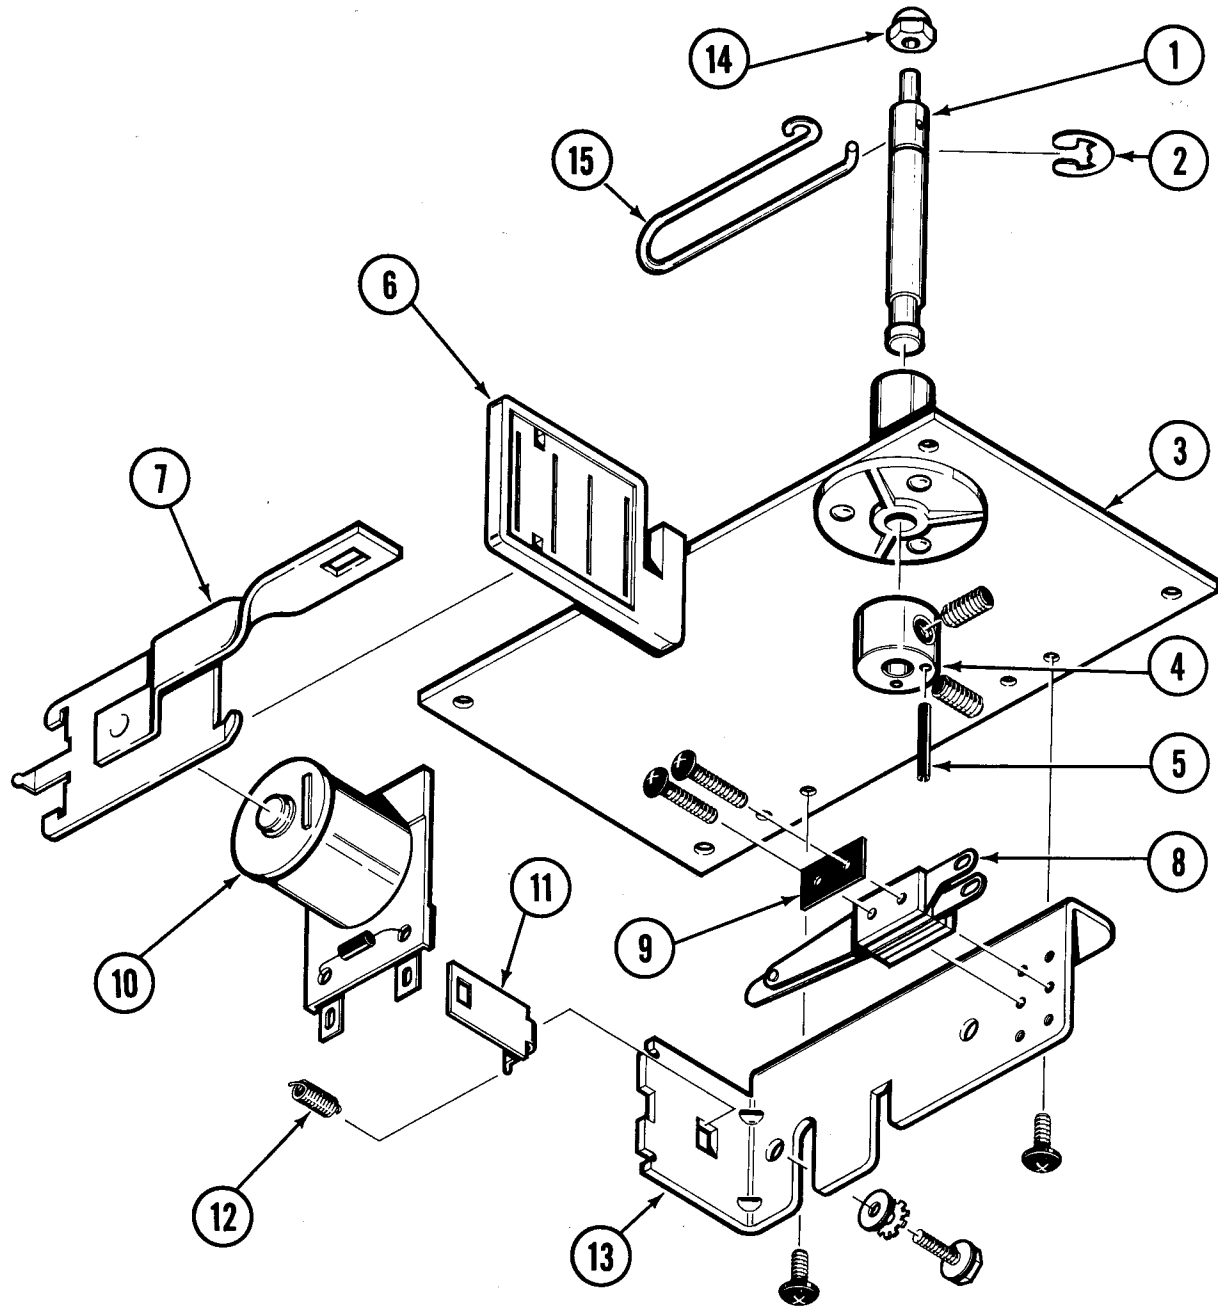

FREE GATE RELAY ASSEMBLY - FULL PLATE - PARTS LIST
PART NO. AE34-00021-0000



ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	0390-00702-00XF	BALL GATE SHAFT
2	0017-00100-0120	RING RER .250 DIA.
3	A390-00021-0000	BASE PLATE & BEARING ASSY.
	A390-00031-0000	HUB & ROLL PIN ASSY. (ITEMS 4 & 5)
4	0390-00703-00XF	HUB
5	0017-00007-0066	ROLL PIN
	AE34-00023-0000	"G" RELAY & COIL ASSY. (ITEM 6 THRU 13)
6	0017-00042-0627	ACTUATOR: SWITCH RELAY
7	A390-00030-0000	GATE BALL ACTUATOR
8	AE34-00022-0000	MAKE SWITCH (RELAY)
9	0020-00243-0000	SPRING PLATE
10	A390-00029-0000	COIL & TUBING ASSY.
11	0390-00107-00XF	SPRING RETAINER
12	0010-00135-0200	COMPRESSION SPRING
13	0390-00106-00XF	RELAY FRAME
14 *	0017-00103-0105	NUT: ACORN PUSH
15 *	0A17-00106-0000	WIRE FORM: FREE BALL GATE
*		NOT PART OF ABOVE ASSY. & MUST BE ORDERED SEPARATELY

LAMP SOCKETS - PARTS LIST

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	0017-00031-0055	SOCKET LAMP W/O DIODE
2	0017-00031-0056	SOCKET LAMP W/O DIODE
3	0017-00031-0057	SOCKET LAMP W/O DIODE
4	0017-00031-0060	SOCKET LAMP THUMPER BUMPER
5	0017-00031-0052	SOCKET ASSY. W/DIODE IN4004
6	0017-00031-0053	SOCKET ASSY. W/DIODE IN4004
7	0017-00031-0054	SOCKET ASSY. W/DIODE IN4004
8	0017-00031-0058	SOCKET LAMP W/O DIODE
9	0017-00031-0059	SOCKET LAMP W/O DIODE

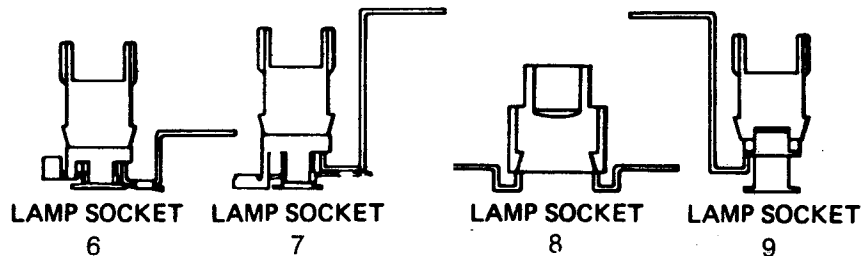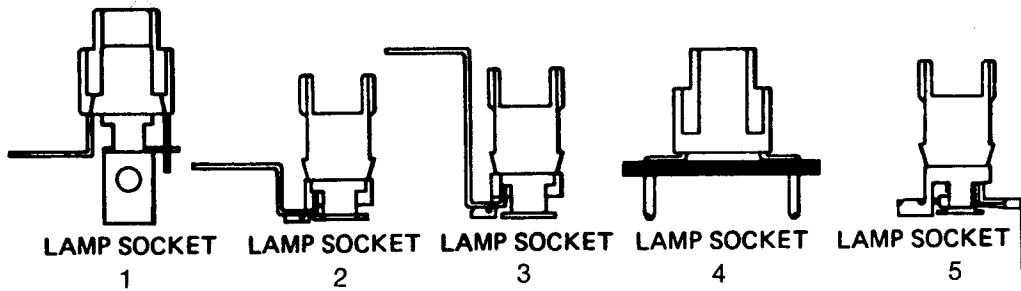

SPARE PARTS KIT
PART NO. AE34-00026-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	0017-00003-0007	FUSE MDA 2AG 3A 250V S-B
	0017-00003-0008	FUSE AGC 3AG 6A 32V M-B
	0017-00003-0010	FUSE 3AG 3/4A 250V F-B
	0017-00003-0011	FUSE AGC 3AG 15A 32V M-B
	0017-00003-0103	FUSE MDL 3AG 1A 250V S-B
	0017-00003-0206	FUSE AGX 8AG 3/16A 250V F-B
	0017-00003-0387	FUSE AGC 3AG 8A 32V M-B
	0017-00003-0501	LAMP WG B 6.3V .2A #555
	0017-00003-0525	LAMP WG B 12.8V 1.0A #912
	0017-00009-0546	BALL 1-1/16 DIA. STEEL
	0017-00009-0547	BALL 15/16 DIA. STEEL
	0017-00009-0551	ALLEN WRENCH 1/8 INCH
	0017-00091-0071	SHIELD PROTECTIVE MYLAR
	0360-00709-0000	REMOVAL TOOL P.C. BDS.
	0360-00900-0000	PLUMB-BOB TILT

