


"MIAMI BEACH" #571

W-632d

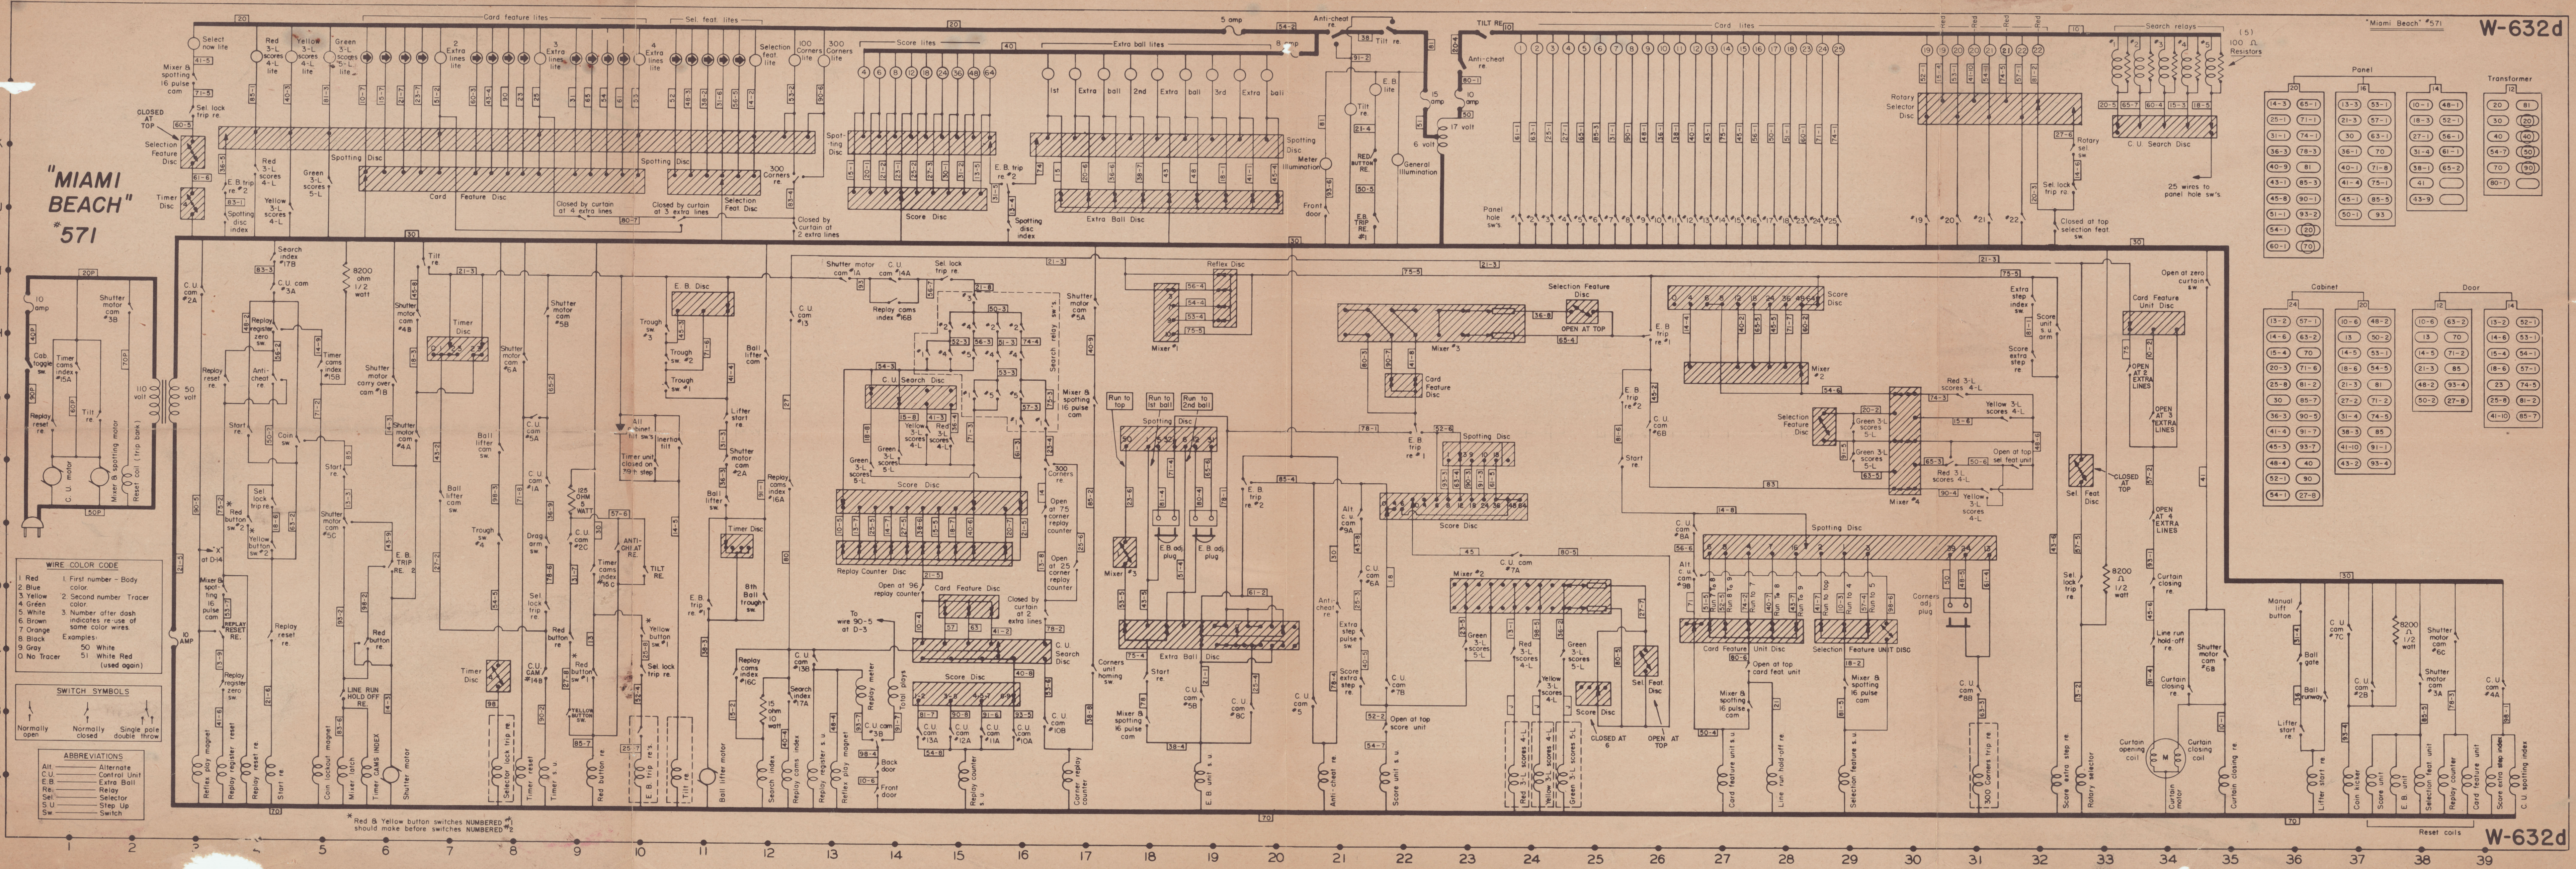

WIRE COLOR CODE

1 Red	1 First number - Body color.
2 Blue	2 Second number - Tracer
3 Yellow	3 Color
4 Green	4 Number after dash indicates re-use of same color wires.
5 White	5 Examples:
6 Brown	60 White
7 Orange	51 White Red (used again)
8 Black	
9 Gray	
0 No Tracer	

SWITCH SYMBOLS

Normally open	Normally closed	Single pole double throw
---------------	-----------------	--------------------------

ABBREVIATIONS

Alt.	Alternate
C.U.	Control Unit
E.B.	Extra Ball
Re	Relay
Sel.	Selector
S.U.	Step Up
Sw	Switch

Panel

14-3	65-1
25-1	71-1
31-1	74-1
36-3	78-3
40-9	81
43-1	85-3
45-8	90-1
51-1	93-2
54-1	(20)
60-1	(70)

Transformer

20	81
30	(20)
40	(40)
54-7	(50)
70	(90)
80-1	

Cabinet

13-2	57-1
14-6	63-2
15-4	70
20-3	71-6
25-8	81-2
30	85-7
36-3	90-5
41-4	91-7
45-3	93-7
48-4	40
52-1	90
54-1	27-8

Door

10-6	63-2
13	70
14-5	71-2
21-3	85
28-8	93-4
50-2	27-8

* Red & Yellow button switches NUMBERED should make before switches NUMBERED

W-632d