

GAME NO. 0E14
Form No. 0E14-00300-0200



Parts Manual


Bally/MIDWAYTM MFG. CO.

10601 W. Belmont Ave. Franklin Park, Illinois 60131
Telephone (312) 451-9200

1.0



TOP PLAYFIELD ASSEMBLY W/PLASTICS
PART NO. AE14-00004-0000

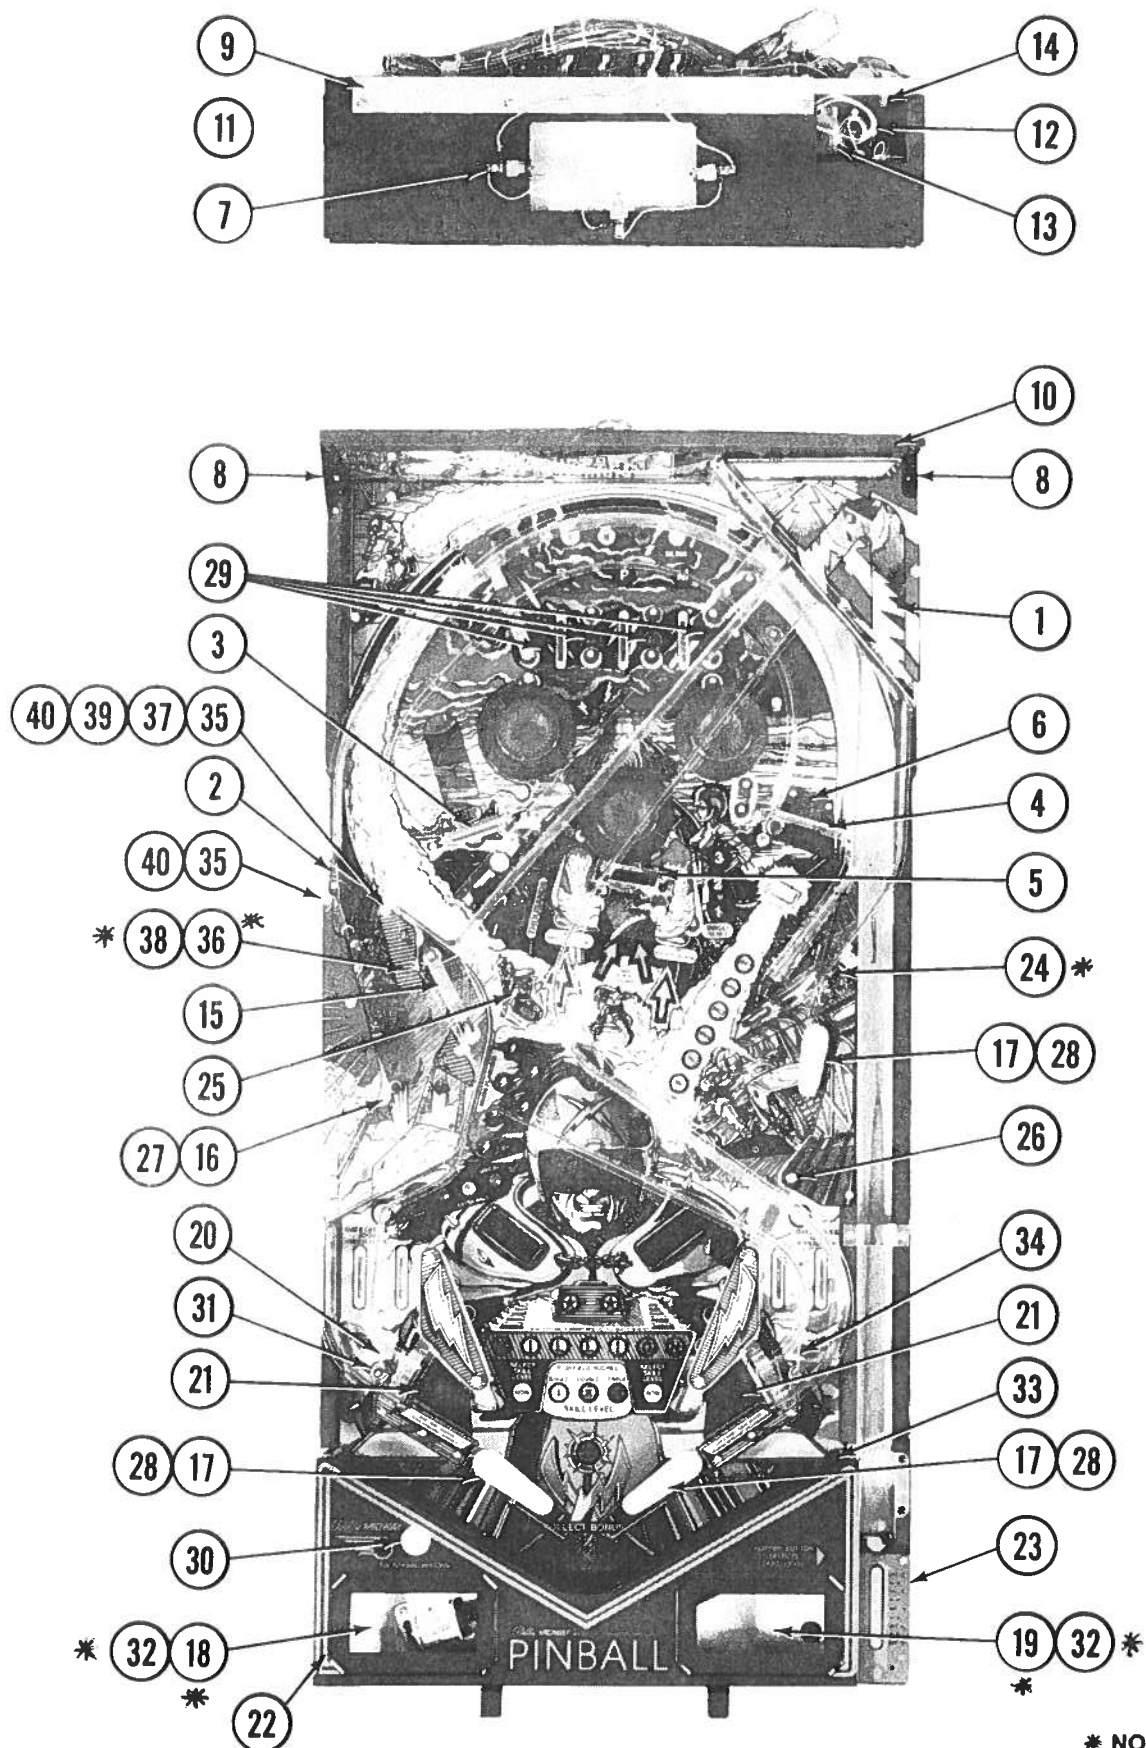

* NOT SHOWN

TOP PLAYFIELD ASSEMBLY W/PLASTICS - PARTS LIST
PART NO. AE14-00004-0000
ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	AE14-00011-0000	SCREENED PLASTICS SET W/BUSHING
	0E14-00901-00XF	BUTYRATE: SCREENED DIE-NUT
2	AE18-00018-0000	CLEAR PLASTICS SET W/BUSHINGS
	0E14-00902-0000	BUTYRATE: CLEAR
3	AE14-00024-0000	SPINNER & GATE ASSY.
	AE14-00023-00XF	SPINNER & WIRE ASSY.
	0017-00104-0084	WASHER .075" ~ .250" ~ .062" FL-B NYLON (2 REQ'D.)
	0360-00926-0000	WIRE FORM: SPINNER TARGET
	0627-00148-0000	BRKT: TARGET-HOLDER
4	AE14-00025-0000	SPINNER & RIGHT GATE ASSY.
	0017-00104-0084	WASHER .075" ~ .250" ~ .062" FL-B NYLON (2 REQ'D.)
	0360-00926-0000	WIRE FORM: SPINNER TARGET
	0365-00146-0000	WIRE FORM: GATE
	0627-00148-0000	BRKT: TARGET HOLDER
5	AE14-00027-0000	SPINNER & CENTER GATE ASSY.
	AE14-00021-0000	TARGET HOLDER ASSY.
	AE14-00029-0000	SPINNER WIRE ASSY: W/TARGET
	0010-00275-0265	SPRING: EXTENSION
	0017-00104-0084	WASHER .075" ~ .250" ~ .062" FL-B NYLON (2 REQ'D.)
	0360-00926-0000	WIRE FORM: SPINNER TARGET
6	AE14-00038-0000	PLATE TO ENTRANCE RAMP ASSY.
	AE14-00042-0000	BACKBOARD ASSY: PLAYFIELD (INCLUDES ITEMS 7 THRU 11)
7		SEE COMMON SOCKET PAGE
8	0E14-00103-00XF	BRKT: GUSSET (2 REQ'D.)


TOP PLAYFIELD ASSEMBLY W/PLASTICS ~ PARTS LIST, CONT'D.
PART NO. AE14-00004-0000
ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
9	OE14-00104-0000	BRKT: BACKBOARD SUPPORT
10	OE14-00109-00XF	BRKT: PLASTIC RETAINER
11	OE14-00503-0000	BACKBOARD: PLAYFIELD
	AE14-00044-0000	EJECT-PLATFORM ASSY. (INCLUDES ITEMS 11 THRU 14)
12	AE14-00045-0000	EJECT-PLATFORM CABLE ASSY.
13	A331-00035-0000	EJECT HOLE ASSY. (SEE COMMON ASSY.)
14	A365-00036-0000	SWITCH, DIODE & PLATE ASSY. (EJECT HOLE)
	A967-00075-0000	SWITCH ASSY.
15	A365-00093-0000	WIRE GATE ASSY.
	OE14-00107-0000	WIRE FORM: GATE
	0360-00132-0000	BRKT: GATE
	0365-00139-0000	WIRE FORM: FREE GATE
16	A391-00052-0100	FLIPPER & SHAFT ASSY. ~ LEFT (BLACK)
17	A967-00031-0000	MOLDED FLIPPER ASSY.: WHITE (3 REQ'D.)
18	M051-00E14-A035	INSTRUCTION CARD: MOTORDOME
19	M051-00E14-A036	SCORE CARD: MOTORDOME
20	0A17-00106-00XF	FREE BALL GATE WIRE (LEFT SIDE)
21	OE14-00100-00XF	PLATE: DROPPED BALL PROTECTOR (2 REQ'D.)
22	OE14-00110-00XF	BOTTOM ARCH: SCREENED
23	OE14-00111-00XF	BALL-SHOOTER GAUGE
24	OE14-00114-00XF	BRKT: HANGER
25	OE14-00905-0000	MAIN RAMP NETWORK
26	0017-00009-0302	NUT 5 ACORN (NYLON) (25 REQ'D.)
27	0017-00041-0643	BUMPER: I.D. = 1" RUBBER (2 REQ'D.)

TOP PLAYFIELD ASSEMBLY W/PLASTICS - PARTS LIST, CONT'D.
PART NO. AE14-00004-0000
ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
28	0017-00041-0653	FLIPPER-RUBBER: 3" YELLOW (3 REQ'D.)
29	0017-00042-0330	GUIDE RAIL: 1-1/2" - RED (4 REQ'D.)
30	0017-00042-0336	PLUG: HOLE
31	0017-00103-0105	NUT .120" ACORN-PUSH (STEEL) (2 REQ'D.)
32	0360-00923-0000	COVER: SCORE - CARD (2 REQ'D.)
33	0370-00918-0300	BOTTOM ARCH - EXTENSION
34	0390-00110-0000	FREE BALL GATE WIRE (RIGHT SIDE)
	AE14-00043-0000	FLIPPER PLATFORM ASSEMBLY (INCLUDES ITEMS 35 THRU 40)
35	0017-00009-0302	NUT 5 ACORN (NYLON) (8 REQ'D.)
36	0017-00041-0633	BUMPER: WHITE BUMPER
37	0017-00041-0641	BUMPER: RUBBER (5 REQ'D.)
38	0360-00732-00XF	POST: BUMPER #10 X 7 WOOD SCREW
39	0360-00733-00XF	POST: BUMPER (NICKEL) (5 REQ'D.)
40	0360-00738-01XF	STUD: #6 X 1-11/16" (8 REQ'D.)

TOP PLAYFIELD ASSEMBLY W/O PLASTICS
PART NO. AE14-00004-0000

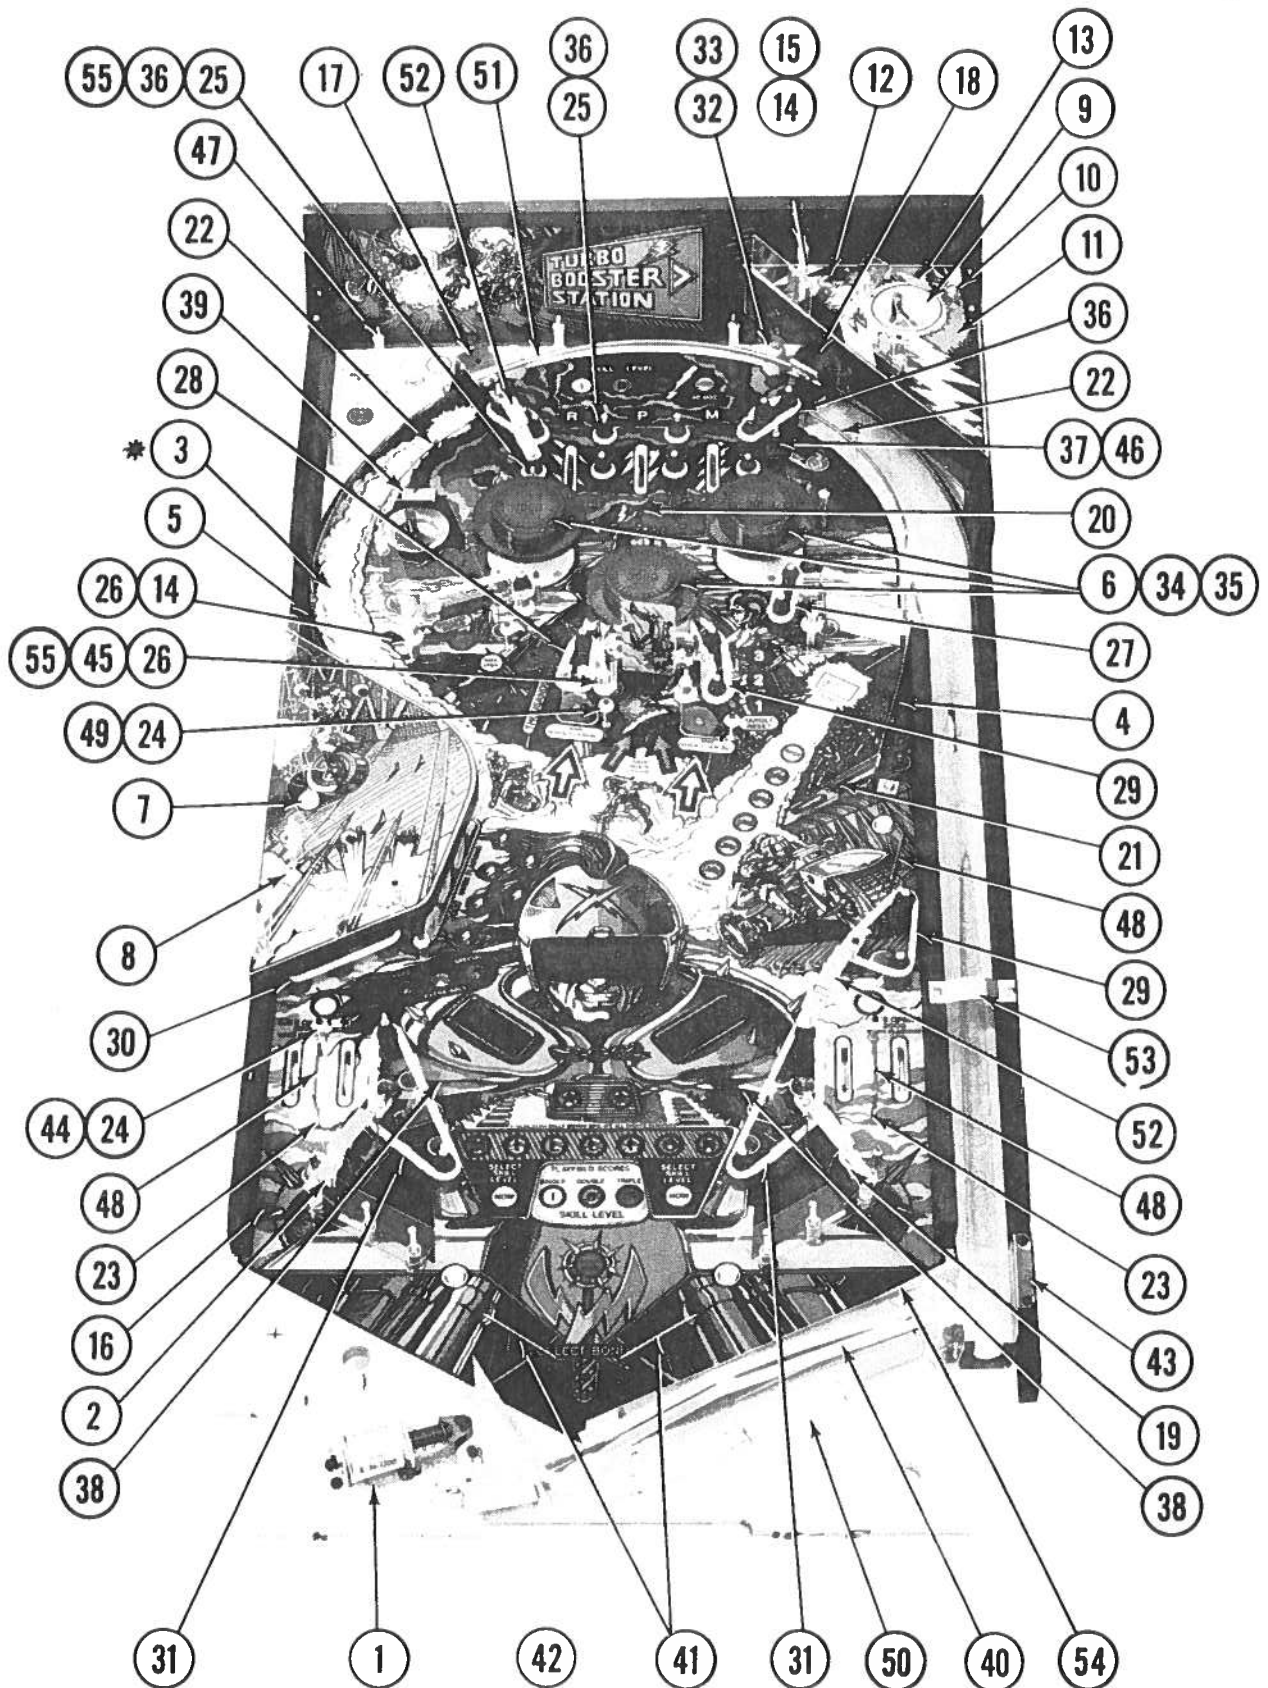

* NOT SHOWN

TOP PLAYFIELD ASSEMBLY W/O PLASTICS - PARTS LIST
PART NO. AE14-00004-0000
ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A360-00234-0000	TOP MTD. KICKER ASSY. (BALL RETURN) (SEE COMMON ASSY.)
2	AB42-00036-0000	GATE & WIRE ASSY.
	OB42-00913-0000	WIRE FORM: GATE
	0391-00916-0000	BRKT: GATE L = 1-7/16"
3	AE14-00013-0000	WIRE GATE ASSY.
	0017-00104-0084	WASHER: 075"-.250"-062" FL-B NYLON (2 REQ'D.)
	0360-00132-0000	BRKT: GATE
	0360-00926-0000	WIRE FORM: SPINNER TARGET
	0365-00146-0000	WIRE FORM: GATE
4	AE14-00014-0000	BALL GUIDE ASSY. "RIGHT OUTSIDE RAMP"
5	AE14-00017-0000	BALL GUIDE ASSY. "LEFT OUTSIDE CHUTE"
6	AE14-00037-0000	THUMPER BUMPER CAP ASSY. STAMPED (3 REQ'D.)
	AE14-00043-0000	FLIPPER PLATFORM ASSY. (INCLUDES ITEMS 7 & 8)
7	AC70-00022-0200	FLIPPER ASSY: SINGLE SW-LEFT (SEE COMMON ASSY.)
	A365-00045-0000	FLIPPER BREAK SWITCH ASSY.
8	OE14-00506-0000	PLATFORM: FLIPPER PLAYFIELD: WOOD
	AE14-00044-0000	EJECT - PLATFORM ASSY. (INCLUDES ITEMS 9 THRU 15)
9	A331-00035-0000	EJECT HOLE ASSY. (SEE COMMON ASSY.)
10		SEE COMMON SOCKETS PAGE
11	OE14-00507-0000	BALL-EJECT PLATFORM
12	0017-00042-0390	LIGHT SHIELD: RED: L=1-1/6"
13	0360-00147-00XF	BALL STOP BRKT.
14	0360-00733-00XF	BUMPER POST (NICKEL)
15	0360-00738-01XF	STUD: #6 X 1-11/16" (5 REQ'D.)
16	AE14-00501-00XF	PLAYFIELD & INSERTS SCREENED & PIERCED


TOP PLAYFIELD ASSEMBLY W/O PLASTICS - PARTS LIST, CONT'D.
PART NO. AE14-00004-0000
ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
17	A360-00022-0000	BALL GATE ASSY: LEFT
18	A360-00023-0000	BALL GATE ASSY: RIGHT
19	A391-00027-0000	GATE BRKT. ASSY.
	0391-00916-0000	BRKT: GATE L=1-7/16"
	0391-00917-0000	WIRE FORM: GATE L=1-9/32"
20	0E14-00914-0100	MYLAR OVERLAY: THUMPER BUMPER AREA
21	0E14-00914-0300	MYLAR OVERLAY: DROPPED BALL PROTECTOR
22	0E34-00100-0000	WIREFORM: BALL GUIDE (2 REQ'D.)
23	0011-00008-35XF	PIN (2 REQ'D.)
24	0017-00041-0633	BUMPER: WHITE RUBBER (11 REQ'D.)
25	0017-00041-0637	BUMPER: WHITE RUBBER (9 REQ'D.)
26	0017-00041-0641	BUMPER: RUBBER (5 REQ'D.)
27	0017-00041-0642	BUMPER: I.D. = 3/4" RUBBER (2 REQ'D.)
28	0017-00041-0643	BUMPER: I.D. = 1" RUBBER (3 REQ'D.)
29	0017-00041-0644	BUMPER: I.D. = 1-1/2" RUBBER (2 REQ'D.)
30	0017-00041-0645	BUMPER: I.D. = 2" RUBBER
31	0017-00041-0647	BUMPER: I.D. = 3" RUBBER (2 REQ'D.)
32	0017-00042-0125	POST: RAIL NYLON (2 REQ'D.)
33	0017-00042-0126	CAP: RAIL NYLON (2 REQ'D.)
34	0017-00042-0414	RING: LOCKING (MOLDED-THUMPER BUMPER) (3 REQ'D.)
35	0017-00042-0566	COLLAR: THUMPER BUMPER-RED (3 REQ'D.)
36	0017-00042-0588	POST: L=1" (9 REQ'D.)
37	0017-00042-0596	POST: L=1-3/16" RED (21 REQ'D.)
38	0017-00091-0071	SHIELD: PROTECTIVE MYLAR (SLINGSHOT AREA) (2 REQ'D.)

TOP PLAYFIELD ASSEMBLY W/O PLASTICS - PARTS LIST, CONT'D.
PART NO. AE14-00004-0000
ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
39	0360-00147-00XF	BRKT: BALL STOP
40	0360-00174-00XF	BALL RUNWAY
41	0360-00175-5300	WIRE FORM: BALL GUIDE 2-3/8" (2 REQ'D.)
42	0360-00188-0000	GUIDE: BALL RETURN
43	0360-00322-0000	PROTECTIVE ANGLE
44	0360-00732-00XF	POST: BUMPER #10 X 7 WOOD SCREW (6 REQ'D.)
45	0360-00733-00XF	POST: BUMPER (NICKEL) (9 REQ'D.)
46	0360-00738-01XF	STUD: #6 X 1-11/16" (8 REQ'D.)
47	0360-00738-02XF	STUD: #6 X 1-1/2" WOOD SCREW (COPPER) (5 REQ'D.)
48	0365-00151-1750	WIREFORM: BALL GUIDE 1-3/4" (3 REQ'D.)
49	0365-00700-00XF	POST: BUMPER #10/32 X 7 (3 REQ'D.)
50	0371-00129-00XF	CHANNEL: BALL-REAR
51	0371-00130-0000	RAIL: TOP PLAY-ARCH (WIRE .187)
52	0391-00916-0000	GATE BRACKET (2 REQ'D.)
53	0967-00107-00XF	SHOOTER LANE HOOD
54	0967-00127-00XF	BALL-CHANNEL: FRONT
55	0967-00707-01XF	STUD: #6-32 X 1-11/16" (6 REQ'D.)

BOTTOM PLAYFIELD ASSEMBLY
PART NO. AE14-00004-0000

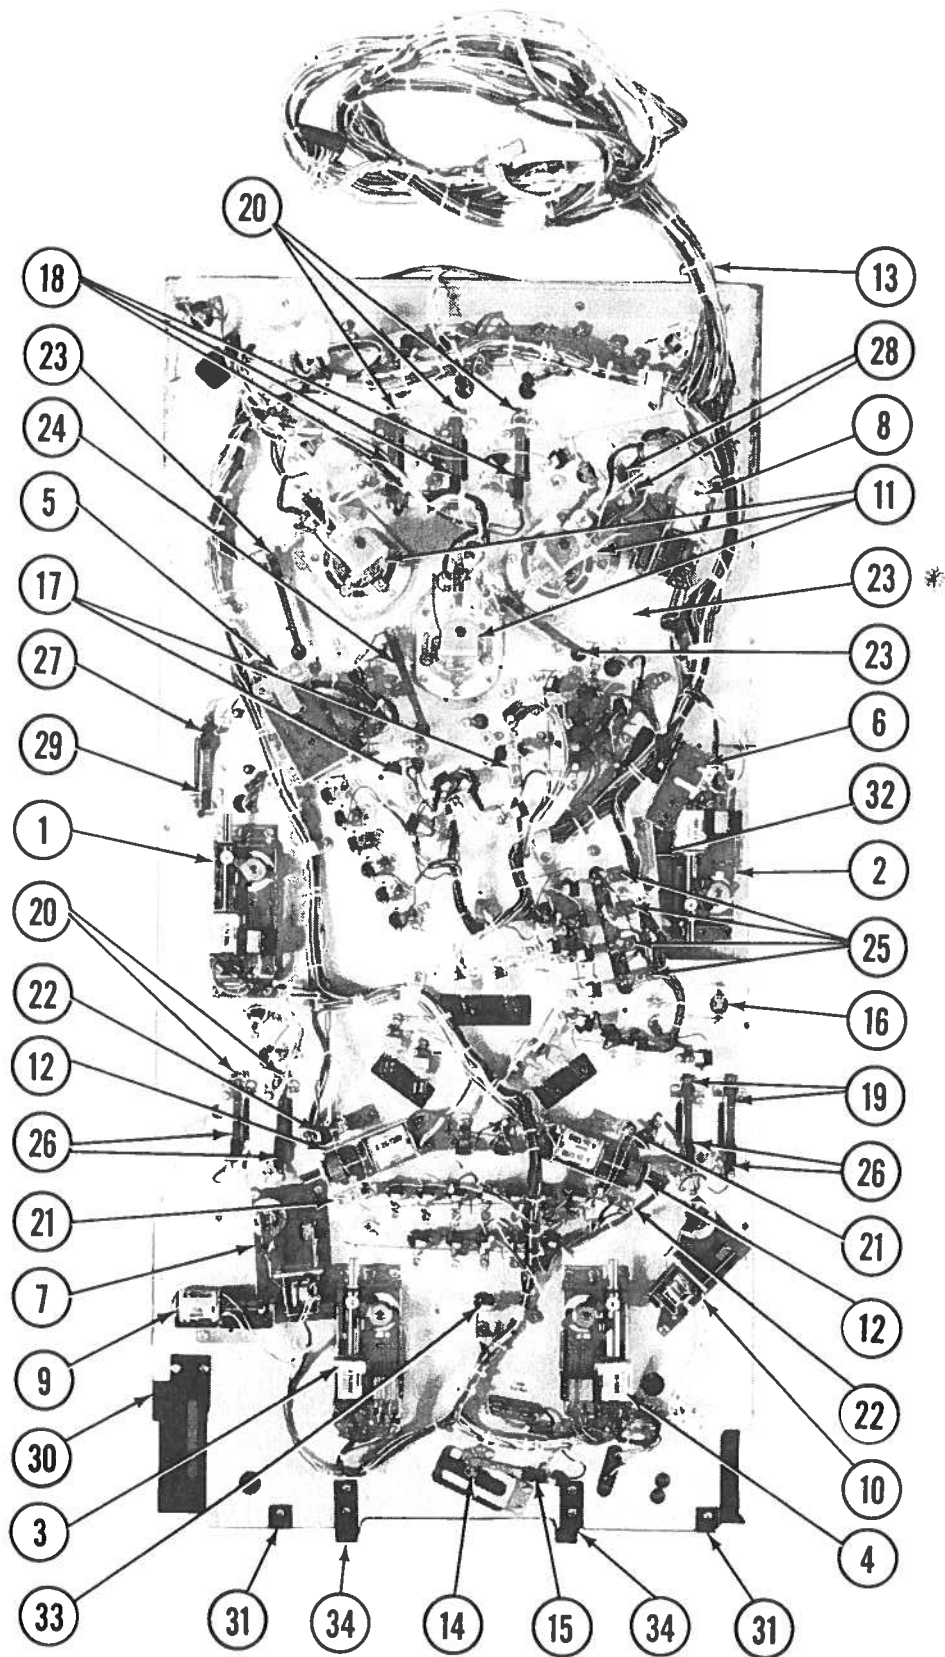

* NOT SHOWN

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST
PART NO. AE14-00004-0000
ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	AC70-00022-0100	FLIPPER ASSY. SINGLE SWITCH LEFT (SEE COMMON ASSY.)
	A365-00045-0000	FLIPPER BREAK SWITCH ASSY.
2	AC70-00022-0200	FLIPPER ASSY. SINGLE SWITCH RIGHT (SEE COMMON ASSY.)
	A365-00045-0000	FLIPPER BREAK SWITCH ASSY.
3	AC70-00023-0200	FLIPPER ASSY. DOUBLE SWITCH LEFT (SEE COMMON ASSY.)
	A365-00045-0000	FLIPPER BREAK SWITCH ASSY.
	A365-00046-0000	FLIPPER - SWITCH ASSY.
4	AC70-00023-0200	FLIPPER ASSY. DOUBLE SWITCH RIGHT (SEE COMMON ASSY.)
	A365-00045-0000	FLIPPER BREAK SWITCH ASSY.
	A365-00046-0000	FLIPPER - SWITCH ASSY.
5	AE14-00019-0000	DROP TARGET ASSY: LEFT HAND SINGLE (SEE COMMON ASSY.)
6	AE14-00036-0000	"G" RELAY & MTG. BRKT. ASSY.
	AE14-00030-0000	"G" RELAY & COIL ASSY. (SEE COMMON ASSY.)
7	AE34-00021-0000	FREE GATE RELAY ASSY. (SEE COMMON ASSY.)
8	A331-00035-0000	BALL EJECT HOLE (SAUCER) ASSY. (SEE COMMON ASSY.)
9	A360-00235-0000	KNOCKER ASSY. (SEE COMMON ASSY.)
10	A365-00083-0000	FREE GATE ASSY.: PARTIAL PLATE (SEE COMMON ASSY.)
11	A967-00053-0000	THUMPER BUMPER ASSY. (3 REQ'D.) (SEE COMMON ASSY.)
12	A967-00059-0000	SLINGSHOT KICKER ASSY. (2 REQ'D.) (SEE COMMON ASSY.)
13	AE14-00005-0000	PLAYFIELD CABLE ASSY.
14	A360-00217-0000	WIRE ACTUATOR ASSY.
	0360-00135-0000	BRKT: ROLLOVER WIRE
	0360-00931-0000	WIRE FORM: BALL RETURN
15	A360-00241-0000	SWITCH & DIODE ASSY.

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST, CONT'D.
PART NO. AE14-00004-0000
ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	A360-00055-0000	SWITCH ASSY.: BALL RETURN
16		SEE COMMON SOCKET PAGE
17	AA17-00027-0000	SWITCH, DIODE & CAP ASSY.: (2 REQ'D.)
	A967-00019-0000	TARGET & SWITCH ASSY.
18	AB38-00026-0000	SWITCH, DIODE & CAP ASSY.: R/O WIRE (3 REQ'D.)
	A360-00065-0000	SWITCH ASSY.
19	A331-00042-0000	WIRE ACTUATOR ASSY. (2 REQ'D.)
	0360-00135-0000	BRKT: ROLLOVER WIRE ~ LEFT
	0360-00929-0200	WIRE FORM: ROLLOVER LEFT
20	A360-00216-0000	WIRE ACTUATOR ASSY.: RIGHT (5 REQ'D.)
	0360-00134-0000	BRKT: ROLLOVER WIRE
	0360-00930-0000	WIRE FORM: ROLLOVER ~ LEFT
21	A360-00230-0000	SWITCH & BRKT. ASSY.: SLINGSHOT ASSY. (2 REQ'D.)
	A360-00069-0000	SWITCH ASSY.
22	A360-00239-0000	SWITCH & DIODE ASSY.: SLINGSHOT ASSY. (2 REQ'D.)
	A360-00069-0000	SWITCH ASSY.
23	A360-00245-0000	SWITCH & DIODE ASSY. (3 REQ'D.)
	A360-00058-0000	SWITCH ASSY.
24	A360-00245-0100	SWITCH, DIODE & CAP ASSY. (CENTER SPINNER TARGET)
	A360-00058-0000	SWITCH ASSY.
25	A360-00603-0005	SWITCH, DIODE & CAP ASSY. ~ TARGET (YELLOW) (4 REQ'D.)
	A360-00029-0000	SWITCH & TARGET ASSY.
26	A365-00035-0000	SWITCH, DIODE & CAP ASSY.: R/O WIRE (4 REQ'D.)
	A360-00069-0000	SWITCH ASSY.

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST, CONT'D.
PART NO. AE14-00004-0000
ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
27	A365-00035-0100	SWITCH, DIODE & CAP ASSY: R/O WIRE
	0360-00069-0000	SWITCH ASSY.
28	A365-00036-0000	SWITCH, DIODE & PLATE ASSY. (EJECT HOLE)
	A967-00075-0000	SWITCH ASSY.
29	A370-00061-0000	WIRE ACTUATOR ASSY.
	0360-00134-0000	BRKT: ROLLOVER WIRE - RIGHT
	0370-00905-0000	WIRE FORM: ROLLOVER
30	0B42-00100-00XF	BALL CONTROL PLATE
31	0B42-00102-00XF	BRKT: BOTTOM ARCH (2 REQ'D.)
32	0E14-00101-0000	BRKT: RIGHT - PLATFORM SUPPORT
33	0017-00003-0103	FUSE: MDX 3AG 1A 250V SLO-BLO
34	0365-00134-0000	SUPPORT: PLAYFIELD (2 REQ'D.)



THIS PAGE WAS LEFT BLANK INTENTIONALLY