


SKY KINGS Playfield Chart

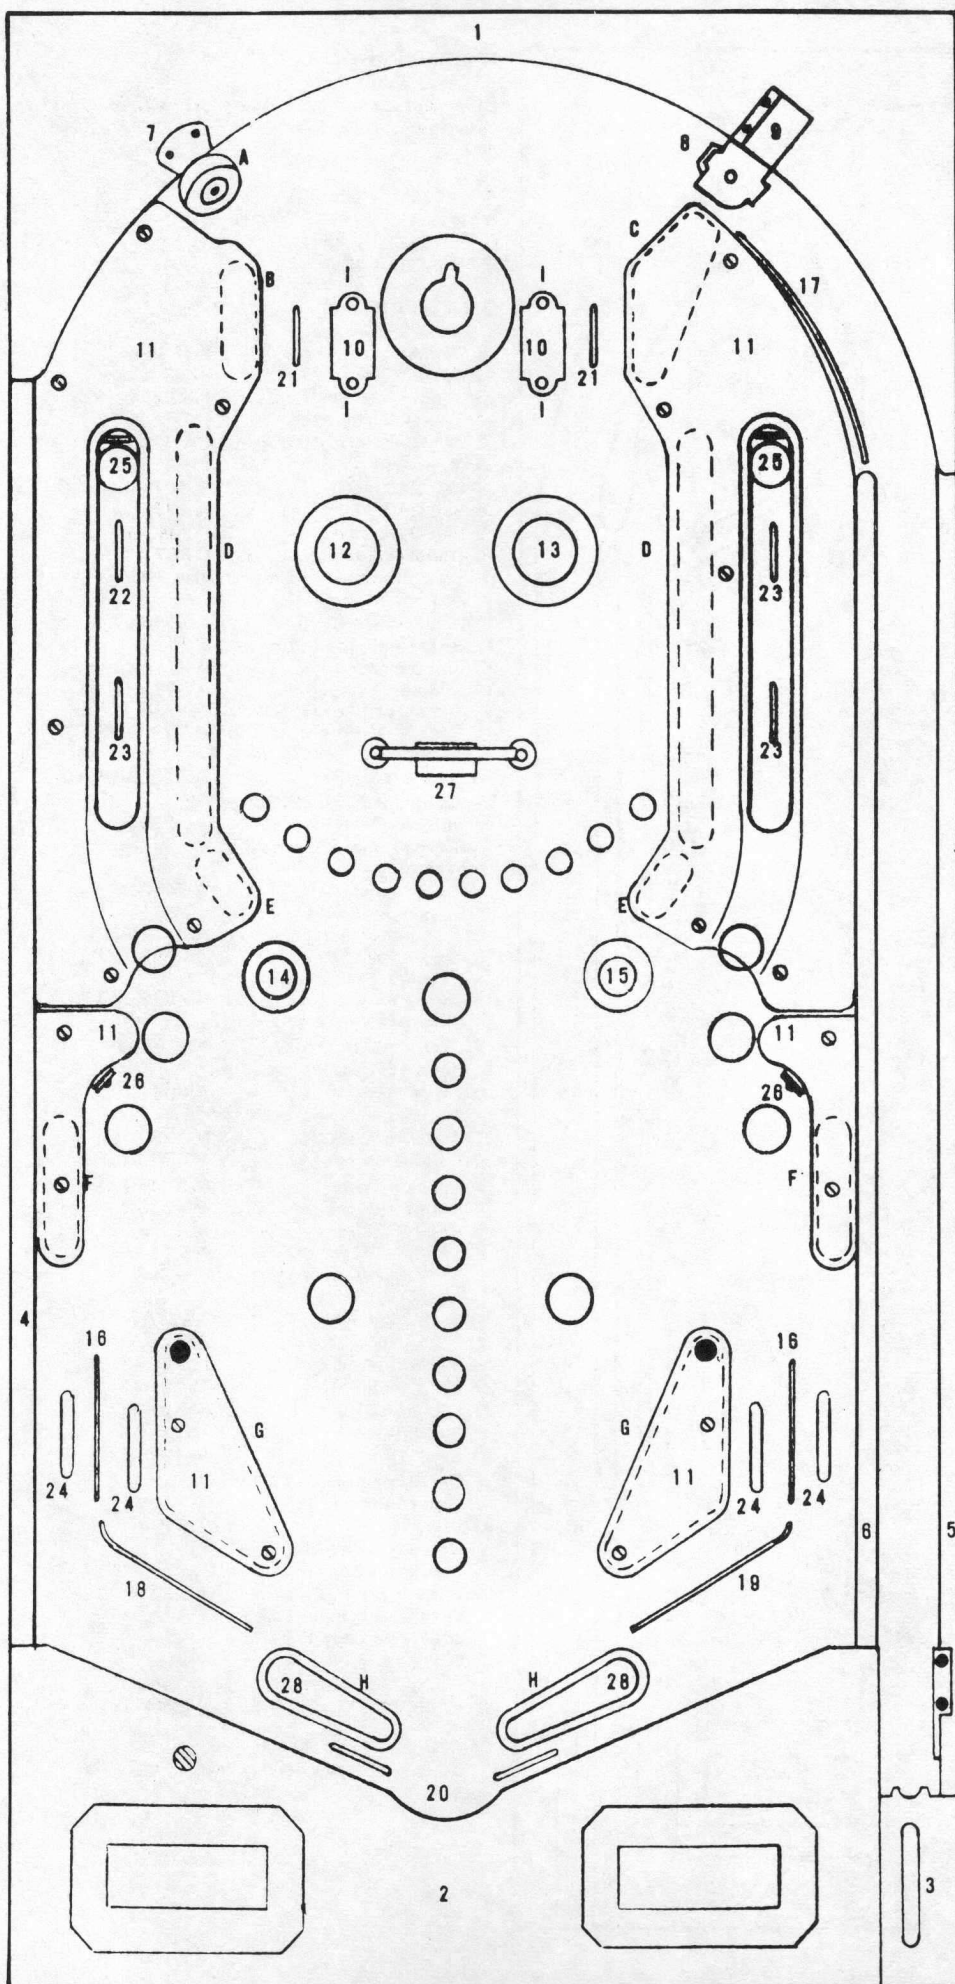

RUBBER PARTS

Dimensions are inside diameters. Numbers in parentheses indicate quantity used, if in excess of one.

- A R-115-4 (Rebound)
- B R-521-1, 1 in.
- C R-521-2, 1 1/2 in.
- D R-521-6, 3 1/2 in. (2)
- E R-521, 3/4 in. (2)
- F R-521-3, 2 in. (2)
- G R-521-4, 2 1/2 in. (2)
- H R-406-3 (Flipper) (2)
- I R-243, 5/16 in. (1)

OTHER PARTS

- 1 Top Arch P-5839-65
- 2 Bottom Arch P-5871-45
- 3 Shooter Gauge P-6359-12
- 4 Side Rail, left CA-1208-23
- 5 Side Rail, right CA-1208-22
- 6 Inside Rail CA-1208-26
- 7 Rebound Assy. AS-493-3
Detailed, item 8, page 125
- 8 Ball Gate A-1475-1
- 9 Ball Gate Cover P-2896-5
- 10 Plastic Guide C-694-1
- 11 Light Shields (set) A-2890-89
- 12 Bumper Cap, yellow A-3713-12
- 13 Bumper Cap, green A-3713-8

Details of Bumper Assys, page 167

- 14 Mushroom Bumper, yellow AS-2291-22
Detailed, item 14, page 138
- 15 Mushroom Bumper, green AS-2291-21
Detailed, item 15, page 138

PARTS RELATED TO ITEMS 14, 15

- Pal Nut M-1314-1
- Switch ASW-A20-9
- 16 Ball Guide Wire (2) M-121-18
- 17 Ball Guide Wire M-121-28
- 18 Ball Guide Wire M-121-43
- 19 Ball Guide Wire M-121-44
- 20 Ball Guide Wire (2) M-121-53
- 21 Rollover Wire (2) M-1336-9
- 22 Rollover Wire M-1336-15
- 23 Rollover Wire (3) M-1336-16
- 24 Rollover Wire (4) M-1336-1

PARTS RELATED TO ITEMS 21, 22, 23, 24

- Bracket: see page 191
- Switch,
 - Make ASW-A1-5
 - Make-Make ASW-A11-2
- 25 Target Assy. AS-982-699
Detailed, item 28, page 128
- 26 Target Assy. AS-982-995
Detailed, item 24, page 138
- 27 Spinner Gate Assy. AS-2250-32
Detailed, item 25, page 138
- Switch
 - Used with item 27 ASW-A1-118
- Spinner Unit (Light Flash):
See page 109
- 28 Flipper & Pin Assy. (2) ... AS-2214-19
Details of Flipper Assys.
appear on page 175

• INDICATES MOVABLE POST
FOR SCORING ADJUSTMENT