

GAME NO. 0E47

FORM NO. 0E47-00300-01



SPECIAL FORCE



Parts Manual

Bally **MIDWAY** MFG. CO

10601 W. Belmont Ave. Franklin Park, Illinois 60131
Telephone (312) 451-9200



WARNING

**THIS GAME MUST BE GROUNDED. FAILURE TO DO SO MAY
RESULT IN DESTRUCTION TO ELECTRONIC COMPONENTS.**

WARNING: This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a CLASS A computing device pursuant to SUBPART J of PART 15 of FCC RULES, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

ELECTRICAL BULLETIN: FOR ALL APPARATUS COVERED BY THE CANADIAN STANDARDS ASSOCIATION (CSA) STANDARD C22.2 NO. 1, WHICH EMPLOYS A SUPPLY CORD TERMINATED WITH A POLARIZED 2-PRONG ATTACHMENT PLUG.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION: POUR PREVENIR CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR. UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

***Bally*/MIDWAY**
T.M.

Invites You To Use

**OUR TOLL FREE NUMBER FOR
SERVICE INFORMATION CONCERNING THIS GAME, OR ANY
OTHER BALLY/MIDWAY™ GAME YOU NOW HAVE ON LOCATION.**

**CALL US FOR PROMPT, COURTEOUS
ANSWERS TO YOUR PROBLEMS.**

Video or Pinball - Continental U.S. 800-323-7182

***Bally*/MIDWAY**
T.M.

10601 West Belmont Avenue Franklin Park, Illinois, 60131 phone (312) 451-9200

©COPYRIGHT MCMLXXXVI BY BALLY MIDWAY MFG. CO. ALL RIGHTS RESERVED.

NO PART OF THIS PUBLICATION MAY BE REPRODUCED BY ANY MECHANICAL, PHOTOGRAPHIC, OR ELECTRONIC PROCESS, OR IN THE FORM OF A PHONOGRAPHIC RECORDING, NOR MAY IT BE TRANSMITTED, OR OTHERWISE COPIED FOR PUBLIC OR PRIVATE USE, WITHOUT PERMISSION FROM THE PUBLISHER. THIS MANUAL IS FOR SERVICE USE ONLY, AND NOT FOR GENERAL DISTRIBUTION. FOR PERMISSION REQUESTS, WRITE: BALLY MIDWAY MFG. CO., 10601 W. BELMONT AVE., FRANKLIN PARK, IL 60131.


Printed in U.S.A.

SPECIAL FORCE
TABLE OF CONTENTS
ILLUSTRATED PARTS BREAKDOWN

DESCRIPTION	PAGE
Special Force External Parts Picture	2
Special Force External Parts Breakdown	3
Special Force Internal Parts Picture	4
Special Force Internal Parts Breakdown	5
Knocker Assy. Illustration & Parts Breakdown	7
Ball Shooter Rod & Spring Assy. Illustration	8
Ball Shooter Rod & Spring Assy. Parts Breakdown	9
Back Cabinet Assy. Picture	10
Back Cabinet Assy. Parts Breakdown	11
Top Mounted Kicker Assy. Illustration	12
Top Mounted Kicker Assy. Parts Breakdown	13
Thumper Bumper Assy. Illustration	14
Thumper Bumper Assy. Parts Breakdown	15
Slingshot Kicker Assy. Illustration	16
Slingshot Kicker Assy. Parts Breakdown	17
Coin Door Assy. Illustration	18
Coin Door Assy. Parts Breakdown	19
Flipper Assy.-Single Switch Left Illustration	22
Flipper Assy.-Single Switch Left Parts Breakdown	23
Flipper Assy.-Single Switch Right Illustration	24
Flipper Assy.-Single Switch Right Parts Breakdown	25
Lamp Socket Illustration & Parts Breakdown	26
Bottom Playfield Assy. Picture	27
Bottom Playfield Assy. Parts Breakdown	28
Top Playfield Assy. Picture w/Plastics	31
Top Playfield Assy. Parts Breakdown w/Plastics	32
Top Playfield Assy. Picture w/o Plastics	34
Top Playfield Assy. Parts Breakdown w/o Plastics	35
Ball Channel Assy. Illustration	38
Ball Channel Assy. Parts Breakdown	39
Drop Target Assy. Single Illustration	40
Drop Target Assy. Single Parts Breakdown	41
Drop Target Assy. Single In-Line w/Memory Illustration	42
Drop Target Assy. Single In-Line w/Memory Parts Breakdown	43
Drop Target Assy. 3 In-Line w/Memory Illustration	45
Drop Target Assy. 3 In-Line w/Memory Parts Breakdown	46
Eject Hole (Saucer) Assembly	48
Eject Hole Parts Breakdown	49
Spare Parts Kit	50

Note: This game is equipped with 3 balls.

SPECIAL FORCE EXTERNAL PARTS

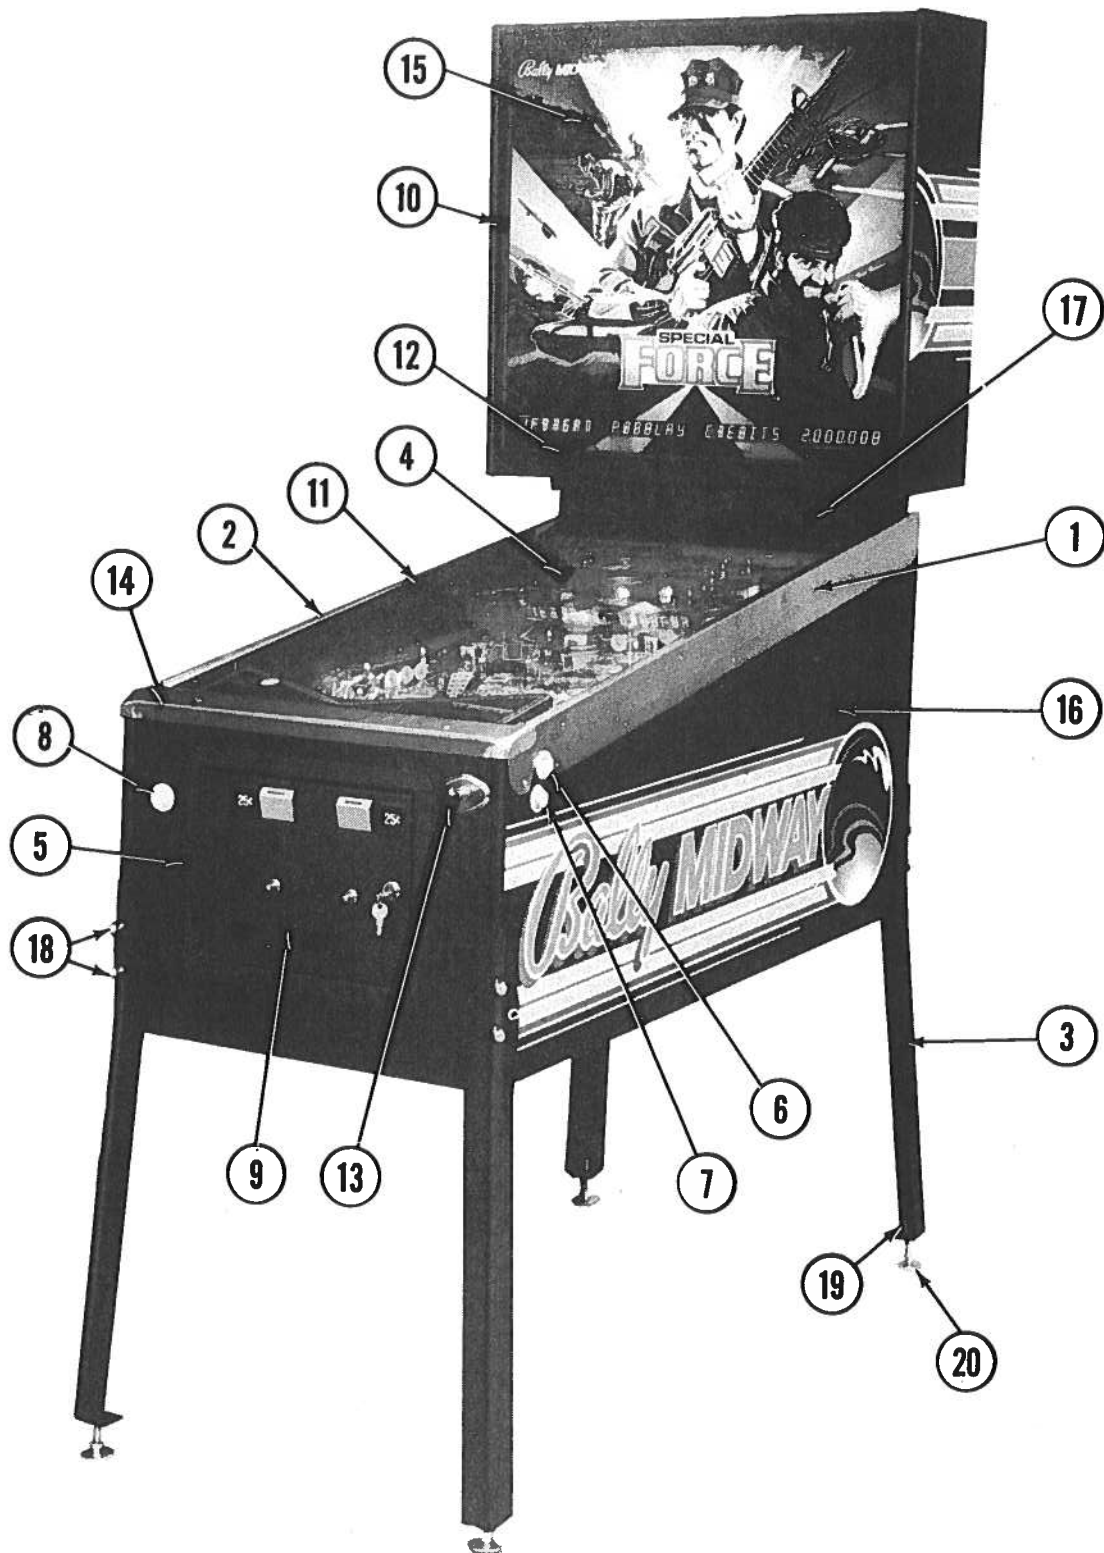


SPECIAL FORCE EXTERNAL PARTS - PARTS LIST

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	0365-00128-0100	SIDE MOLDING RIGHT
2	0365-00128-0200	SIDE MOLDING LEFT
3	0360-00937-00XF	LEG PAINTED (4 REQ'D.)
4	0360-00921-0000	GLASS: PLAYFIELD CLEAR TEMPERED
5	0090-00002-04BK	DOOR FRAME: LARGE, BLACK DOUBLE
6	0017-00042-0715	BUTTON: PUSH ROUND, WHITE (2 REQ'D.)
7	0017-00042-0305	BUTTON: PUSH ROUND, ORANGE (2 REQ'D.)
8	0017-00042-0633	BUTTON: PUSH ROUND, RED W/ANTI-SLAM
9	A982-00014-0013	COIN DOOR W/CABLE U.S.A. BLK-PIN (SEE COMMON ASSY.)
10	0905-00903-0600	GLASS-CHANNEL EDGE: 23-11/16 (3 REQ'D.)
11	0017-00042-0630	PLYFLD GLASS CHANNEL L=49 3/16 (2 REQ'D.)
12	0365-00932-0200	CHANNEL: GLASS LIFT L=25-5/16
13	A360-00280-0000	SHOOTER ROD ASSY. (SEE COMMON ASSY.)
14	A365-00079-0000	FRONT MOLDING ASSY.
15	0E47-00900-00XF	BACK GLASS SPECIAL FORCE
16	AE47-00500-0000	CABINET ASSY. SPECIAL FORCE
17	0365-00135-00XF	SPEAKER BEZEL
18 *	0017-00102-0063	3/8-16 X 3/8" UNSLOTTED HEX HEAD BOLT (8 REQ'D.)
19 *	0017-00103-0026	HEX NUT 3/8-16 (4 REQ'D.)
20 *	0017-00102-0082	LEG ADJUSTER (4 REQ'D.)
*		LOCATED IN SPARE PARTS KIT ASSY.

SPECIAL FORCE INTERNAL PARTS

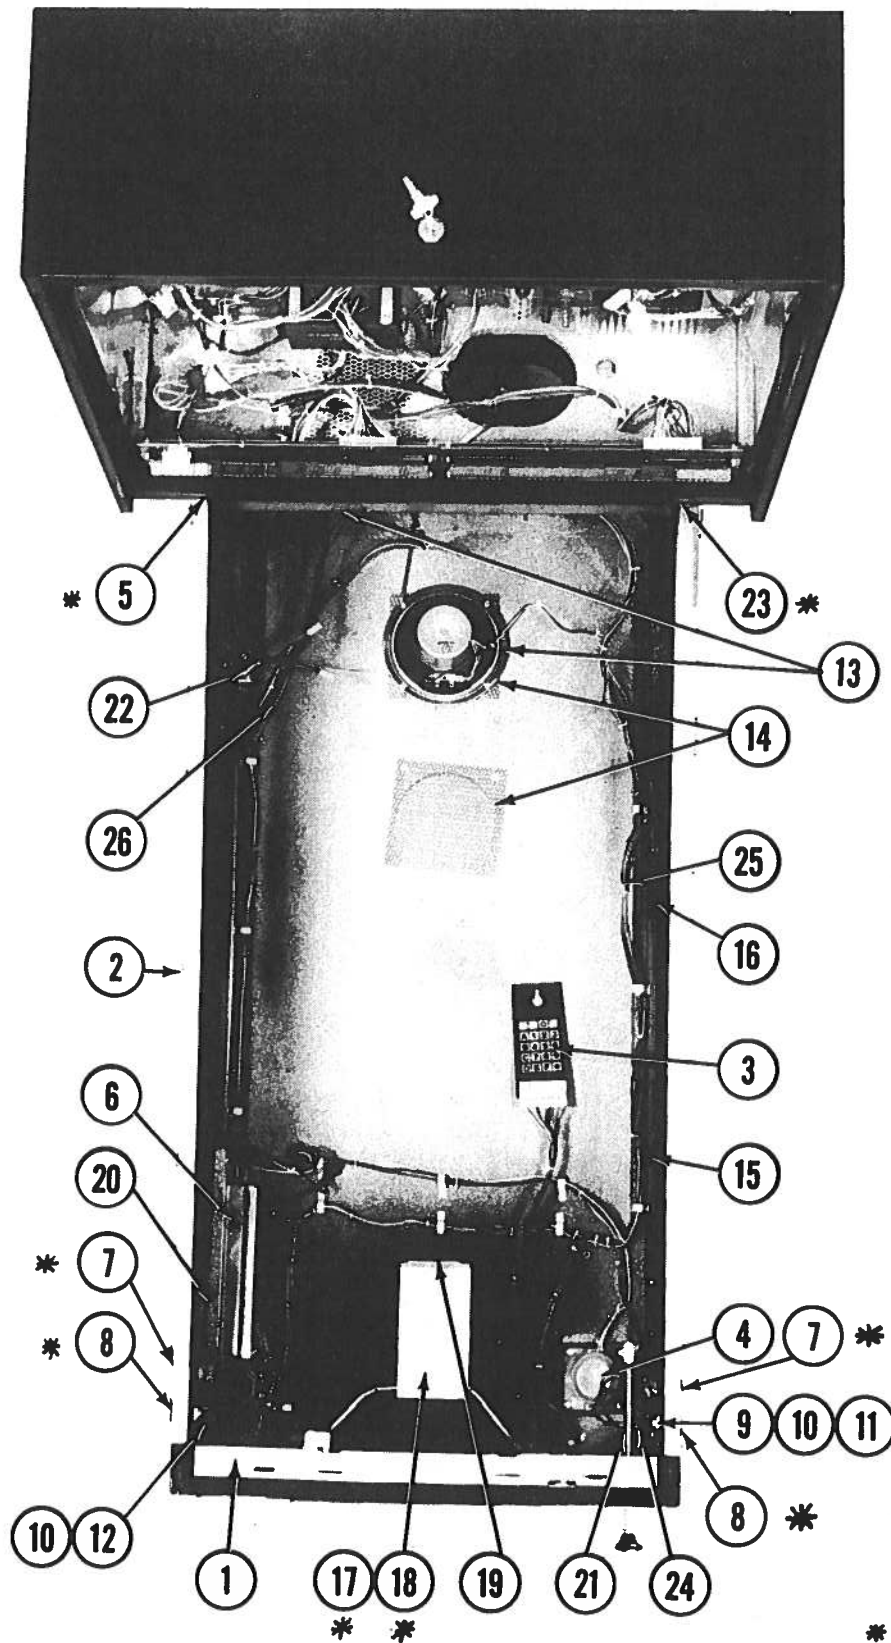

SPECIAL FORCE INTERNAL PARTS - PARTS LIST

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A365-00062-0000	FRONT RAIL ASSY.
2	AE47-00500-0000	CABINET ASSY.: SPECIAL FORCE
	0360-00953-00XF	TEENUT DOUBLE (4 REQ'D.)
	0365-00523-0100	CABINET: SPECIAL FORCE
3	A365-00074-0000	KEYPAD ASSY.
4	A945-00062-0000	ON/OFF SWITCH & PLATE ASSY.
	0017-00032-0105	SWITCH 2 PST 6 AMP .187 FAST
5	A365-00032-00XF	BRKT. & PIN ASSY. - LEFT HAND (NOT SHOWN)
6	A360-00264-0000	TILT BOARD ASSY.
	A360-00054-0000	SWITCH ASSY.
	0360-00199-00XF	BRKT: BALL TILT
	0360-00168-0000	BRKT: TILT HANGER
	0360-00170-0000	TILT HANGER
	0360-00312-0000	BRKT: OUTLET
	0360-00502-0000	TILT BOARD (WOOD)
	0360-00922-00XF	WIRE: PLUMB BOB
7	0017-00042-0715	PUSH BUTTON ASSY.: ROUND: WHITE (2 REQ'D.) (NOT SHOWN)
8	0017-00042-0305	PUSH BUTTON ASSY.: ROUND: ORANGE (2 REQ'D.) (NOT SHOWN)
9	A365-00094-0000	SWITCH ASSY.
10	0020-00276-0000	ACTUATOR LEAF
11	0360-00071-0000	SWITCH ASSY.
12	A370-00078-0000	SWITCH ASSY. (2 REQ'D.)
13	0017-00003-0570	SPEAKER 4 OHM 15 WATT 5-1/4" DIA. (2 REQ'D.) (NOT SHOWN)
14	0017-00009-0490	GRILLE: VENT 5-5/8 SQ. IN. (2 REQ'D.)

SPECIAL FORCE INTERNAL PARTS - PARTS LIST (CONT'D.)


ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
15	0365-00116-00XF	BRACKET: STAY ARM
16	0365-00115-00XF	STAY ARM: PLAYFIELD
17	A365-00064-0000	COIN BOX COVER & HANDLE ASSY. (NOT SHOWN)
18	0365-00123-0000	COIN BOX (NOT SHOWN)
19	0365-00124-0000	BRKT: LOCATING COIN BOX (UNDER COIN BOX)
20	0360-00116-00XF	PLATE: STOP KNOCKER
21	0967-00115-00XF	PLATE: BALL SHOOTER
22	A365-00043-0000	LINE CORD & FILTER ASSY.
	0017-00003-0114	FILTER: LINE 5A 115V
	0017-00003-0475	OUTLET CONVENIENCE
	0017-00003-0500	LINE CORD 3-CONDUCTOR 18AWG
23	A365-00050-00XF	BRKT. & PIN ASSY. - RIGHT HAND
24	0017-00007-0019	KEY HOOK: PIN DOOR
25	AE14-00006-0000	CABINET CABLE ASSY.
26	AB38-00032-0000	HIGH VOLTAGE CABLE ASSY.
27	AE47-00300-0000	CATALOG & BAG ASSY. (NOT SHOWN)
	0E47-00300-0100	MANUAL: OPERATING
	0E47-00300-0200	MANUAL: PARTS
28	M051-00E47-A035	INSTRUCTION CARD: SPECIAL FORCE (NOT SHOWN)
	M051-00E47-A036	SCORE CARD: SPECIAL FORCE (NOT SHOWN)


KNOCKER ASSEMBLY - PARTS LIST
PART NO. A360-00235-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	0017-00041-0635	BUMPER: PLUG RUBBER BLACK
2	A360-00011-00XF	PLUNGER & STRIKER ASSY.
3	0360-00318-00XF	BRKT & COIL
4	A360-00046-0000	COIL & TUBING ASSY.
5	0010-00274-0175	SPRING: COMPRESSION
6	0360-00909-00XF	FRAME: COIL
7	0017-00104-0073	SPRING WASHER .515" I.D., .875" O.D. & .013" TH. (NOT SHOWN)

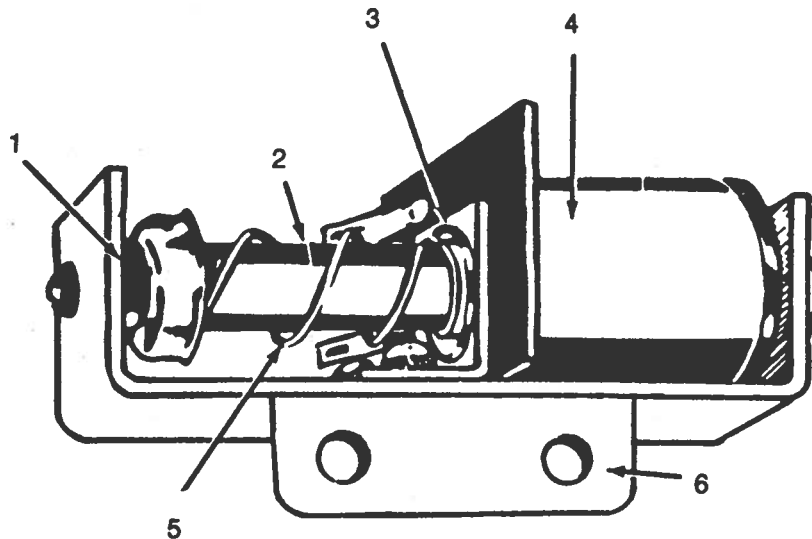

BALL SHOOTER ROD & SPRING ASSEMBLY
PART NO. A360-00280-0000

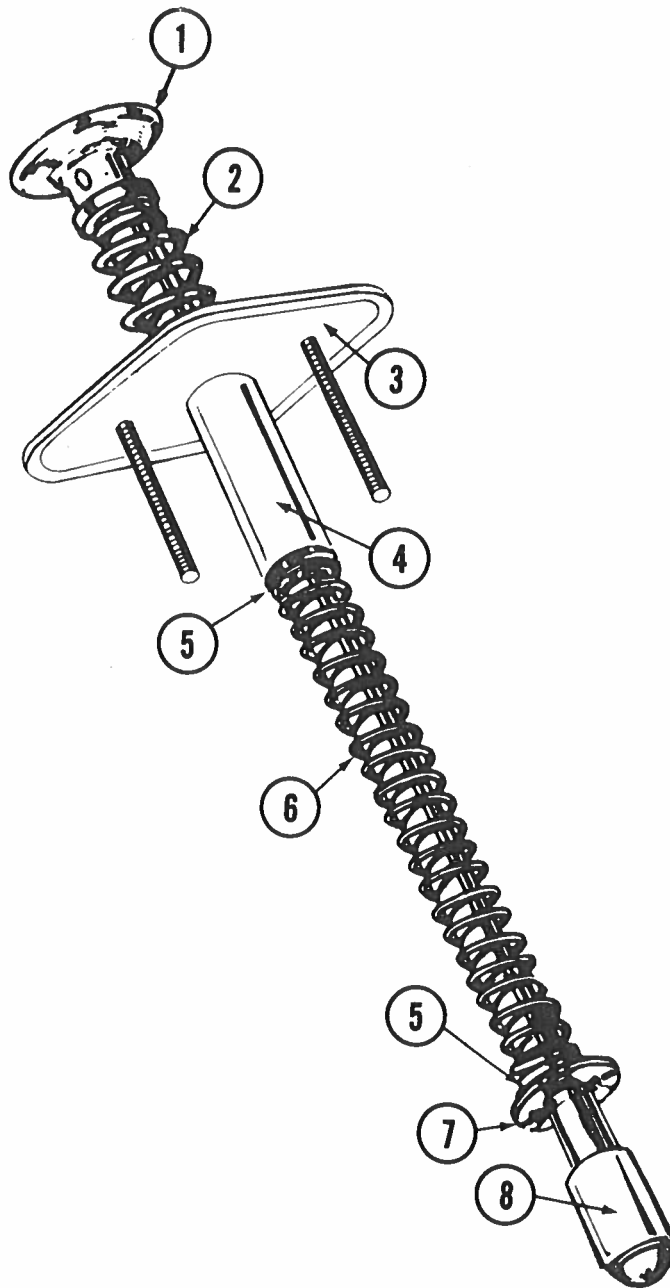


BALL SHOOTER ROD & SPRING ASSEMBLY - PARTS LIST
PART NO. A360-00280-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	0017-00009-0610	BALL - SHOOTER ROD ASSY. - MOLDED
2	0010-00271-0000	SPRING: COMPRESSION
3	A360-00040-00XF	SHOOTER GUIDE COVER WELD ASSY.
4	0017-00042-0347	GUIDE: BALL SHOOTER
5	0017-00104-0076	FLAT WASHER: .395 I.D., .500" O.D. & ,032" TH. (3 REQ'D.)
6	0010-00274-0024	SPRING: COMPRESSION
7	0017-00100-0037	E-RING .375 DIA.
8	0017-00041-0631	SHOOTER-TIP: ROUND, RUBBER

BACK CABINET ASSEMBLY
PART NO. AE47-00008-0000

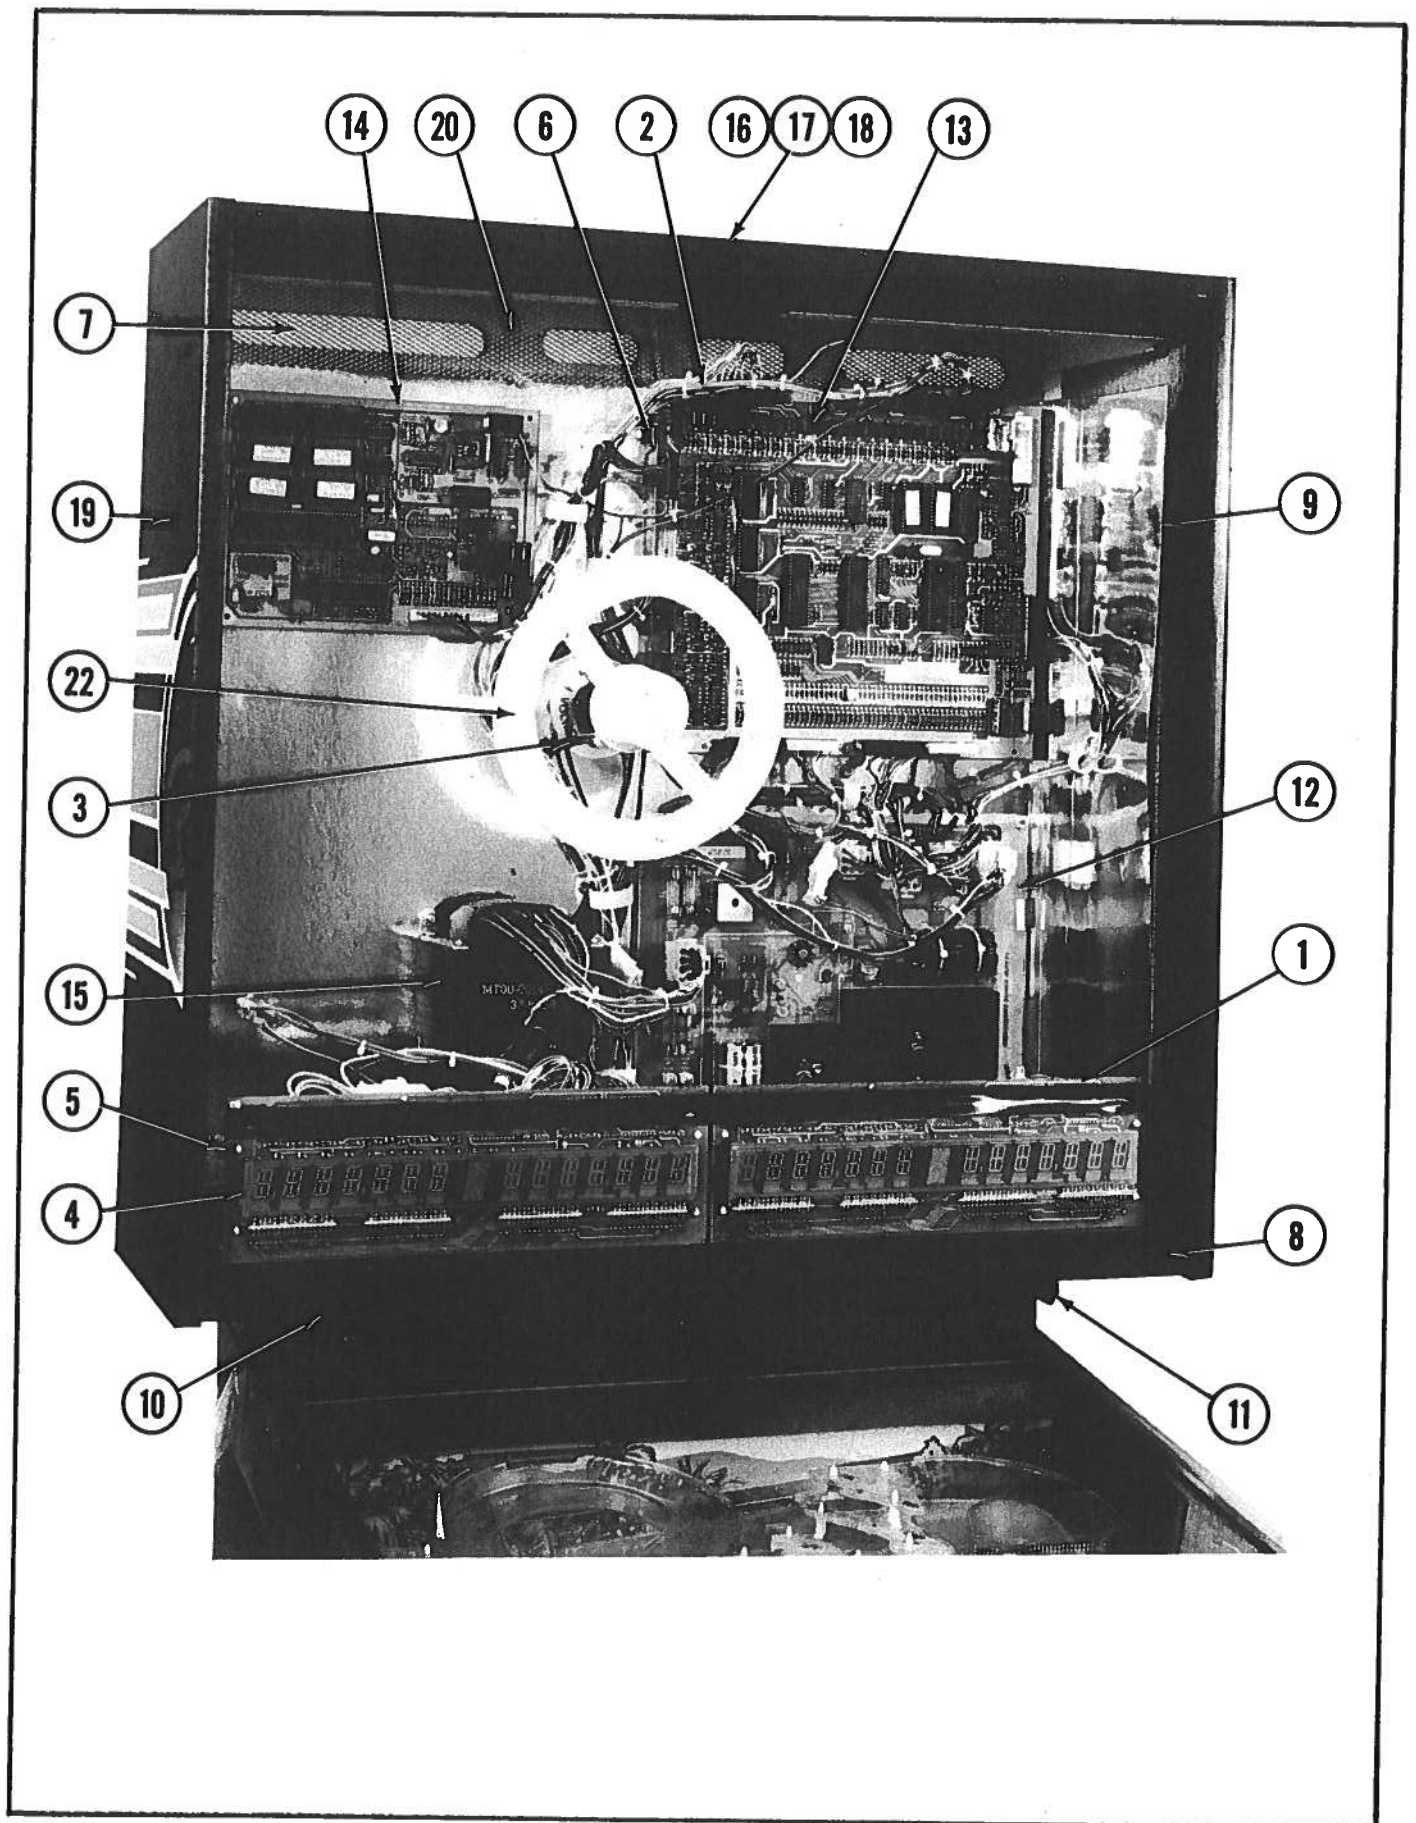


BACK CABINET ASSY.- PARTS LIST
PART NO. AE47-00008-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	AE14-00009-0100	DISPLAY CABLE ASSY.
2	AE14-00009-0200	CONTROLLER CABLE ASSY.
3	AE14-00034-0000	CLEAT RECEPTACLE & CABLE ASSY.
4	B084-91851-E000	DUAL DISPLAY MODULE BOARD ASSY. (2 REQ'D.)
5	0365-00143-0000	BRKT: DISPLAY P.C. BOARD MTG.
6	0365-00153-0000	BRKT: P.C. BOARD SUPPORT (4 REQ'D.)
7	0365-00104-00XF	GRILLE: VENT
8	0365-00960-0100	RETAINER: GLASS L=26-7/16
9	0365-00963-0000	FOIL: BACK-BOX: FLUORESCENT
10	0365-00105-00XF	BRKT: PIVOT
11	0365-00114-00XF	BRKT: PIVOT-OPEN
12	AE47-00017-0000	6803 POWER MOD ASSY. W/SPACER ASSY.
	0017-00003-0169	FUSE: ABC 3AG 5A 250V FAST-BLOW
13	B084-91786-AE47	PROG 6803 CONTROL BOARD ASSY.
14	B084-91864-AE47	PROG SOUNDS DELUXE ASSY.
15	MT00-00147-A000	XFRMR: POWER
16	0017-00005-0050	KEYS: 750 SERIES DOOR LOCK W/2 INDIVIDUAL
17	0017-00005-0209	PLATE: LOCK
18	0017-00005-0042	CAM: BACK DOOR LOCK
19	0365-00524-0300	BACK BOX: SPECIAL FORCE, WOOD
20	0017-00009-0490	VENT: GRILL 5-5/8 SQ. IN. (NOT SHOWN)
21	0365-00142-0000	BRKT: MTG P.C. BOARD (4 REQ'D.) (NOT SHOWN)
22 *	0017-00003-0571	LAMP: CIRCLITE-MISTER 8" 22W
23	0017-00003-0007	FUSE: MDA 3AG 250V SLO-BLOW (NOT SHOWN)
24	0365-00967-0000	SHIELD, DISPLAY P.C.B. (4 REQ'D.) (NOT SHOWN)
*		NOT PART OF BACK CABINET ASSY. & MUST BE ORDERED SEPARATELY

TOP MOUNTED KICKER (BALL RETURN) ASSEMBLY
PART NO. A360-00234-0000

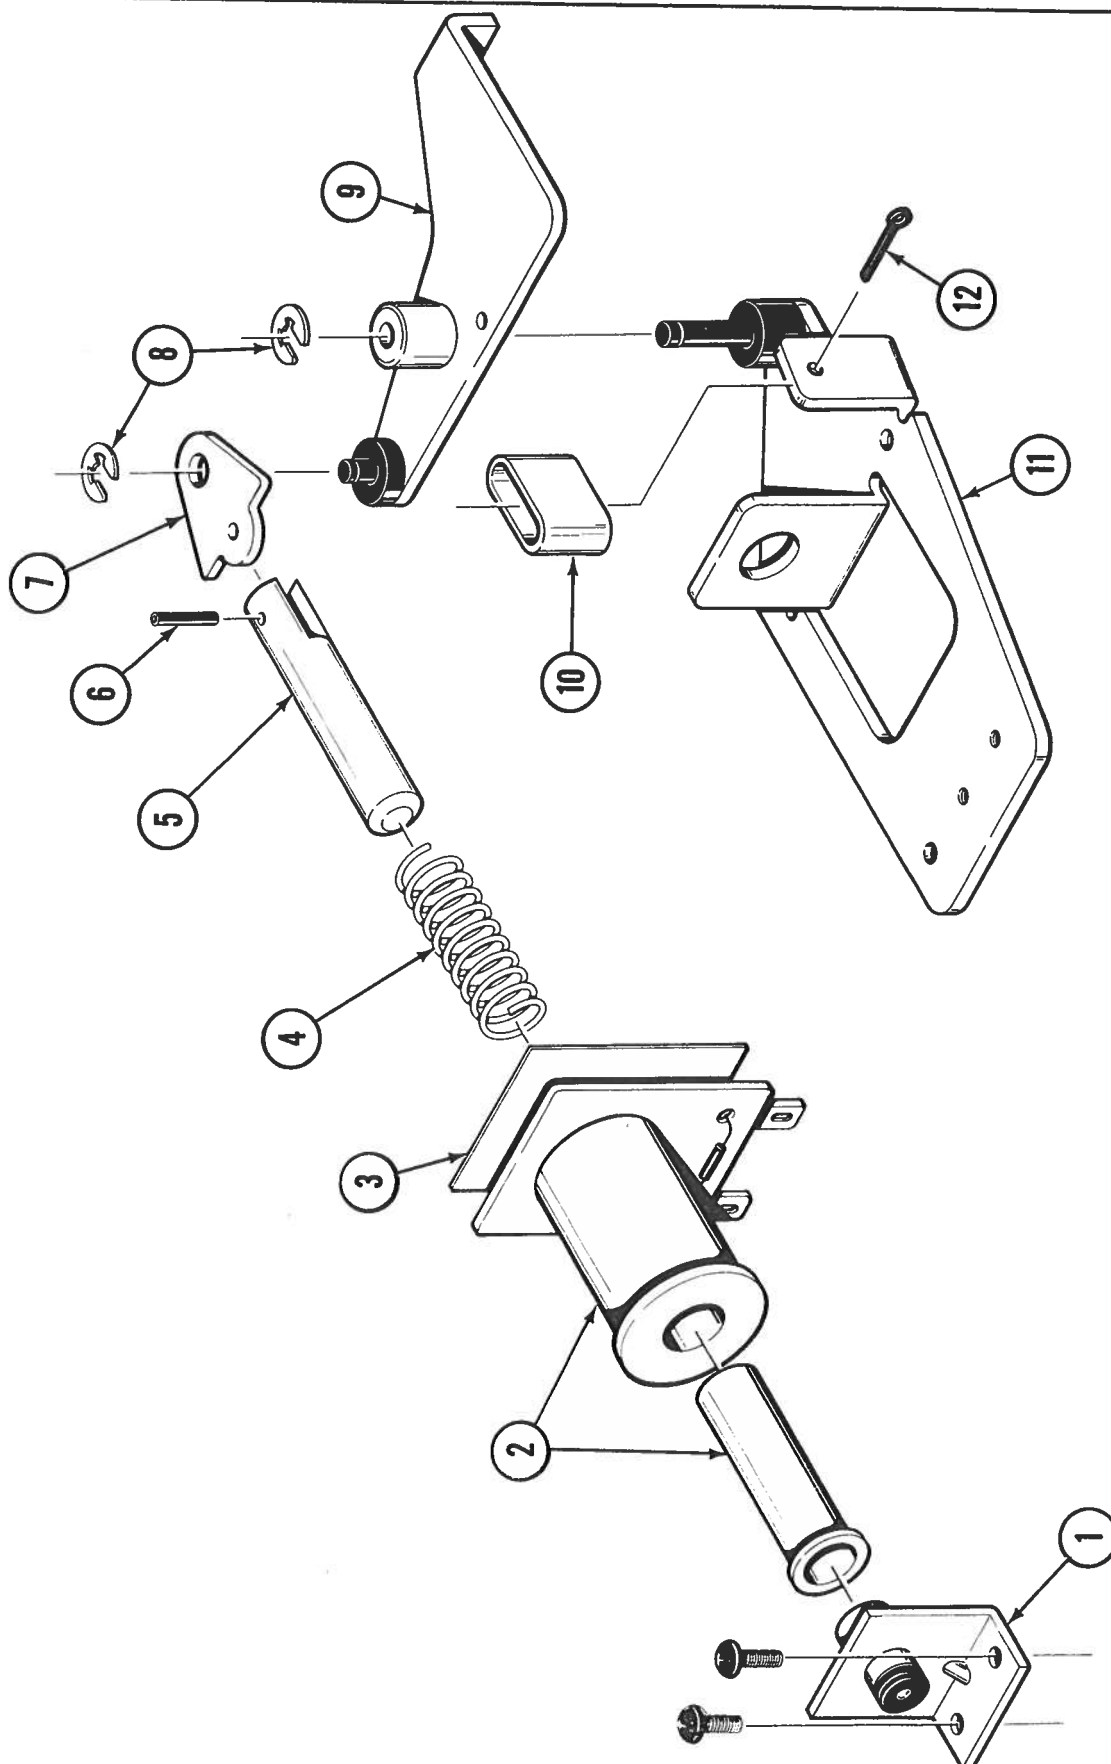


TOP MOUNTED KICKER (BALL RETURN) ASSEMBLY - PARTS LIST
PART NO. A360-00234-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A360-00013-0000	CORE PLUG ASSY.
2	A360-00044-0000	COIL & TUBING ASSY.
	103E-00002-0015	IN4004GP 400V 1A DIODE
3	0360-00901-0000	FISHPAPER INSULATOR
4	0010-00274-0189	COMPRESSION SPRING
	A360-00278-0000	PLUNGER & LINK ASSY. (ITEMS 5, 6, & 7)
5	0360-00735-00XF	PLUNGER
6	0017-00007-0073	ROLL PIN
7	0360-00941-0000	KICKER LINK
8	0017-00100-0116	RING RER .218" DIA, (2 REQ'D)
9	A360-00036-0000	KICKER ARM ASSY. (BALL RETURN)
10	0017-00042-0346	STRIKER RING
11	A360-00037-0000	BASE PLATE ASSY.
12	0017-00007-0124	COTTER PIN

THUMPER BUMPER ASSEMBLY
PART NO. A967-00053-0100

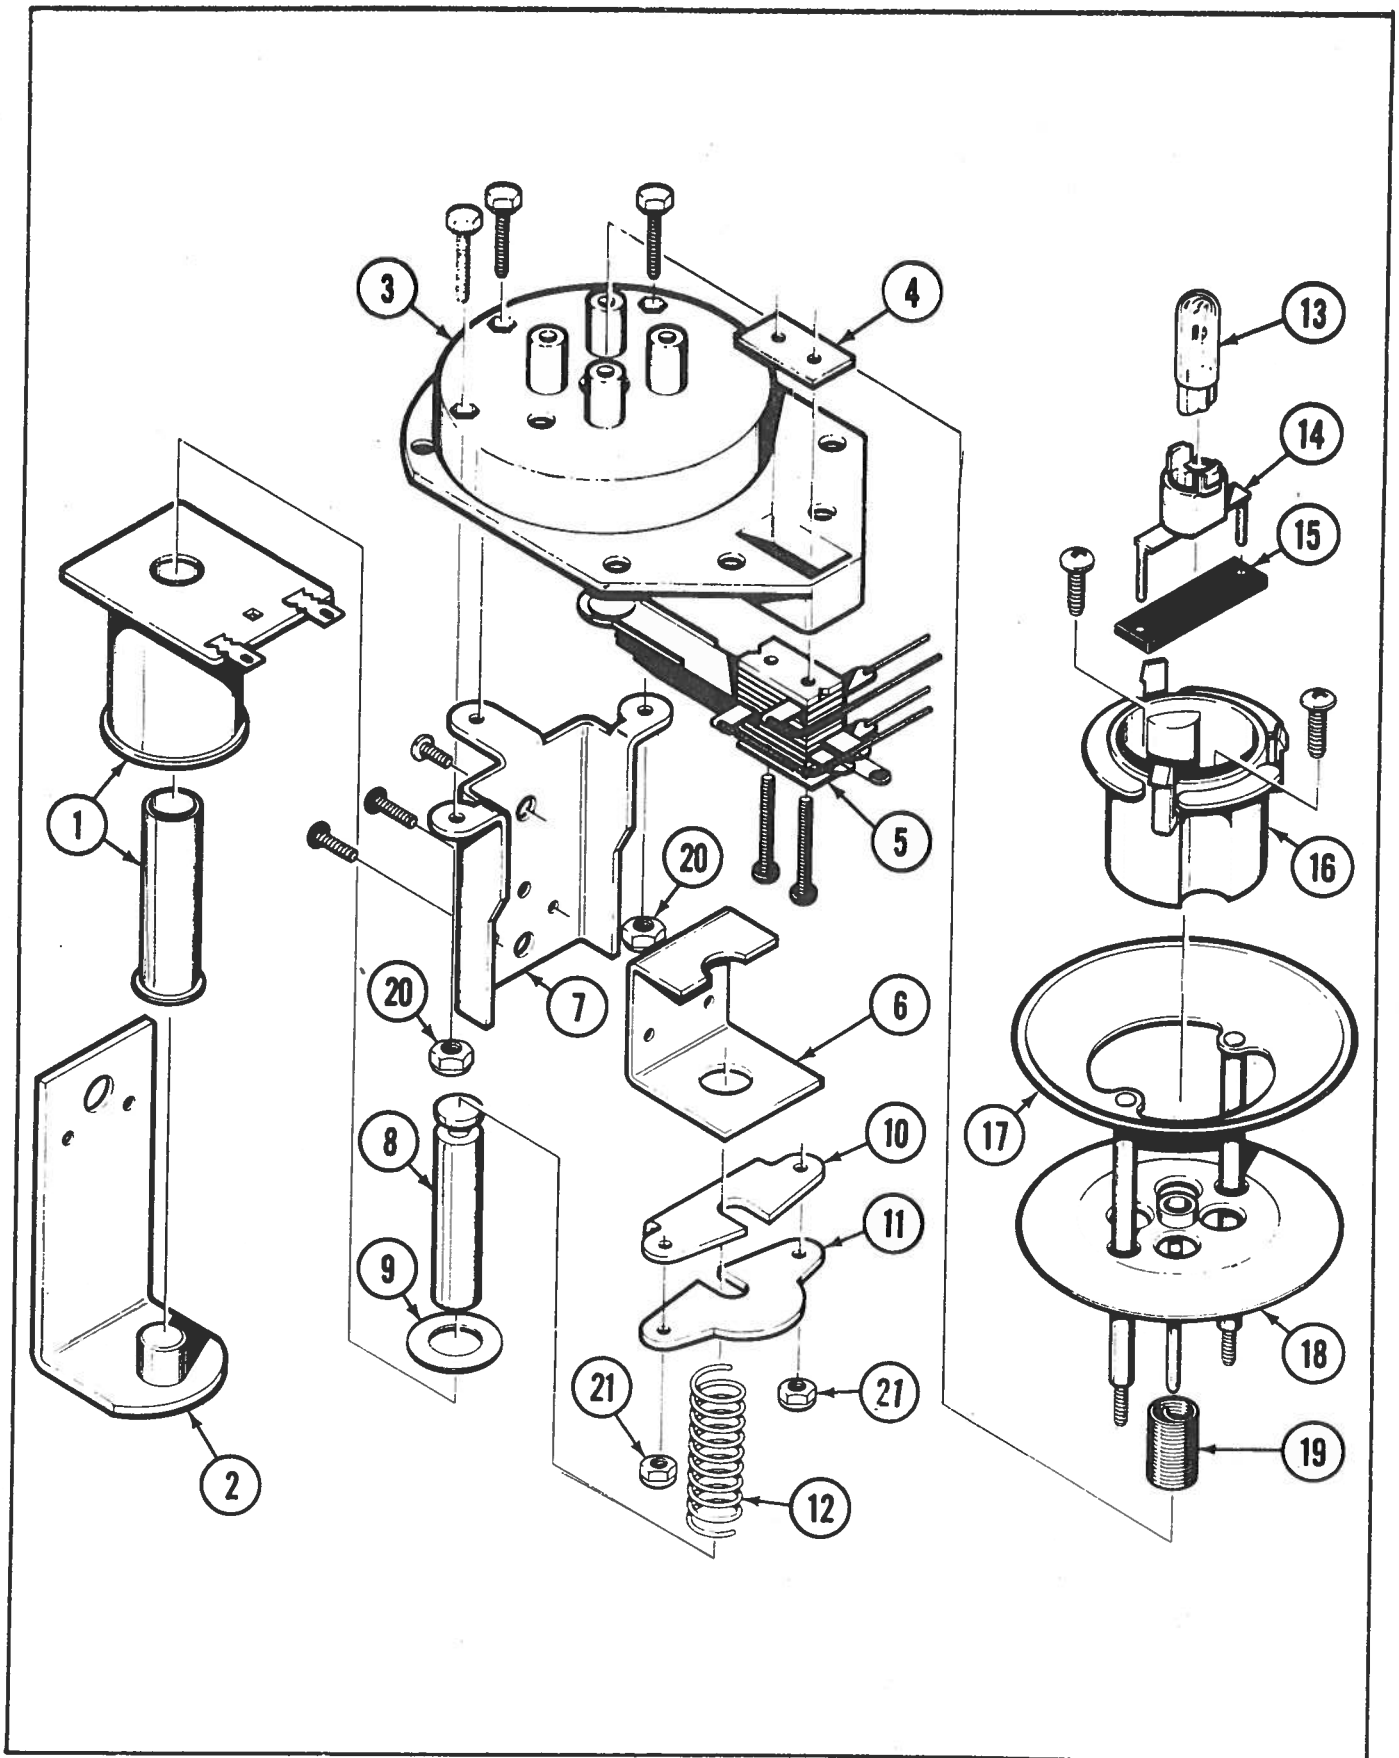


THUMPER BUMPER ASSEMBLY - PARTS LIST
PART NO. A967-00053-0100

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A360-00044-0000	COIL & TUBING ASSY.
	103E-00002-0015	IN4004GP 400V 1A DIODE
2	A967-00010-0000	CORE PLUG ASSY.
3	0017-00042-0452	BASE: THUMPER BUMPER - WHITE
4	0020-00202-0000	SWITCH PLATE
5	A967-00074-0100	MAKE SWITCH ASSY. - THUMPER BUMPER
6	0967-00117-00XF	BRACKET - THUMPER BUMPER PLUNGER
7	0967-00129-00XF	MOUNTING BRACKET: THUMPER BUMPER
8	0967-00705-00XF	PLUNGER
9	0017-00104-0073	SPRING WASHER .515" I.D., .875" O.D. & .013" TH.
10	0967-00116-00XF	PLATE
11	0967-00904-0000	PLATE
12	0010-00274-0196	COMPRESSION SPRING
13	0017-00003-0501	LAMP, #555: WEDGE BASE
14	0017-00031-0060	SOCKET: LAMP (WEDGE BASE)
15	0090-00409-0000	PLATE
16	0017-00042-0460	BODY: THUMPER BUMPER - WHITE
17	A967-00013-0000	FLANGE & STUD ASSY.
18	0017-00042-0444	WAFER: THUMPER BUMPER - WHITE
19	0010-00274-0177	COMPRESSION SPRING
20	0017-00103-0041	NUT: 8-32 LOCKING (3 REQ'D.)
21	0017-00103-0052	NUT: 6-32 LOCKING (2 REQ'D.)

SLINGSHOT KICKER ASSEMBLY
PART NO. A967-00059-0000

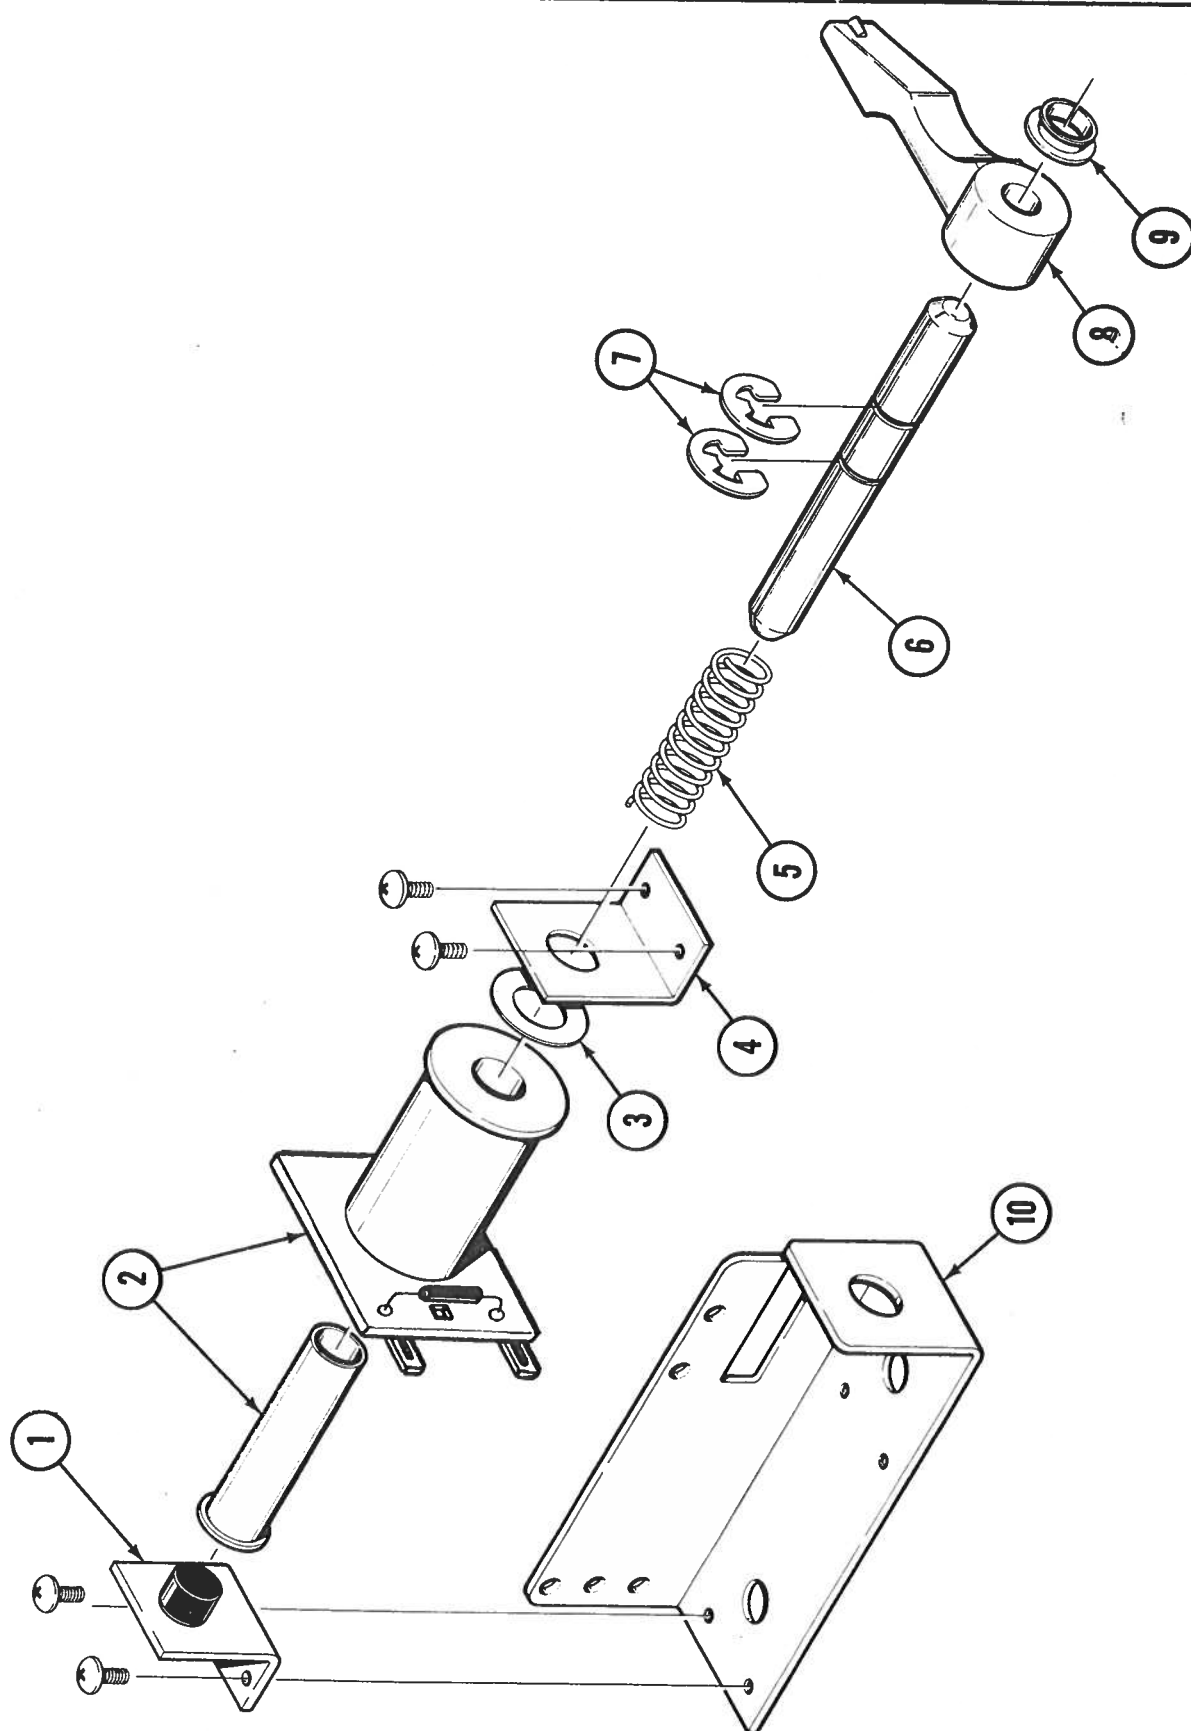


**SLINGSHOT KICKER ASSY.
PART NO. A967-00059-0000**

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A967-00011-0000	CORE PLUG & BRACKET ASSY.
2	A967-00046-0000	COIL & TUBING ASSY.
	103E-00002-0015	IN4004GP 400V 1A DIODE
3	0017-00104-0073	SPRING WASHER .515" I.D., .875" O.D. & .013" TH.
4	0360-00318-00XF	COIL BRACKET
5	0010-00274-0212	COMPRESSION SPRING
6	0967-00701-00XF	PLUNGER
7	0017-00100-0115	RING RER .438" DIA. (2 REQ'D)
8	0967-00901-0000	KICKER-ARM: SLINGSHOT
9	0017-00042-0430	NYLINER: SNAP-IN, COIL
10	096/-00130-00XF	MOUNTING BRACKET: SLINGSHOT

COIN DOOR WITH CABLE ASSEMBLY - PINBALL GAME - U.S.A. 25¢
PART NO. A982-00014-0013

FRONT DOOR ASSEMBLY - PINBALL GAME
U.S.A. 25¢

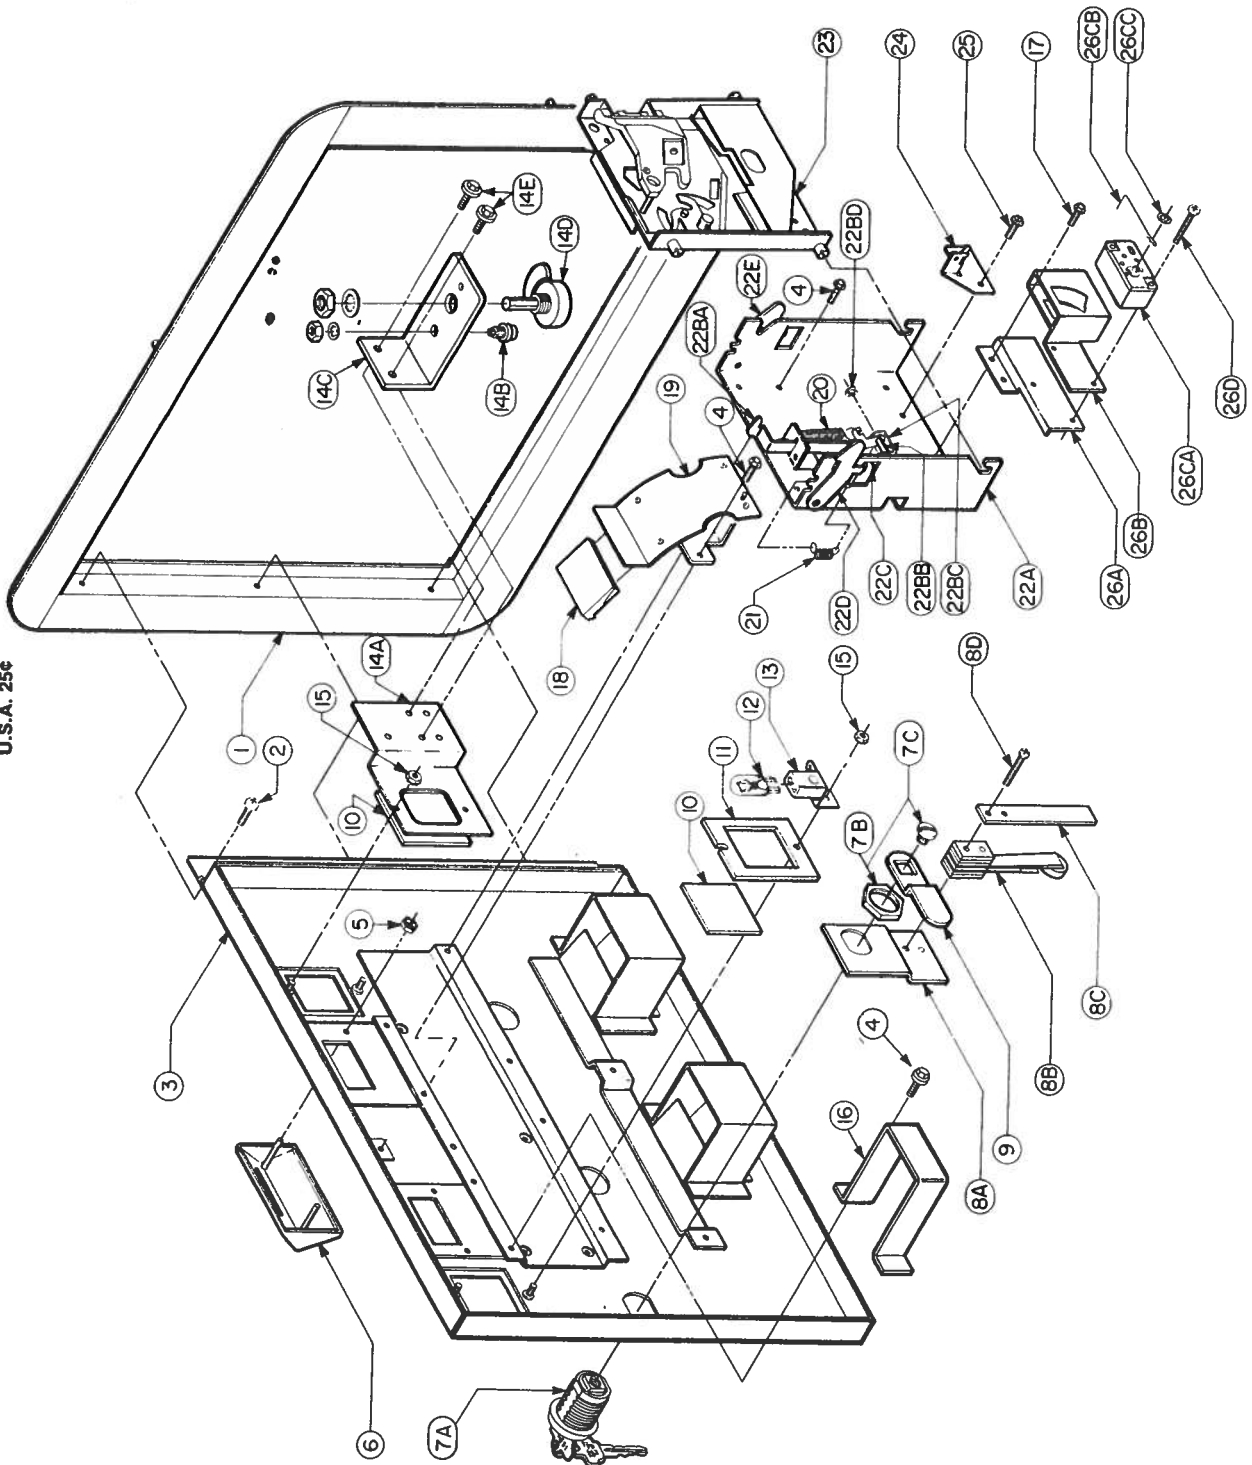

COIN DOOR WITH CABLE ASSEMBLY - PINBALL GAME - U.S.A. 25¢ - PARTS LIST
PART NO. A982-00014-0013

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1*	0090-00002-04BK	DOUBLE ENTRY COIN DOOR FRAME
2*	0017-00101-0175	#8 X 5/16 PHIL. TRS. HD. SCREW (3 REQ'D.)
3	A090-00072-06BK	COIN DOOR: 2-HOLE PAINTED
4	0017-00101-0123	#8 X 1/4 UNSLOT. HEX HD. SCREW (9 REQ'D.)
5	0017-00103-0059	PUSH NUT (4 REQ'D.)
6	0090-00912-0000	COIN ENTRY PLATE - (2 REQ'D.)
7A	0017-00005-0200	LOCK - INDIV. KEYED W/2 KEYS
7B	0017-00103-0079	3/4 HEX NUT
7C	0017-00101-0125	#10 - 32 X 1/4 SLOT. PAN HD. SCREW
8	A090-00096-0000	ANTI-SLAM SWITCH & BRKT. ASSY.
8A	0090-00185-01XF	DOOR TILT SWITCH BRKT.
8B	A090-00095-0000	DOOR ANTI-SLAM SWITCH
8C	0090-00126-01XF	SWITCH BACK-UP PLATE
8D	0017-00101-0155	#4-40 X 9/16 PHIL. PAN HD. SCREW (2 REQ'D.)
9	0017-00005-0238	DOOR CAM
10	0090-00903-9500	25¢ WINDOW (2 REQ'D.)
11	0090-00143-0000	COIN PLEX RETAINER
12	0017-00003-0501	6.3 VOLT LAMP - WEDGE BASE #555 (2 REQ'D.)
13	0017-00031-0048	WEDGE SOCKET W/BRKT. (2 REQ'D.)
14	A090-00647-0000	BRKT. & SWITCH ASSY.
14A	0090-00179-0000	CABLE & SWITCH MTG. BRKT.
14B	0017-00032-0120	PUSH-BUTTON SWITCH
14C	0360-00171-00XF	BRACKET: VOLUME CONTROL MOUNTING
14D	105E-00003-0001	POT: 0-100 OHMS WIREWOUND
14E	0017-00101-0123	#8 X 1/4 UNSLOT. HEX HD. SCREW (2 REQ'D.)
*		NOT PART OF ABOVE ASSEMBLY & MUST BE ORDERED SEPARATELY

COIN DOOR WITH CABLE ASSEMBLY - U.S.A. 25¢ - BLACK - PIN - PARTS LIST (CON'T.)
PART NO. A982-00014-0013

ORDER BY PART NUMBER ONLY


ITEM	PART NO.	DESCRIPTION
15	0017-00103-0084	#6-32 HEX NUT W/SEMS (4 REQ'D.)
16	0090-00434-00XF	SWITCH GUARD
17	0017-00101-0124	#6 X 1/4 UNSLOT HEX HD. SCR. (4 REQ'D.)
18	0090-00911-0000	INSULATOR (2 REQ'D.)
19	A090-00087-0000	COIN CHUTE & TOP ASSY. (2 REQ'D.)
	A090-00081-00XF	COIN CHUTE & BRKT. ASSY.
	0090-00172-00XF	COIN CHUTE TOP
	0017-00101-0140	#4-40 X 5/16 PHIL. PAN HD. (4 REQ'D.)
	0017-00007-0162	COTTER PIN
20	0010-00134-0000	SPRING (2 REQ'D.)
21	0010-00181-0000	SPRING (2 REQ'D.)
22	A090-00115-0000	COIN ACCEPTOR FRAME SUB-ASSY. (2 REQ'D.)
22A	A090-00118-0000	COIN ACCEPTOR & BUSH. ASSY.
22B	A090-00116-0000	REJECT LEVER ASSY.
22BA	0090-00182-00XF	REJECT LEVER
22BB	0090-00129-00XF	POST: PIVOT REJECTOR
22BC	0090-00167-00XF	PIVOT LEVER
22BD	0017-00100-0012	E-RING .125 DIA.
22C	0017-00007-0083	1/8 X 1-5/8 ROLL PIN
22D	0093-00145-01XF	LATCH - LEFT
22E	0093-00145-00XF	LATCH - RIGHT
	0017-00072-0036	120 X .218 X 7/32 RIVET (2 REQ'D.)
	0090-00910-00XF	REJECT BUTTON

COIN DOOR WITH CABLE ASSEMBLY - U.S.A. 25¢ - BLACK - PIN - PARTS LIST (CON'T.)
PART NO. A982-00014-0013

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	0090-00183-0000	BUTTON STOP
	0017-00101-0140	#4-40 X 5/16 PHIL. PAN HD.
23	0151-00086-0000	COIN ACCEPTOR W/STRING CUTTER (2 REQ'D.)
24	A090-00064-0100	ANTI-PENNY DEVICE (2 REQ'D.)
25	0017-00101-0099	#6 X 1/4 SLT. HEX HD. M.S. (4 REQ'D.)
26	A090-00077-0000	COIN GUIDE & SWITCH ASSY. (2 REQ'D.)
26A	0090-00162-00XF	COIN SWITCH MTG. BRKT.
26B	0017-00005-0203	COIN SWITCH CHUTE
26C	A090-00059-0400	COIN SWITCH & WIRE ASSY.
26CA	0017-00005-0195	COIN SWITCH
26CB	0010-00599-0000	COIN SWITCH WIRE
26CC	0017-00007-0015	PUSH-ON RING
26D	0017-00101-0147	#4-40 X 3/4 PHIL. PAN. HD. (2 REQ'D.)
		ADDITIONAL PARTS LIST
	0090-00184-0000	COIN SWITCH COVER (2 REQ'D.)
	A982-00015-0007	PINBALL COIN DOOR CABLE (STANDARD)

FLIPPER ASSEMBLY - SINGLE SWITCH LEFT
PART NO. AC70-00022-0200

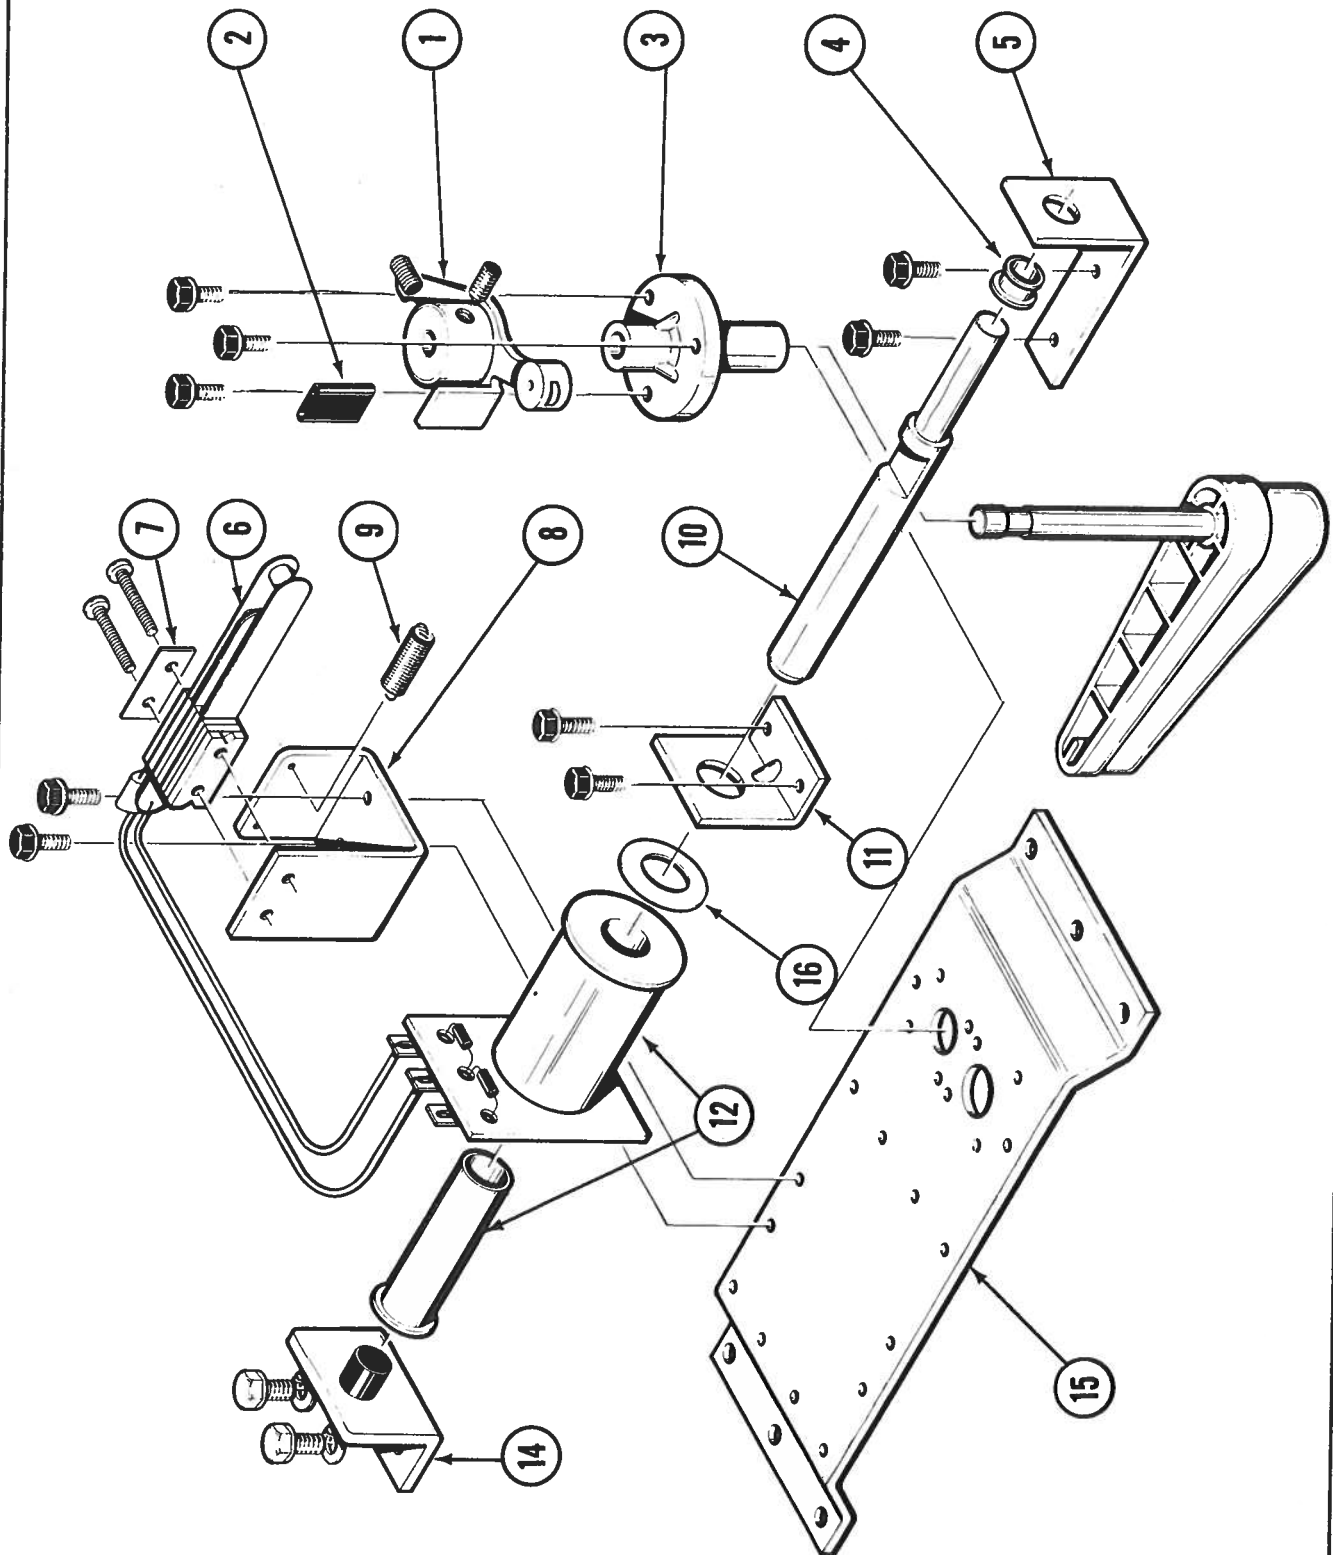


FLIPPER ASSY - SINGLE SWITCH LEFT - PARTS LIST
PART NO. AC70-00022-0200

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	A360-00038-0000	LEVER ARM ASSY. (LEFT) (ITEMS 1 & 2)
1	A365-00001-0100	CAP, HUB & LEVER ARM ASSY.
2	0360-00945-0000	TUBING 5/16 X 1/2
3	0017-00042-0413	FLIPPER BEARING
4	0017-00042-0418	NYLINER: SNAP-IN COIL
5	0360-00152-01XF	BRKT: LEFT FLIPPER STOP
	A365-00048-0000	SWITCH & BRKT. ASSY. (LEFT) (ITEMS 6 & 7)
6	A365-00045-0000	FLIPPER BREAK SWITCH ASSY.
7	0020-00202-0000	SWITCH PLATE
8	0360-00145-00XF	SWITCH BRACKET
9	0010-00275-0353	EXTENSION SPRING
10	0360-00718-00XF	PLUNGER
11	A360-00318-00XF	COIL BRACKET
12	AC70-00026-0000	COIL & TUBING ASSY.
13	A365-00024-0000	CORE PLUG & BRACKET ASSY.
14	0365-00101-00XF	FLIPPER MOUNTING BRACKET
15	0017-00104-0073	SPRING WASHER .515" I.D., .875" O.D. & .013" TH.

FLIPPER ASSEMBLY - SINGLE SWITCH RIGHT
PART NO. AC70-00022-0100

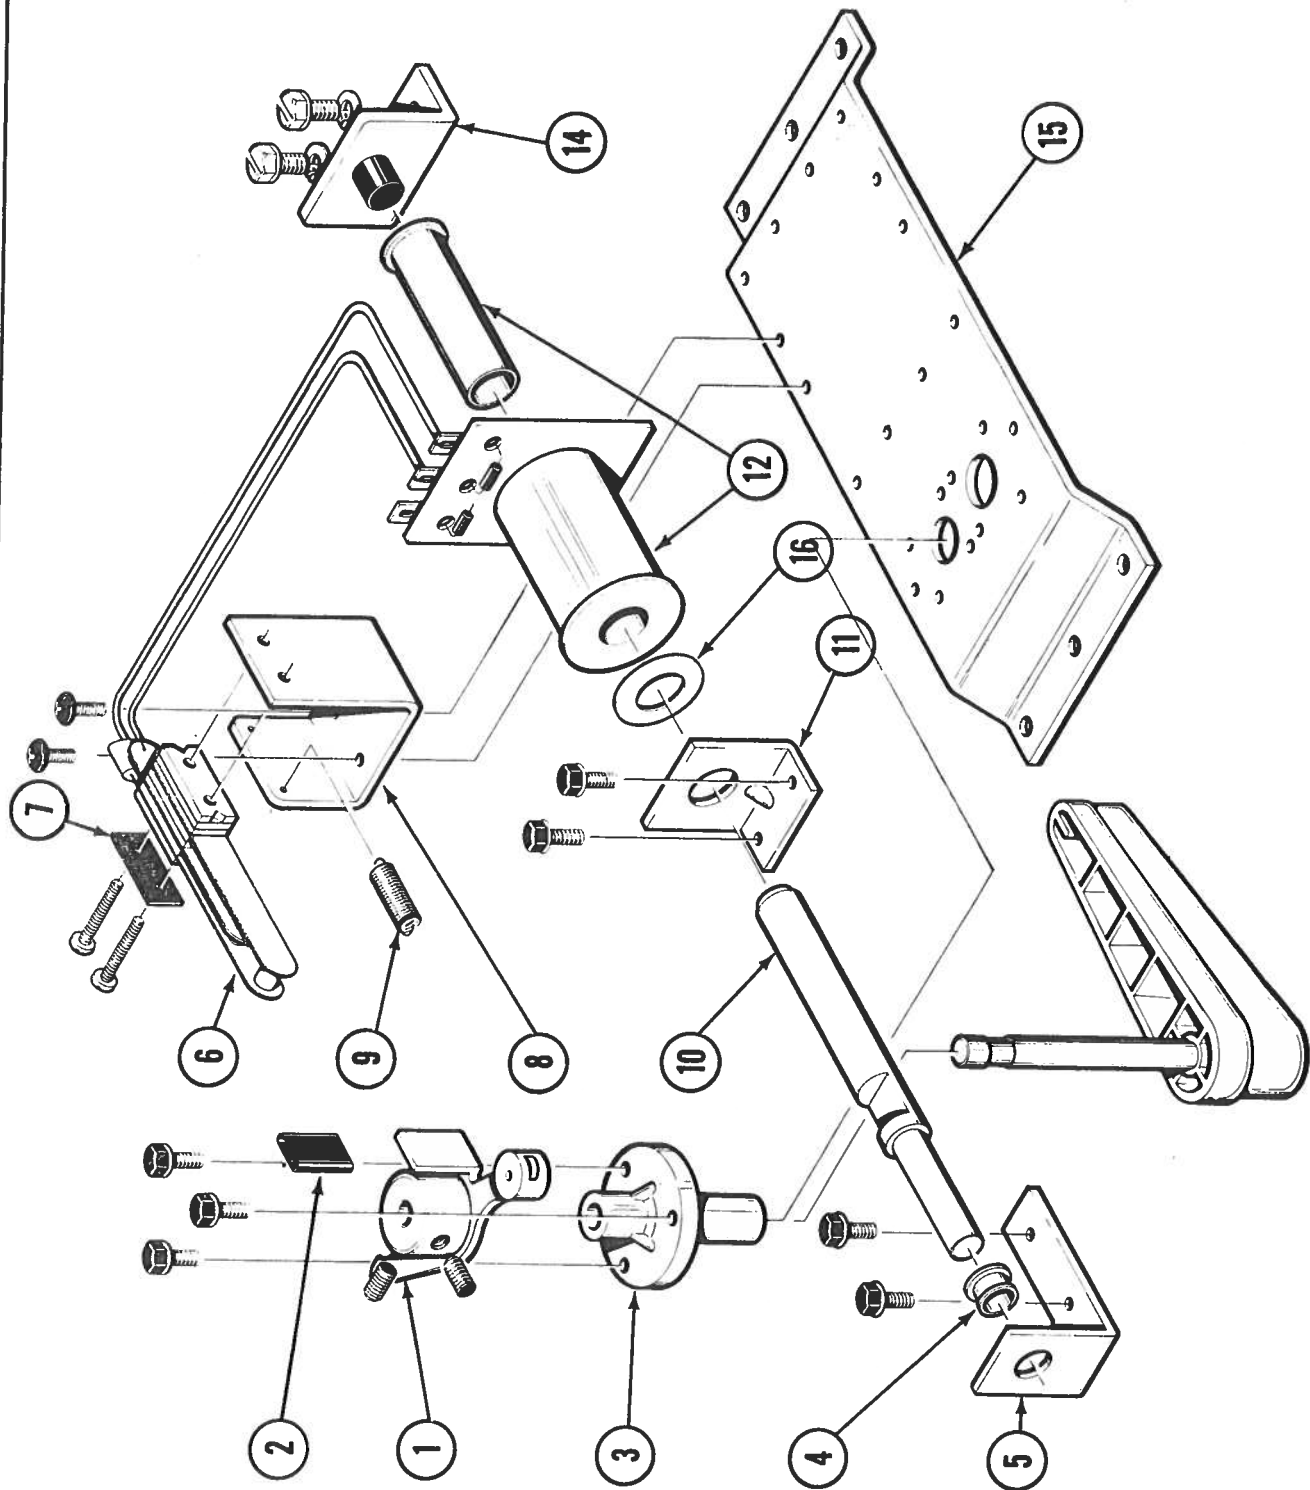

FLIPPER ASSY - SINGLE SWITCH RIGHT - PARTS LIST
PART NO. AC70-00022-0100


ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	A360-00039-0000	LEVER ARM ASSY. (RIGHT) (ITEMS 1 & 2)
1	A365-00001-0000	CAP, HUN & LEVER ARM ASSY. (RIGHT)
2	0360-00945-0000	TUBING 5/16 X 1/2
3	0017-00042-0413	FLIPPER BEARING
4	0017-00042-0418	NYLINER: SNAP-IN COIL
5	0360-00152-02XF	BRKT: RIGHT FLIPPER STOP
	A365-00047-0000	SWITCH & BRKT. ASSY. (RIGHT) (ITEMS 6 & 7)
6	A365-00045-0000	FLIPPER BREAK SWITCH ASSY.
7	0020-00202-0000	SWITCH PLATE
8	0360-00145-00XF	SWITCH BRACKET
9	0010-00275-0353	EXTENSION SPRING
10	0360-00718-00XF	PLUNGER
11	0360-00318-00XF	COIL BRACKET
12	AC70-00026-0000	COIL & TUBING ASSY.
14	A365-00024-0000	CORE PLUG & BRACKET ASSY.
15	0365-00101-00XF	FLIPPER MOUNTING BRACKET
16	0017-00104-0073	SPRING WASHER .515" I.D., .875" O.D. & .013" TH.

SPECIAL FORCE LAMP SOCKETS - PARTS LIST


ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	0017-00031-0054	SOCKET ASSY. W/DIODE IN4004
2	0017-00031-0060	SOCKET LAMP THUMPER BUMPER
3	0017-00031-0070	SOCKET ASSY. W/DIODE 1N4004
4	0017-00031-0072	SOCKET ASSY. W/DIODE 1N4004
5	0017-00031-0077	SOCKET LAMP W/O DIODE

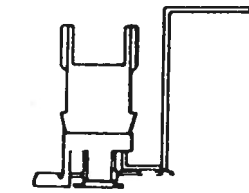


LAMP SOCKET

1

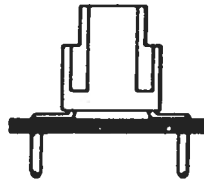


LAMP SOCKET

2

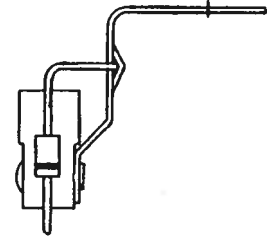


LAMP SOCKET

3

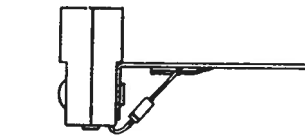

LAMP SOCKET


4

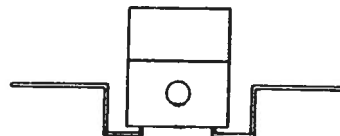

LAMP SOCKET

5

BOTTOM PLAYFIELD ASSEMBLY
PART NO. AE47-00004-0000

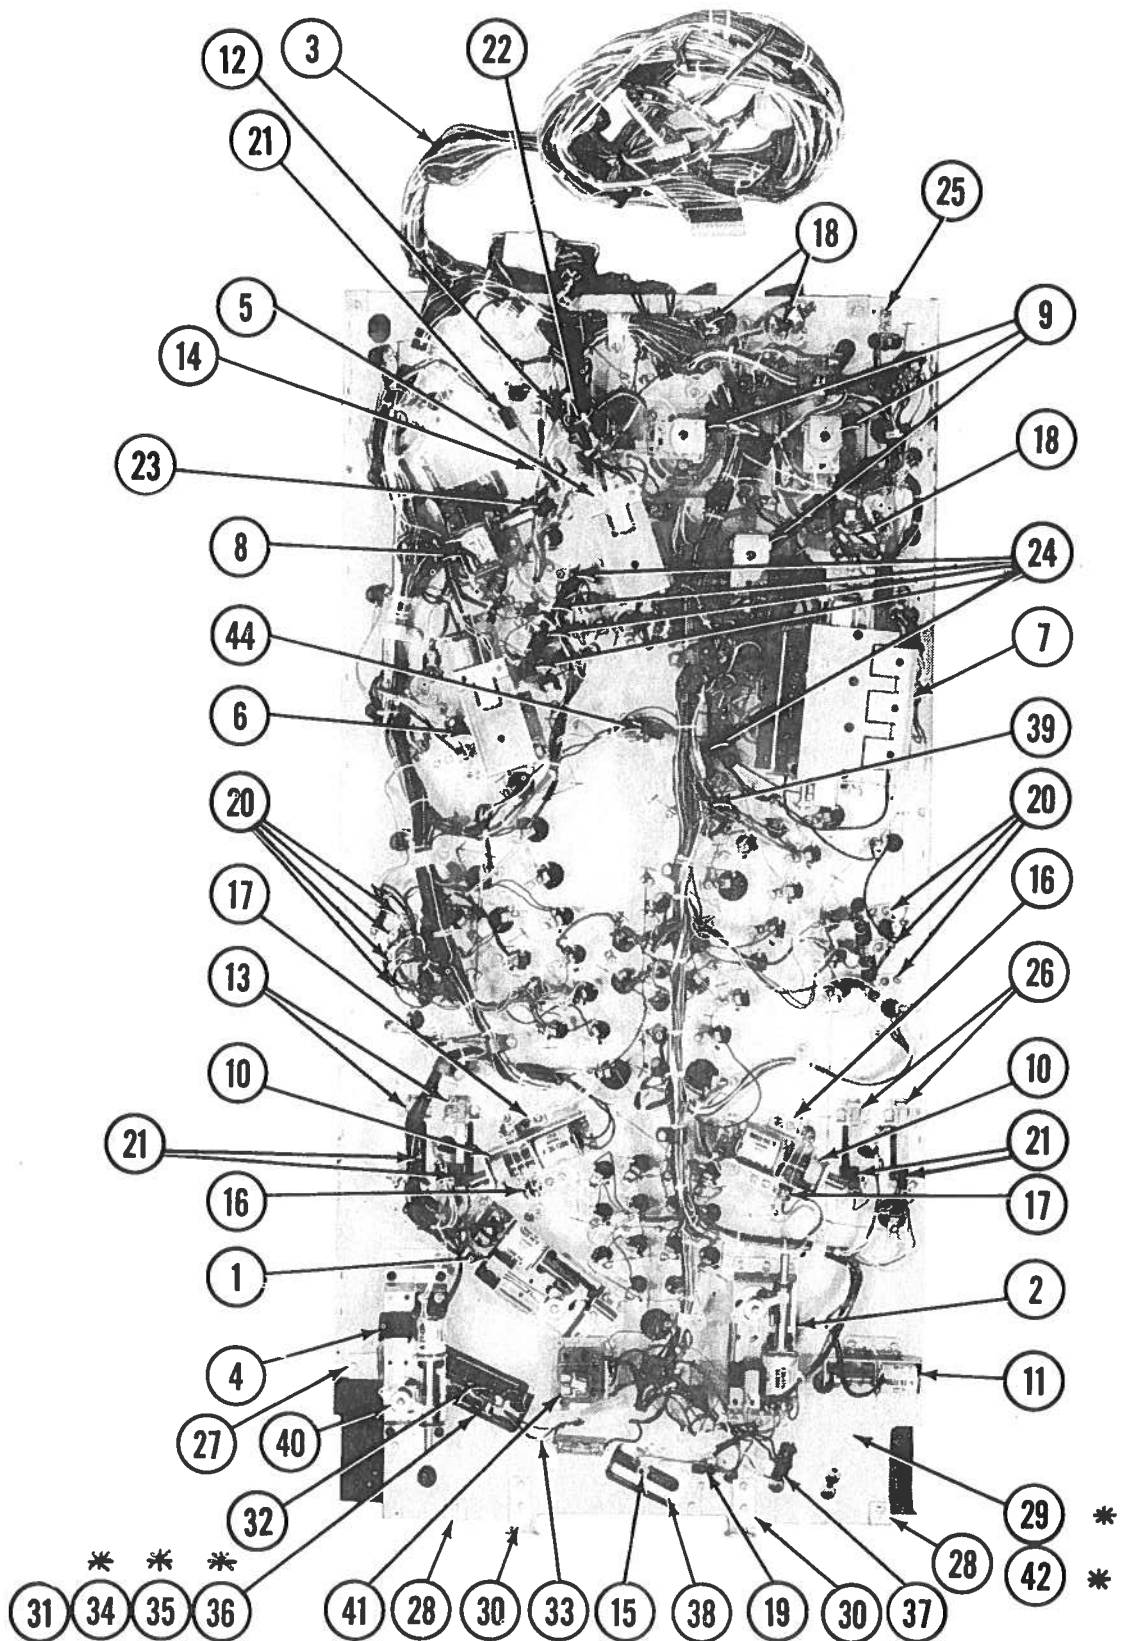

* NOT SHOWN

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST
PART NO. AE47-00004-0000

ORDER BY PART NUMBER **ONLY**

ITEM	PART NO.	DESCRIPTION
1	AC70-00022-0100	FLIPPER ASSY. SINGLE SWITCH RIGHT (SEE COMMON ASSY.)
	A365-00045-0000	FLIPPER BREAK SWITCH ASSY.
2	AC70-00022-0200	FLIPPER ASSY. SINGLE SWITCH LEFT (SEE COMMON ASSY.)
	A365-00045-0000	FLIPPER BREAK SWITCH ASSY.
3	AE47-00005-0000	PLAYFIELD CABLE ASSY.
4	AE47-00018-0000	BALL CHANNEL ASSY. (SEE COMMON ASSY.)
5	AE47-00023-0000	DROP TARGET ASSY. SINGLE IN-LINE W/MEMORY (SEE COMMON ASSY.)
	AE47-00014-0000	PLUNGER & LINK ASSY.
	A967-00066-0000	SWITCH & DIODE ASSY.
6	AE47-00028-0000	DROP TARGET ASSY. SINGLE (SEE COMMON ASSY.)
	A967-00066-0000	SWITCH & DIODE ASSY.
7	AE47-00029-0000	DROP TARGET ASSY. 3 IN-LINE W/MEMORY (SEE COMMON ASSY.)
	AE47-00034-0000	MEMORY - COIL ASSY.
	AE47-00013-00XF	PLUNGER & STRIKER ASSY.
	A370-00086-0000	SWITCH & DIODE ASSY.
8	AE47-00033-0000	EJECT HOLE (SAUCER) ASSY. (SEE COMMON ASSY.)
9	A967-00053-0100	THUMPER BUMPER ASSY. (3 REQ'D.) (SEE COMMON ASSY.)
10	A967-00059-0000	SLINGSHOT KICKER COIL ASSY. (2 REQ'D.) (SEE COMMON ASSY.)
11	A360-00235-0000	KNOCKER ASSY. (SEE COMMON ASSY.)
12	A331-00042-0000	WIRE ACTUATOR ASSY.
	0360-00135-0000	BRKT.: ROLLOVER WIRE - LEFT
	0360-00929-0200	WIRE FORM: ROLLOVER - LEFT
13	A360-00215-0000	WIRE ACTUATOR ASSY. RIGHT (2 REQ'D.)
	0360-00134-0000	BRKT.: ROLLOVER WIRE - RIGHT

**BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST, CONT'D.
PART NO. AE47-00004-0000**

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	0360-00929-0100	WIRE FORM: ROLLOVER - RIGHT
14	AE47-00049-0000	WIRE ACTUATOR ASSY. - RIGHT
	0360-00134-0000	BRKT.: ROLLOVER WIRE - RIGHT
	0E47-00123-0000	WIRE FORM: ROLLOVER - RIGHT
15	A360-00217-0000	WIRE ACTUATOR ASSY.
	0360-00135-0000	BRKT.: ROLLOVER WIRE - LEFT
	0360-00931-0000	WIRE FORM: BALL RETURN
16	A360-00230-0000	SWITCH & BRKT. ASSY. SLINGSHOT (2 REQ'D.)
	A360-00069-0000	SWITCH ASSY.
17	A360-00239-0000	SWITCH & DIODE ASSY. SLINGSHOT (5 REQ'D.)
	A360-00069-0000	SWITCH ASSY.
18	A360-00239-0100	SWITCH, BRKT., & DIODE ASSY. (3 REQ'D.)
	A360-00069-0000	SWITCH ASSY.
19	A360-00241-0000	SWITCH & DIODE ASSY.
	A360-00055-0000	SWITCH ASSY.
20	A365-R0300-B113	SWITCH W/TARGET, BRKT., DIODE & CAP ASSY. (6 REQ'D.)
	A365-R0300-0003	SWITCH & TARGET ASSY.
	0360-00103-0000	BRKT.: SWITCH
21	A365-00035-0000	SWITCH, DIODE & PLATE ASSY. (5 REQ'D.)
	A360-00061-0000	SWITCH ASSY.
22	A365-00035-0100	SWITCH, DIODE & PLATE ASSY. W/CAP
	A360-00061-0000	SWITCH ASSY.
23	A365-00036-0000	SWITCH, DIODE & PLATE ASSY. EJECT HOLE
	A967-00075-0000	SWITCH ASSY.

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST, CONT'D.
PART NO. AE47-00004-0000

ORDER BY PART NUMBER **ONLY**


ITEM	PART NO.	DESCRIPTION
24	A365-R0300-B111	SWITCH W/TARGET, BRACKET, DIODE & CAP ASSY. (5 REQ'D.)
	A967-00019-0000	TARGET & SWITCH ASSY.
	0360-00103-00XF	BRKT.: SWITCH
25	A365-R0300-B115	SWITCH, TARGET, BRKT., & DIODE & CAP ASSY. (2 REQ'D.)
	A365-R0300-0005	SWITCH W/TARGET ASSY.
	0360-00103-00XF	BRKT.: SWITCH
26	A967-00062-0000	WIRE ACTUATOR ASSY. (2 REQ'D.)
	0010-00611-0000	WIRE FORM: ROLLOVER - LEFT
	0360-00135-0000	BRKT.: ROLLOVER WIRE - LEFT
27	0B42-00100-00XF	BALL CONTROL PLATE
28	0B42-00102-00XF	BRKT.: BOTTOM ARCH (2 REQ'D.)
29	0017-00003-0103	FUSE: MDL 3AG 1A 250V SLO-BLO
30	0365-00134-0000	SUPPORT: PLAYFIELD (2 REQ'D.)
	AA40-00038-0000	BALL-RAMP/SWITCH/CABLE ASSY. (INCLUDES ITEMS 31 THRU 36)
31	AA40-00018-00XF	BALL RAMP ASSY.
32	AA40-00024-0000	MICRO-SWITCH AND BRKT. ASSY.
	AA40-00020-0000	MICRO-SWITCH & WIRE-FORM ASSY. (INCLUDES NEXT 3 ITEMS) (3 REQ'D.)
	0010-00295-0000	WIRE-FORM: SWITCH-RAMP
	0017-00007-0015	NUT: 1/8 PUSH
	0017-00032-0123	SWITCH: LOW TORQUE
	0A40-00115-0000	BRACKET: SWITCH MOUNTING
	0A40-00906-0000	INSULATOR
33	AA40-00029-0000	OUTHOLE CABLE ASSY.

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST, CONT'D.
PART NO. AE47-00004-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
34	0A40-00116-00XF	PAWL (3 REQ'D.)
35	0017-00100-0175	RING: E .156" 5133-15 (3 REQ'D.)
36	0017-00101-0175	6-32 X 4 PHILLIPS PAN HD. SCREW (2 REQ'D.)
37	A360-00234-0000	TOP-MOUNTED KICKER ASSY.
38	0A40-00122-00XF	BALL RUNWAY
39	AE47-00042-0000	SWITCH W/TARGET, BRKT., AND DIODE ASSY.
	AE47-00044-0000	SWITCH W/TARGET ASSY.
	OE47-00114-00XF	BRACKET: SWITCH
40	AA40-00019-0000	BALL GATE ASSY.
41	B084-91618-A000	SOLENOID - EXPANDER BOARD
42	0720-00001-0100	FUSE CLIP ASSY.
43	0A40-00125-00XF	STRAP: METAL TIE
44	A360-00245-0100	SPINNER SWITCH, DIODE & PLATE ASSY.
	A360-00058-0000	SWITCH ASSY.
45	AE47-00042-0000	SWITCH W/TARGET SPECIAL, BRKT., DIODE & CAP ASSY.
	AE47-00044-0000	SWITCH W/TARGET ASSY.
	OE47-00114-00XF	BRKT.: TARGET

TOP PLAYFIELD ASSEMBLY W/PLASTICS
PART NO. AE47-00004-0000

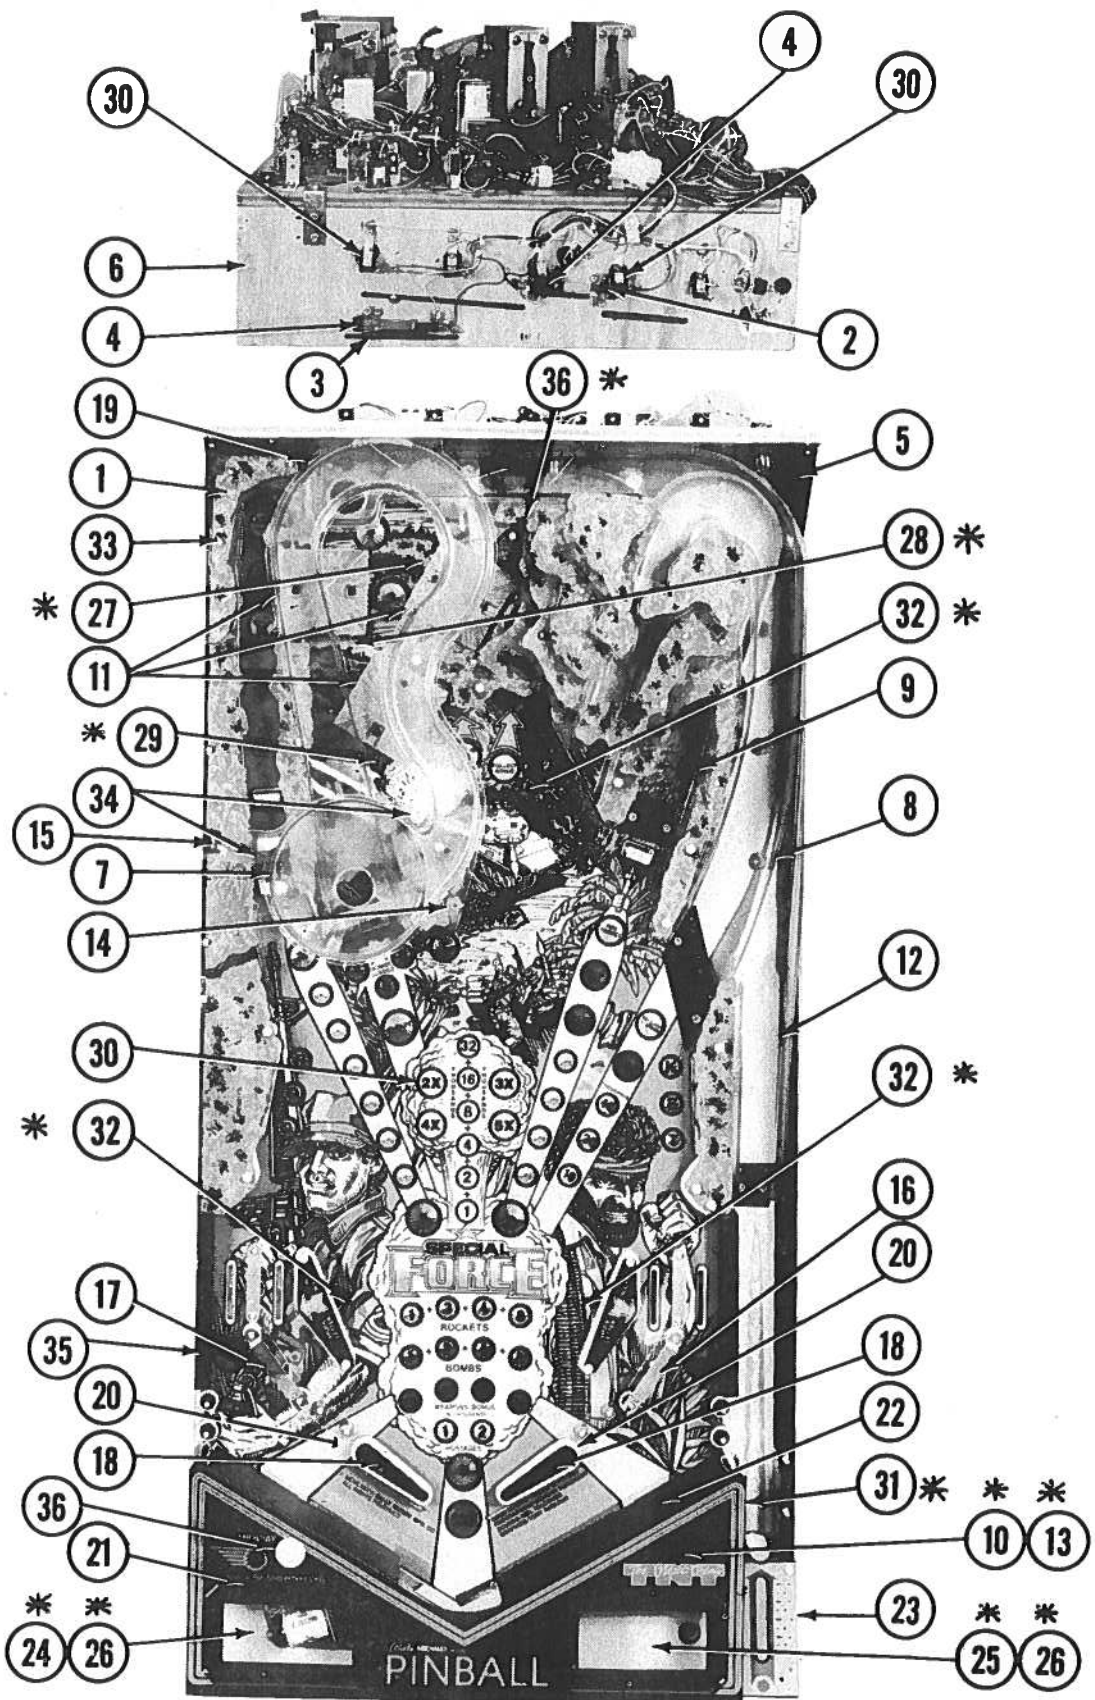

NOT SHOWN

TOP PLAYFIELD ASSEMBLY W/PLASTICS - PARTS LIST
PART NO. AE47-00004-0000

ORDER BY PART NUMBER **ONLY**

ITEM	PART NO.	DESCRIPTION
1	AE47-00011-00XF	SCREENED PLASTICS SET W/BUSHING
	OE47-00901-01XF	BUTYRATE: SCREENED DIE-CUT
	OE47-00901-02XF	BUTYRATE: SCREENED
	AE47-00046-0000	LOCKING SPACER W/GREEN DYE ASSY. (38 REQ'D.)
	AE47-00021-0000	BACKBOARD ASSY.: PLAYFIELD (INCLUDES ITEMS 2 THRU 6)
2	AE52-00032-0000	WIRE FORM ASSY.: ACTUATOR RT.
	OE52-00112-0000	WIRE FORM: ROLLOVER RT.
	0360-00134-0000	BRKT.: ROLLOVER WIRE RT.
3	AE52-00032-0100	WIRE FORM ASSY.: ACTUATOR LT.
	OE52-00112-0100	WIRE FORM: ROLLOVER LT.
	0360-00135-0000	WIRE FORM: ROLLOVER LT.
4	A365-00035-0000	SWITCH, DIODE & PLATE ASSY.
	A360-00061-0000	SWITCH ASSY.:(2 REQ'D.)
5	OE52-00109-00XF	BRKT.: GUSSET (2 REQ'D.)
6	OE47-00504-0000	BACKBOARD: PLAYFIELD
7	AE47-00025-0000	HELICOPTER - RAMP ASSY.
8	AE47-00026-0000	ENTRANCE - RAMP ASSY.
9	AE47-00027-0000	WEAPONS - RAMP ASSY.
10	AE47-00041-0000	BALL RETAINER ASSY.
	OE47-00117-0000	BRKT.: BALL RETAINER
	OE47-00118-0000	BALL CHANNEL
	0017-00101-0194	5-40 X 4 PHILLIPS PAN TORK TAMPER-PROOF SCREW (2 REQ'D.)
	0017-00104-0062	WASHER 8 171 - .375 - 032 FLAT SCREW (2 REQ'D.)
11	OE47-00912-0000	HUT ROOF (3 REQ'D.)
12	AA40-00018-0000	BALL RAMP ASSY.

TOP PLAYFIELD ASSEMBLY W/PLASTICS - PARTS LIST, CONT'D.
PART NO. AE47-00004-0000

ORDER BY PART NUMBER ONLY


ITEM	PART NO.	DESCRIPTION
13	AA40-00019-0000	BALL GATE ASSY.
	0A40-00117-00XF	GATE: BALL
	0A40-00702-0000	PIN: BALL GUIDE
14	0E47-00112-0000	BRACKET: HELICOPTER, RIGHT
15	0E47-00113-0000	BRACKET: HELICOPTER, LEFT
16	A370-00052-0000	BALL GATE WIRE ASSY.
	0370-00116-0000	BRKT.: GATE
	0370-00907-0000	WIRE-FORM: GATE
17	0370-00053-0000	GATE & BRKT. ASSY.
	0370-00116-0000	BRKT.: GATE
	0370-00908-0000	WIRE-FORM: GATE
18	A967-00031-0100	MOLDED FLIPPER ASSY.: BLACK (2 REQ'D.)
19	0017-00041-0643	BUMPER: I.D. = 1" RUBBER (2 REQ'D.)
20	0017-00041-0653	FLIPPER - RUBBER: 3" YELLOW (2 REQ'D.)
21	0E47-00109-00XF	BOTTOM ARCH: SCREENED
22	0370-00918-0300	BOTTOM ARCH: EXTENSION
23	0E47-00110-00XF	BALL SHOOTER GAUGE
24	M051-00E47-A013	INSTRUCTION CARD: SPECIAL FORCE
25	M051-00E47-A014	FEATURES CARD
26	0360-00923-0000	COVER: SCORE-CARD (2 REQ'D.)
27	0390-00908-0000	SHIELD: PROTECTIVE MYLAR
28	0391-00921-0000	SHIELD: PROTECTIVE MYLAR
29	0391-00920-0000	SHIELD: PROTECTIVE MYLAR
30		SEE COMMON SOCKET ASSY.

TOP PLAYFIELD ASSEMBLY W/PLASTICS - PARTS LIST, CONT'D.
PART NO. AE47-00004-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
31	AA40-00026-0000	FRONT BALL CHANNEL ASSY.
	0A40-00111-00XF	BALL CHANNEL: FRONT: MOD.
	0A40-00120-00XF	BRACKET: MOUNTING
32	0017-00091-0071	SHIELD (MYLAR) (3 REQ'D.)
33	AE47-00047-0000	ACORN NUT W/GREEN DYE ASSY. (20 REQ'D.)
34	AE47-00046-0000	LOCKING SPACER W/GREEN DYE ASSY. (2 REQ'D.)
35	0011-00008-35XF	ROD: 1/16" DIA. X 1-1/4" LONG
36	0017-00047-0336	PLUG: HOLE (2 REQ'D.)

TOP PLAYFIELD ASSEMBLY W/O PLASTICS
PART NO. AE47-00004-0000

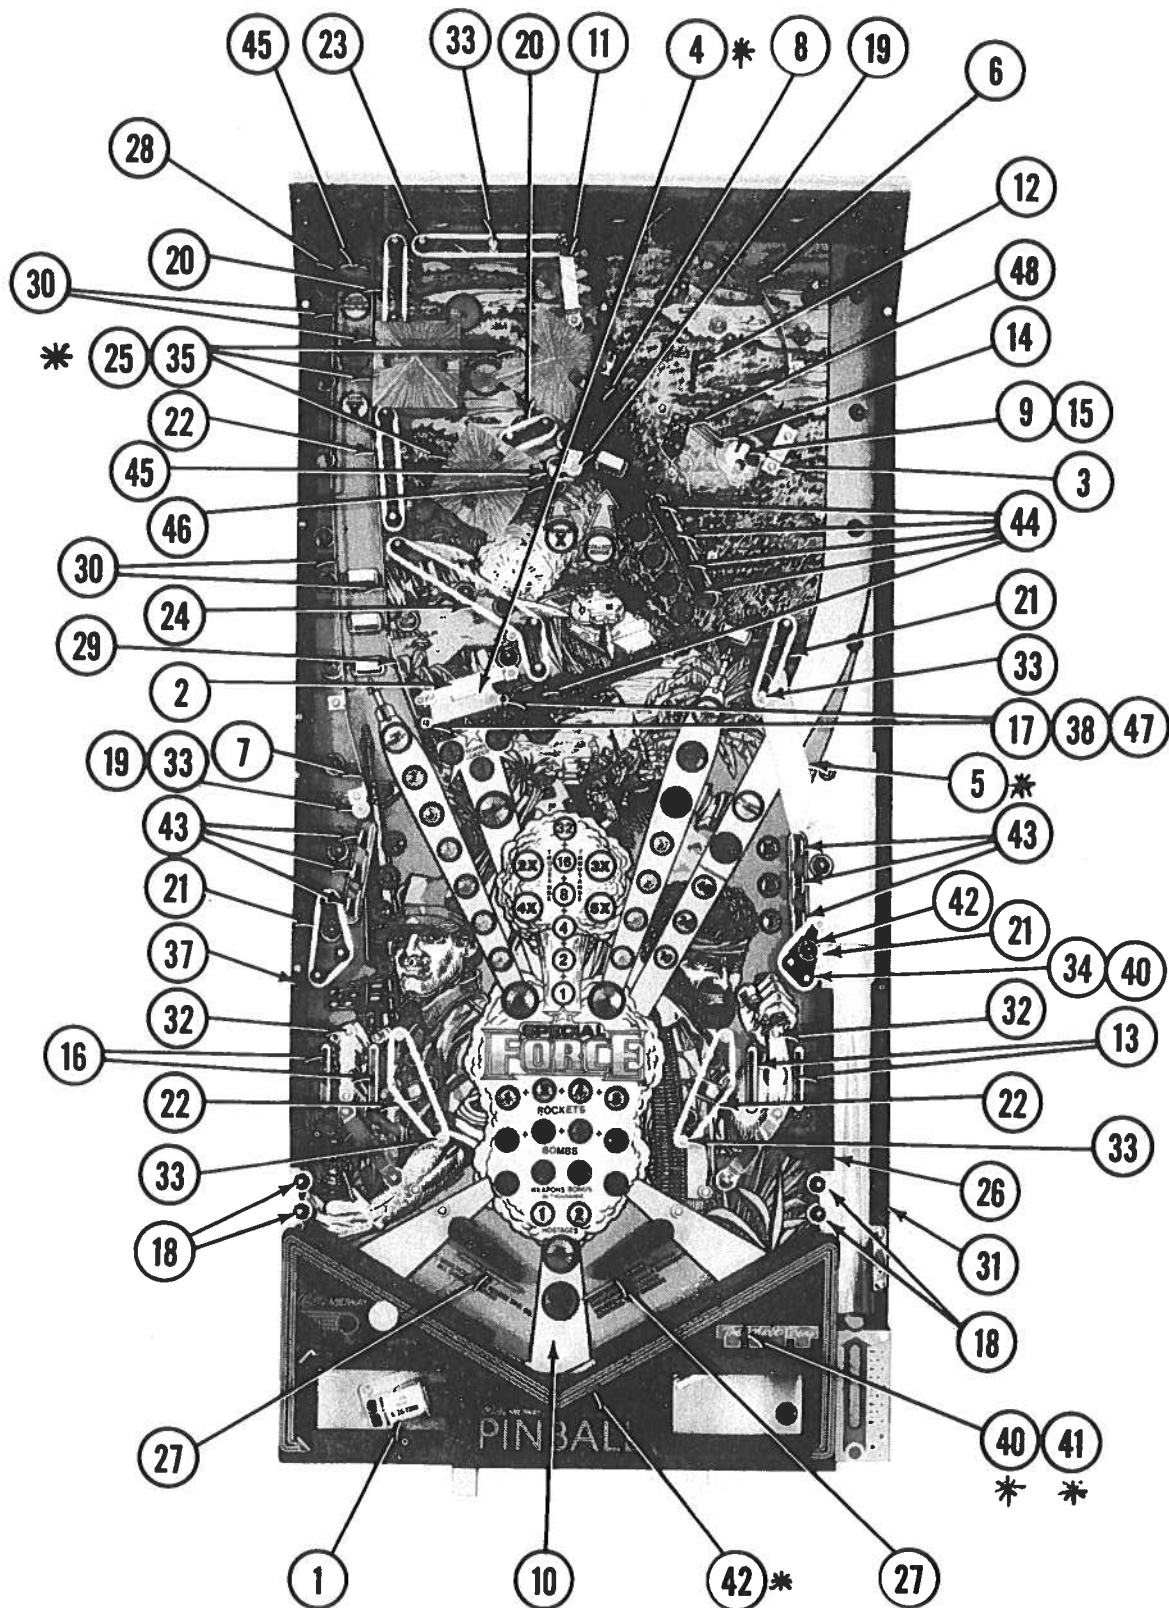

* NOT SHOWN

TOP PLAYFIELD ASSEMBLY W/O PLASTICS - PARTS LIST
PART NO. AE47-00004-0000

ORDER BY PART NUMBER **ONLY**

ITEM	PART NO.	DESCRIPTION
1	A360-00234-0000	TOP MTD. KICKER ASSY. (BALL RETURN) (SEE COMMON ASSY.)
2	AE14-00013-0000	SPINNER GATE ASSY.
	0017-00104-0084	WASHER: 075 - .250 - .062 FL-B NYLON
	0360-00132-0000	BRKT.: GATE
	0360-00926-0000	WIRE FORM: SPINNER TARGET
	0365-00146-0000	WIRE FORM: GATE
3	OE47-00104-00XF	BRKT.: BALL DEFLECTOR
4	OE47-00019-00XF	SPACER: 1-7/8"
5	OE47-00020-00XF	SPACER: 3-1/4"
6	AE47-00022-0000	BALL-GUIDE ASSY.
7	AE47-00031-0000	BALL-GUIDE ASSY.
8	AE47-00032-0000	BALL GUIDE ASSY.
9	AE47-00033-0000	BALL-EJECT ASSY. (SEE COMMON ASSY.)
10	AE47-00501-00XF	PLAYFIELD & INSERTS SCREENED & PIERCED
11	AA40-00033-0000	WIRE GATE & BRKT. ASSY.
12	A331-00042-0000	WIRE ACTUATOR ASSY. LEFT
	0360-00135-0000	BRKT.: ROLL-OVER WIRE, LEFT
	0360-00929-0200	WIRE-FORM: ROLL-OVER, LEFT
13	A360-00215-0000	WIRE-ACTUATOR ASSY.: RIGHT (2 REQ'D.)
	0360-00134-0000	BRKT.: ROLL-OVER WIRE, RIGHT
	0360-00929-0100	WIRE-FORM: ROLL-OVER - RIGHT
14	AE47-00049-0000	WIRE ACTUATOR ASSY.: RIGHT
	0360-00134-0000	BRKT.: ROLLOVER WIRE-RIGHT

**TOP PLAYFIELD ASSEMBLY W/O PLASTICS - PARTS LIST, CONT'D.
PART NO. AE47-00004-0000**

ORDER BY PART NUMBER ONLY


ITEM	PART NO.	DESCRIPTION
	0E47-00123-0000	WIRE-FORM: ROLLOVER-RIGHT
15	A360-00216-0000	WIRE ACTUATOR ASSY.: RIGHT
	0360-00134-0000	BRKT.: ROLL-OVER WIRE, RIGHT
	0360-00930-0000	WIRE-FORM: ROLL-OVER, RIGHT
16	A967-00062-0000	WIRE ACTUATOR ASSY. (2 REQ'D.)
	0010-00611-0000	WIRE-FORM: ROLL-OVER, LEFT
	0360-00135-0000	BRKT.: ROLL-OVER WIRE, LEFT
17	0017-00041-0633	BUMPER: WHITE RUBBER (2 REQ'D.)
18	0017-00041-0637	BUMPER: WHITE RUBBER (8 REQ'D.)
19	0017-00041-0641	BUMPER: I.D. = 15/64" RUBBER (4 REQ'D.)
20	0017-00041-0643	BUMPER: I.D. = 1" RUBBER (2 REQ'D.)
21	0017-00041-0644	BUMPER: I.D. = 1-1/2" RUBBER (3 REQ'D.)
22	0017-00041-0645	BUMPER: I.D. = 2" RUBBER (3 REQ'D.)
23	0017-00041-0646	BUMPER: I.D. = 2-1/2" RUBBER
24	0017-00041-0647	BUMPER: I.D. = 3" RUBBER
25	0017-00042-0414	RING: LOCKING (MOLDED THUMPER BUMPER) (3 REQ'D.)
26	0E47-00503-0000	GUIDE: RAIL RIGHT-OUTSIDE WOOD
27	0360-00175-5300	WIRE-FORM: BALL GUIDE 2-3/8" (2 REQ'D.)
28	0365-00151-1750	WIRE-FORM: BALL GUIDE
29	0365-00151-3125	WIRE-FORM: BALL GUIDE
30	0365-00151-6500	WIRE-FORM: BALL GUIDE (4 REQ'D.)
31	0E47-00121-0000	SIDE RAIL
32	0360-00732-00XF	POST: BUMPER 10 X 7 WOOD SCREW (2 REQ'D.)
33	0360-00733-00XF	POST: BUMPER (NICKEL) (13 REQ'D.)
34	0360-00738-01XF	STUD: 6 X 1 - 11/16" (10 REQ'D.)
35	0365-00165-00XF	COLLAR: THUMPER BUMPER (3 REQ'D.)

TOP PLAYFIELD ASSEMBLY W/O PLASTICS - PARTS LIST, CONT'D.
PART NO. AE47-00004-0000

ORDER BY PART NUMBER **ONLY**

ITEM	PART NO.	DESCRIPTION
36	0365-00508-0004	RAIL: TOP, GENERIC 6-1/8"
37	0365-00508-0005	RAIL: TOP, GENERIC 31-3/4"
38	0365-00700-00XF	POST: BUMPER 10/32 X 7 (2 REQ'D.)
39	0967-00707-01XF	STUD: 6-32 X 1 - 11/16" (11 REQ'D.)
40	0017-00042-0712	POST: 1.020" GREEN
41	0360-00188-00XF	REAR BALL RUNWAY
42	0017-00042-0714	POST: 1.205 POST GREEN (29 REQ'D.)
43	A365-R0300-B113	SWITCH W/TARGET, BRKT., DIODE & CAP (YELLOW) (6 REQ'D.)
	A365-R0300-0003	SWITCH W/TARGET ASSY.: YELLOW
	0360-00103-00XF	BRKT.: SWITCH
44	A365-R0300-B111	SWITCH W/TARGET, BRKT., DIODE & CAP (RED) (5 REQ'D.)
	A365-R0300-0001	SWITCH W/TARGET ASSY.: RED
	0360-00103-00XF	BRKT.: SWITCH
45	A365-R0300-B115	SWITCH W/TARGET, BRKT., DIODE & CAP (WHITE)
	A365-R0300-0005	SWITCH W/TARGET ASSY.: WHITE
	0360-00103-00XF	BRKT.: SWITCH
46	AE47-00042-0000	SWITCH W/TARGET, SPECIAL BRKT., DIODE & CAP (WHITE)
	AE47-00044-0000	SWITCH W/TARGET ASSY.: WHITE
	OE47-00114-00XF	BRKT.: TARGET
47	0017-00103-0094	NUT (2 REQ'D.)
48	AE47-00038-0000	MICRO SWITCH & WIRE ASSY.
	OE47-00116-0000	WIRE-FORM: SWITCH
	0017-00005-0195	SWITCH: LOW TORQUE W/PUSH NUT
	0017-00007-0015	NUT 1/8" PUSH

**BALL CHANNEL ASSEMBLY
PART NO. AA40-00027-0000**

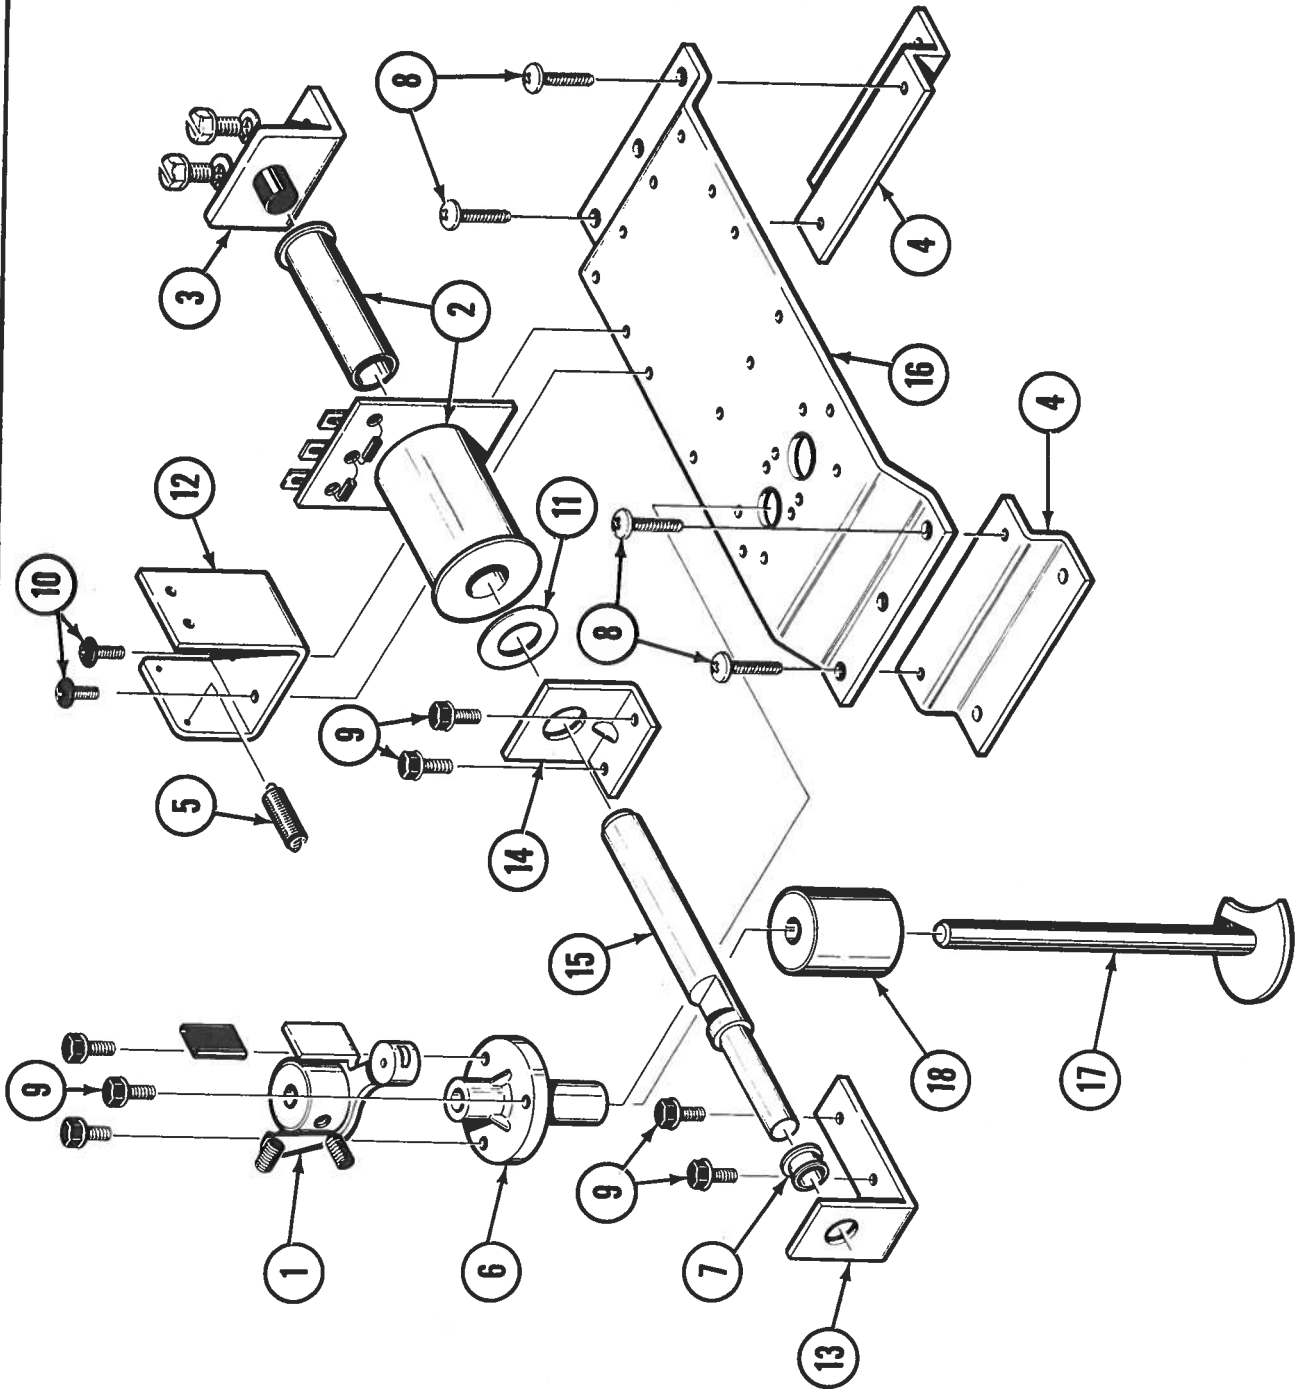


BALL CHANNEL ASSEMBLY - PARTS LIST
PART NO. AA40-00027-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A360-00039-0000	LEVER - ARM ASSY.: RIGHT
2	A360-00211-0000	COIL & TUBING ASSY.
3	A365-00024-0000	CORE - PLUG & BRKT. ASSY.
4	0A40-00118-00XF	SPACER BRACKET (2 REQ'D.)
5	0010-00275-0353	EXTENSION SPRING
6	0017-00042-0413	FLIPPER BEARING
7	0017-00042-0418	NYLINER: SNAP-IN, COIL
8	0017-00101-0161	8-32 X 4 PHL PAN TT ST (6 REQ'D.)
9	0017-00101-0184	8-32 X 6 NO HXW TT ST (7 REQ'D.)
10	0017-00101-0480	10-32 X 6 SLT HXW S ROL ST (2 REQ'D.)
11	0017-00104-0073	WASHER .515 - .875 - .013 SPRGST
12	0360-00145-00XF	SWITCH BRACKET
13	0360-00152-02XF	BRKT.: RIGHT FLIPPER STOP
14	0360-00318-00XF	COIL BRACKET
15	0360-00718-00XF	PLUNGER
16	0365-00101-00XF	BRKT.: FLIPPER MOUNTING
17 *	AA40-00019-0000	BALL GATE ASSEMBLY
18 *	0A40-00703-0000	SPACER BUSHING
*		NOT PART OF ABOVE ASSEMBLY & MUST BE ORDERED SEPARATELY

DROP TARGET ASSEMBLY SINGLE
PART NO. AE47-00028-0000

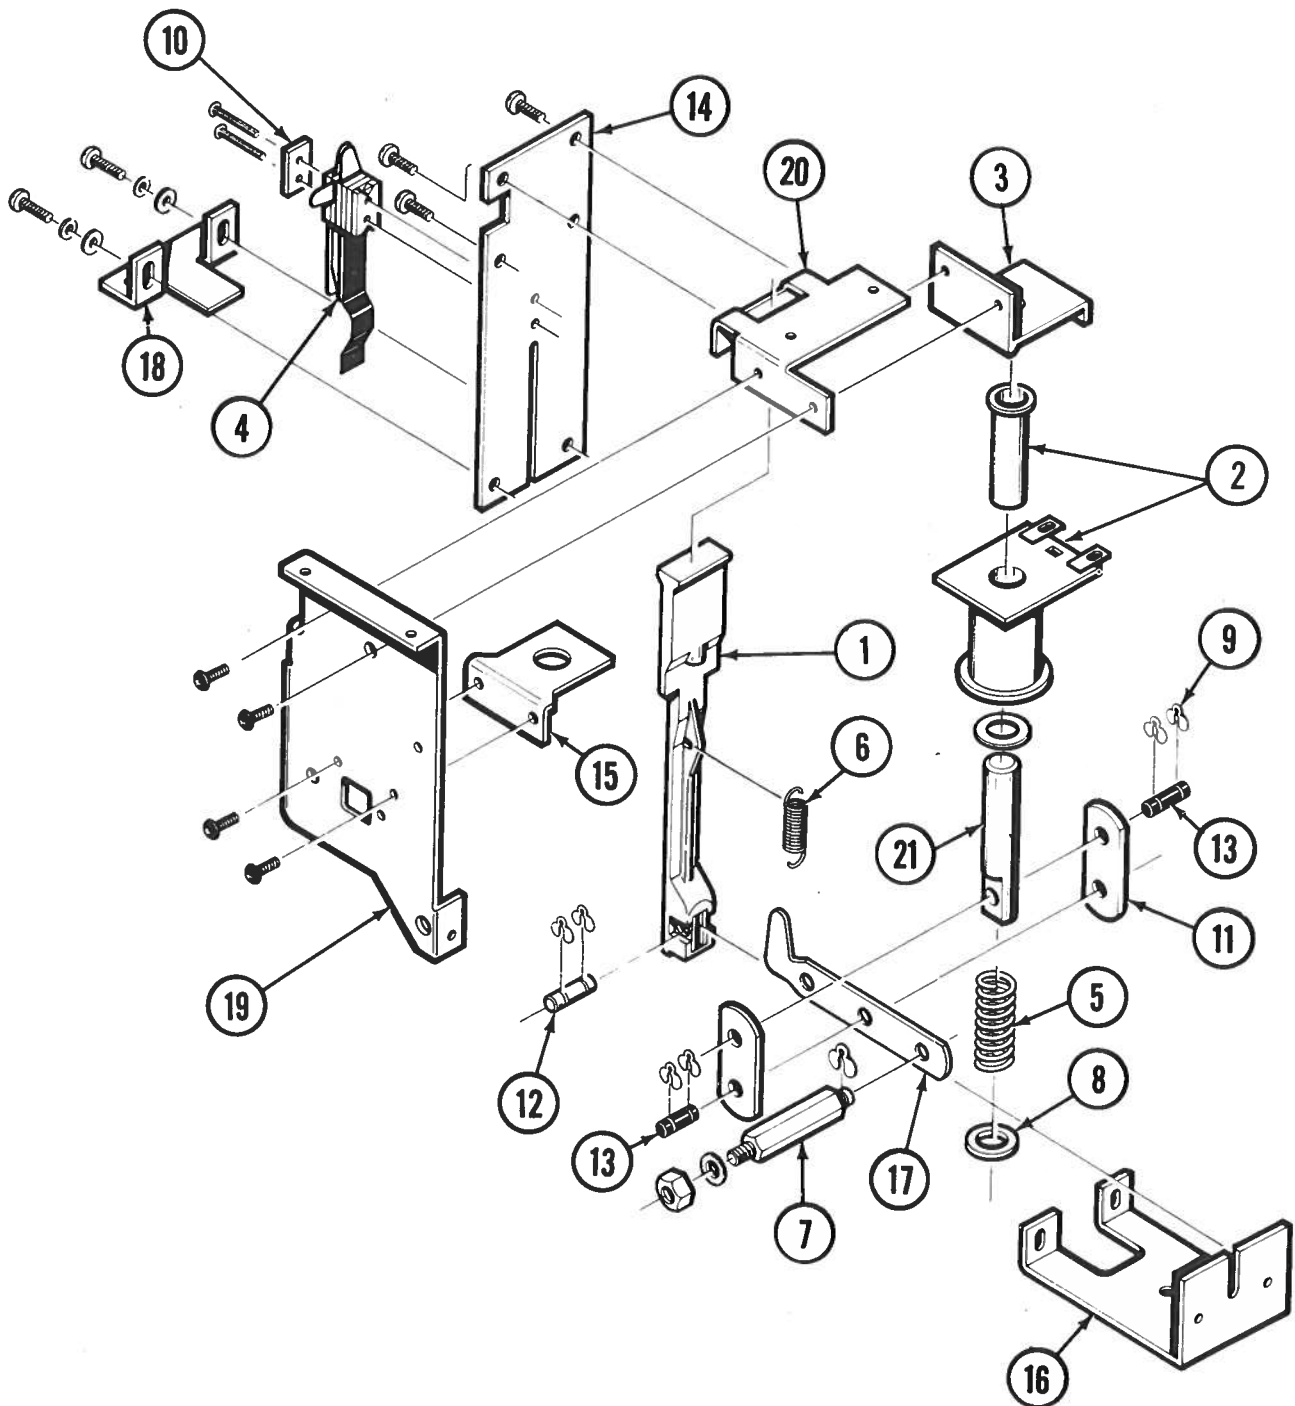


DROP TARGET ASSEMBLY SINGLE - PARTS LIST
PART NO. AE47-00028-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	AE47-00015-0000	TARGET: HOT STAMP WHITE
2	A967-00048-0000	COIL AND TUBING ASSY.
	103E-00002-0015	IN4004GP 400V 1A DIODE
3	A967-00012-0000	CORE PUG & BRKT. ASSY.
4	A967-00066-0000	SWITCH & DIODE ASSY.
	A360-00062-0000	SWITCH ASSY.
	103E-00002-0005	IN4148 100V 500MA DIODE
5	0010-00274-0189	COMPRESSION SPRING
6	0010-00275-0310	EXTENSION SPRING
7	0011-00006-00XF	LINK STUD
8	0017-00042-0428	WASHER: CUPPED NYLON
9	0017-00100-0117	RING KL1 .250 (7 REQ'D.)
10	0020-00202-0000	SWITCH PLATE
11	0360-00118-0000	LINK (2 REQ'D.)
12	0360-00720-00XF	PIN: TARGET PIVOT
13	0360-00721-00XF	PIN: LINK (2 REQ'D.)
14	0371-00123-29XF	SIDE PLATE
15	0967-00105-00XF	COIL BRACKET
16	0967-00106-00XF	BOTTOM PLATE
17	0967-00109-00XF	LINK
18	0967-00113-00XF	BOTTOM PLATE: ADJUSTABLE
19	0967-00124-00XF	END PLATE
20	0967-00144-20XF	LATCH PLATE
21	0967-00704-00XF	PLUNGER

DROP TARGET ASSEMBLY SINGLE IN-LINE W/MEMORY
PART NO. AE47-00023-0000

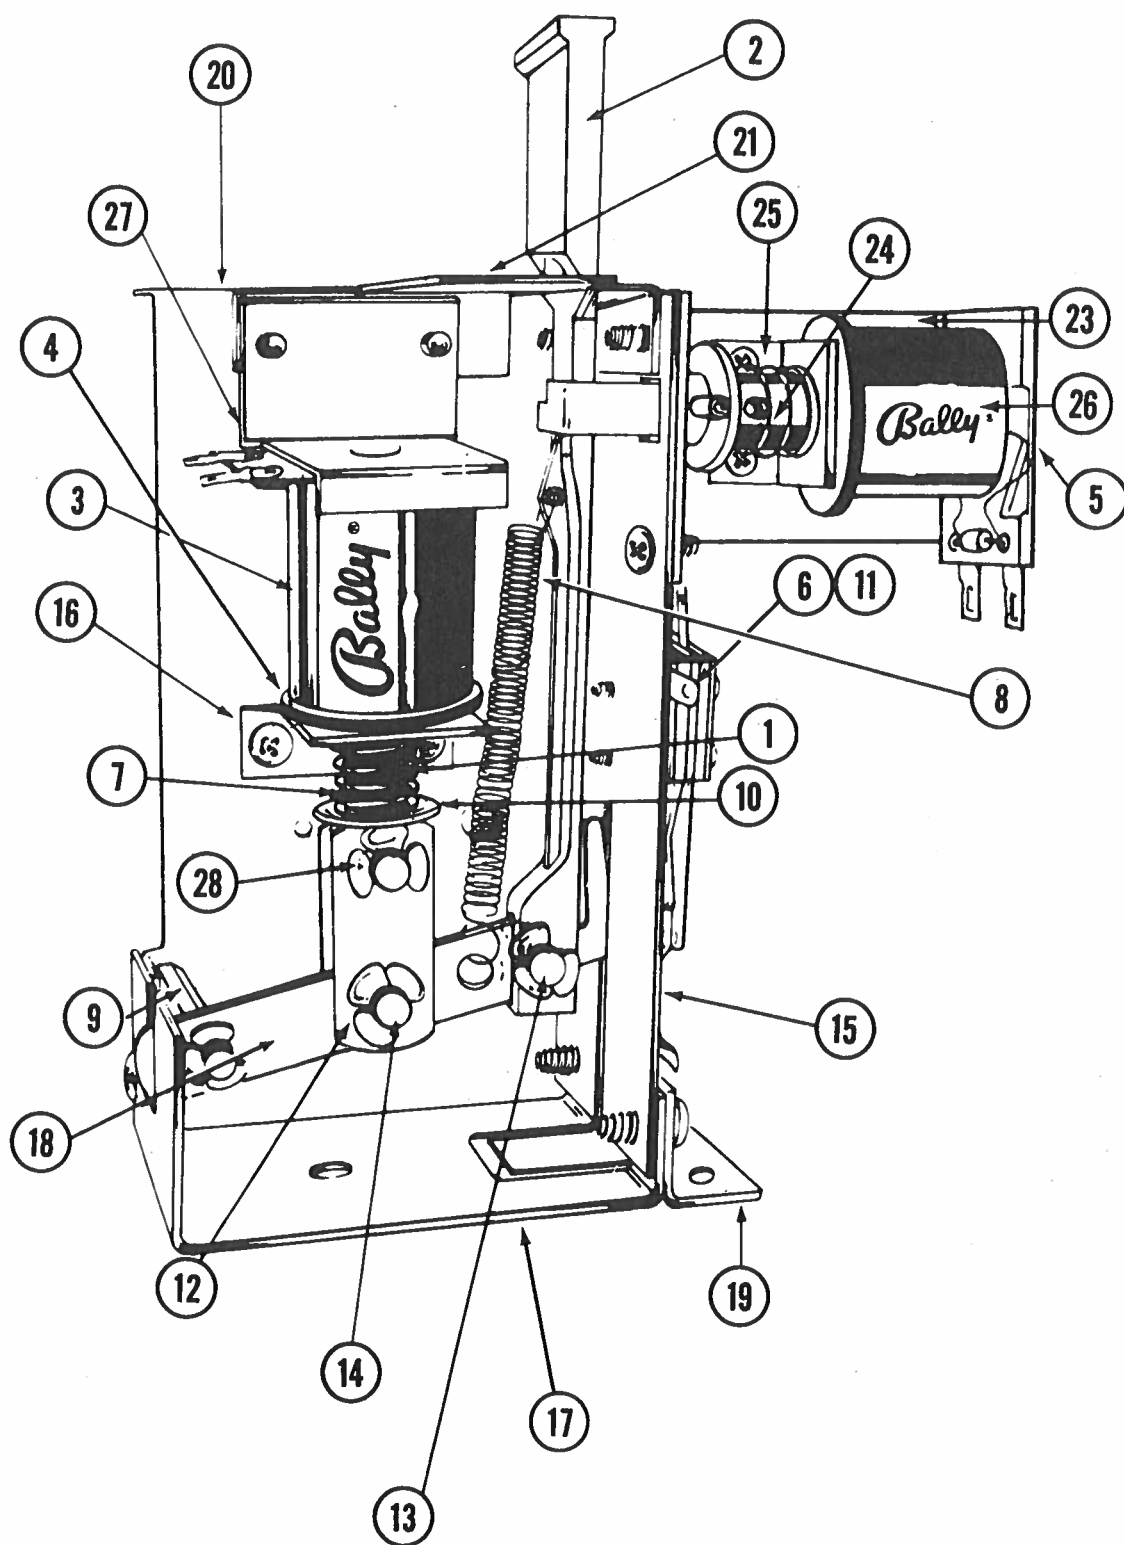

DROP TARGET ASSEMBLY SINGLE IN-LINE W/MEMORY - PARTS LIST
PART NO. AE47-00023-0000

ORDER BY PART NUMBER ONLY


ITEM	PART NO.	DESCRIPTION
1	AE47-00014-0000	PLUNGER & LINK ASSY.
2	AE47-00016-0000	TARGET: HOT STAMP WHITE
3	AE47-00024-0000	MEMORY COIL & BRKT. ASSY.
4	A967-00048-0000	COIL & TUBING ASSY.
	103E-00002-0015	1N4004 GP 400V 1A DIODE
5	A967-00012-0000	CORE PLUG & BRKT. ASSY.
6	A967-00066-0000	SWITCH & DIODE ASSY.
	A360-00062-0000	SWITCH ASSY.
7	0010-00274-0189	COMPRESSION SPRING
8	0010-00275-0350	EXTENSION SPRING
9	0011-00006-00XF	LINK STUD
10	0017-00042-0428	WASHER: CUPPED NYLON (2 REQ'D.)
11	0020-00202-0000	SWITCH PLATE (NOT SHOWN)
12	0360-00118-0000	LINK (2 REQ'D.)
13	0360-00720-00XF	PIN: TARGET PIVOT
14	0360-00721-00XF	PIN: LINK
15	0371-00123-29XF	SIDE PLATE
16	0967-00105-00XF	COIL BRACKET
17	0967-00106-00XF	BOTTOM PLATE
18	0967-00109-00XF	LINK
19	0967-00113-00XF	BOTTOM PLATE: ADJUSTABLE
20	0967-00124-00XF	END PLATE
21	0967-00144-20XF	LATCH PLATE
22	0967-00704-00XF	PLUNGER (NOT SHOWN)

DROP TARGET ASSEMBLY SINGLE IN-LINE W/MEMORY - PARTS LIST, CONT'D.
PART NO. AE47-00023-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
23	0E47-00100-00XF	BRKT.: PLUNGER LINK
24	0E47-00700-00XF	PLUNGER
25	0E47-00101-00XF	BRKT.: COIL MOUNTING
26	AE47-00039-0000	COIL & TUBING ASSY.
27	A967-00011-0000	CORE PLUG & BRKT. ASSY.
28	0017-00100-0117	RING KL1 .250 (7 REQ'D.)

DROP TARGET ASSEMBLY 3 IN-LINE W/MEMORY
PART NO. AE47-00029-0000

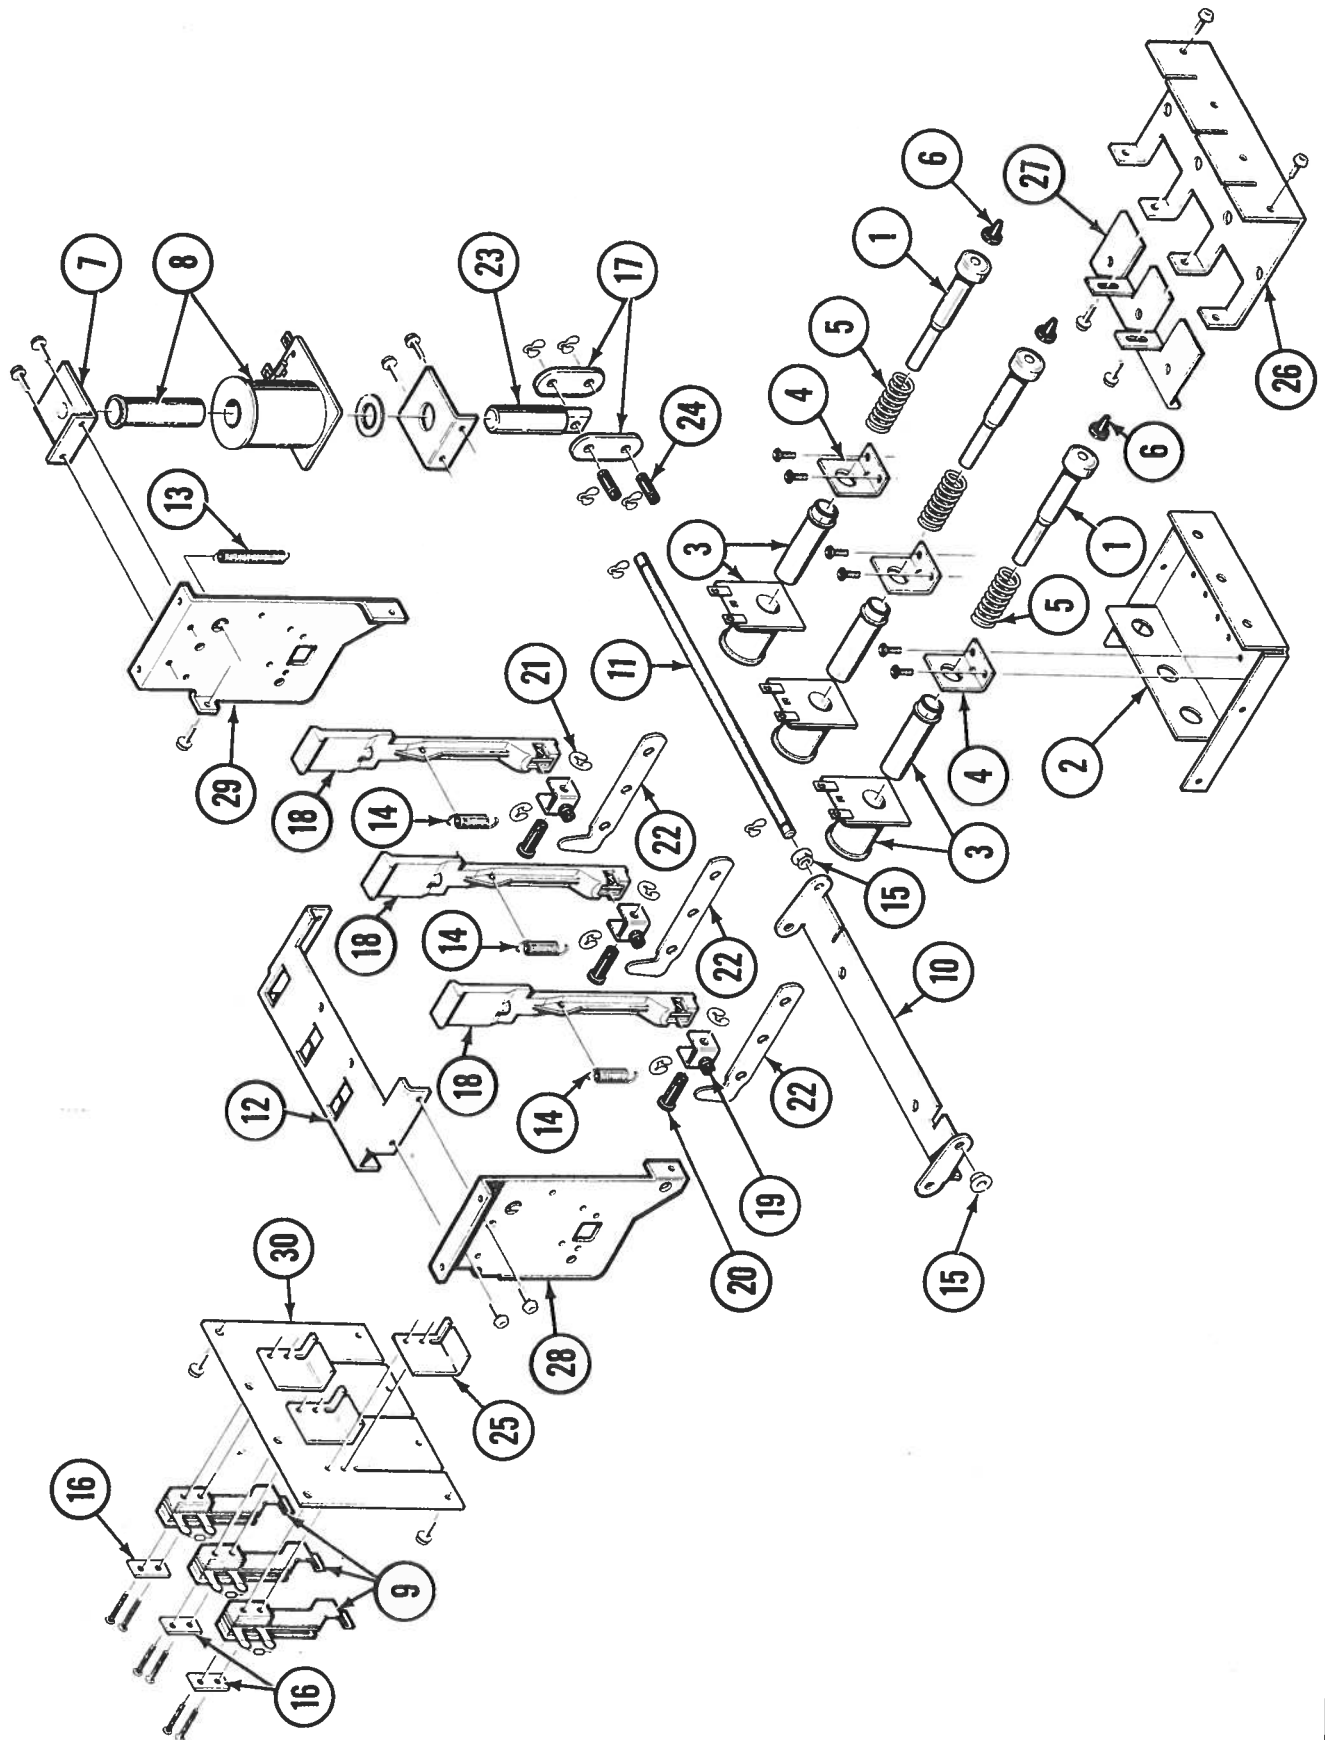

DROP TARGET ASSEMBLY 3 IN-LINE W/MEMORY - PARTS LIST
PART NO. AE47-00029-0000

ORDER BY PART NUMBER **ONLY**


ITEM	PART NO.	DESCRIPTION
	AE47-00034-0000	MEMORY - COIL ASSY. (INCLUDES ITEMS 1 THRU 6)
1	AE47-00013-00XF	PLUNGER & STRIKER ASSY. (3 REQ'D.)
2	0360-00122-00XF	COIL BRACKET
3	AE47-00037-0000	COIL & TUBING ASSY. (3 REQ'D.)
	103E-00002-0015	1N4004 GP 400V 1A DIODE (6 REQ'D.)
4	0E47-00103-01XF	BRKT.: MEMORY COIL
5	0010-00274-0206	COMPRESSION SPRING
6	0017-00041-0636	BUMPER: PLUG, BLACK, RUBBER (3 REQ'D.)
	AE47-00035-0000	3-IN-LINE TARGET ASSY. (INCLUDES ITEMS 7 THRU 30)
7	A360-00014-0000	CORE PLUG & BRKT. ASSY.
8	AE47-00037-0000	COIL & TUBING ASSY.
	103E-00002-0015	1N4004 GP 400V 1A DIODE
9	A370-00086-0000	SWITCH & DIODE ASSY. (3 REQ'D.)
	A370-00085-0000	SWITCH ASSY.
10	0A44-00108-00XF	RESET BAR
11	0A44-00700-00XF	SHAFT
12	0E47-00102-00XF	FRAME: TOP PLATE, LEFT
13	0010-00275-0350	EXTENSION SPRING
14	0010-00279-0314	EXTENSION SPRING (3 REQ'D.)
15	0017-00042-0429	NYLINER: SNAP IN COIL (2 REQ'D.)
16	0020-00202-0000	SWITCH PLATE (3 REQ'D.)
17	0360-00118-0000	LINK (2 REQ'D.)
	AE47-00045-0000	3-TARGET & LINK ASSY. (INCLUDES ITEMS 18 THRU 22)
18	AE47-00016-0000	TARGET ASSY. (3 REQ'D.)

DROP TARGET ASSEMBLY 3 IN-LINE W/MEMORY - PARTS LIST, CONT'D.
PART NO. AE47-00029-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
19	A967-00032-0000	YOKE ASSY. (3 REQ'D.)
20	0011-00005-00XF	STUD: PIVOT (3 REQ'D.)
21	0017-00100-0117	RING: (6 REQ'D.)
22	0360-00117-00XF	LINK: DROP TARGET (3 REQ'D.)
23	0360-00717-00XF	PLUNGER
24	0360-00721-00XF	PIN: LINK
25	0370-00136-00XF	BRKT. NUT & SPRING (3 REQ'D.)
26	0370-00145-03XF	BOTTOM PLATE
27	0370-00146-03XF	BOTTOM PLATE: ADJUSTABLE
28	0371-00124-00XF	END PLATE
29	0371-00125-00XF	END PLATE
30	0A44-00105-00XF	SIDE PLATE

EJECT HOLE (SAUCER) ASSEMBLY
PART NO. AE47-00033-0000

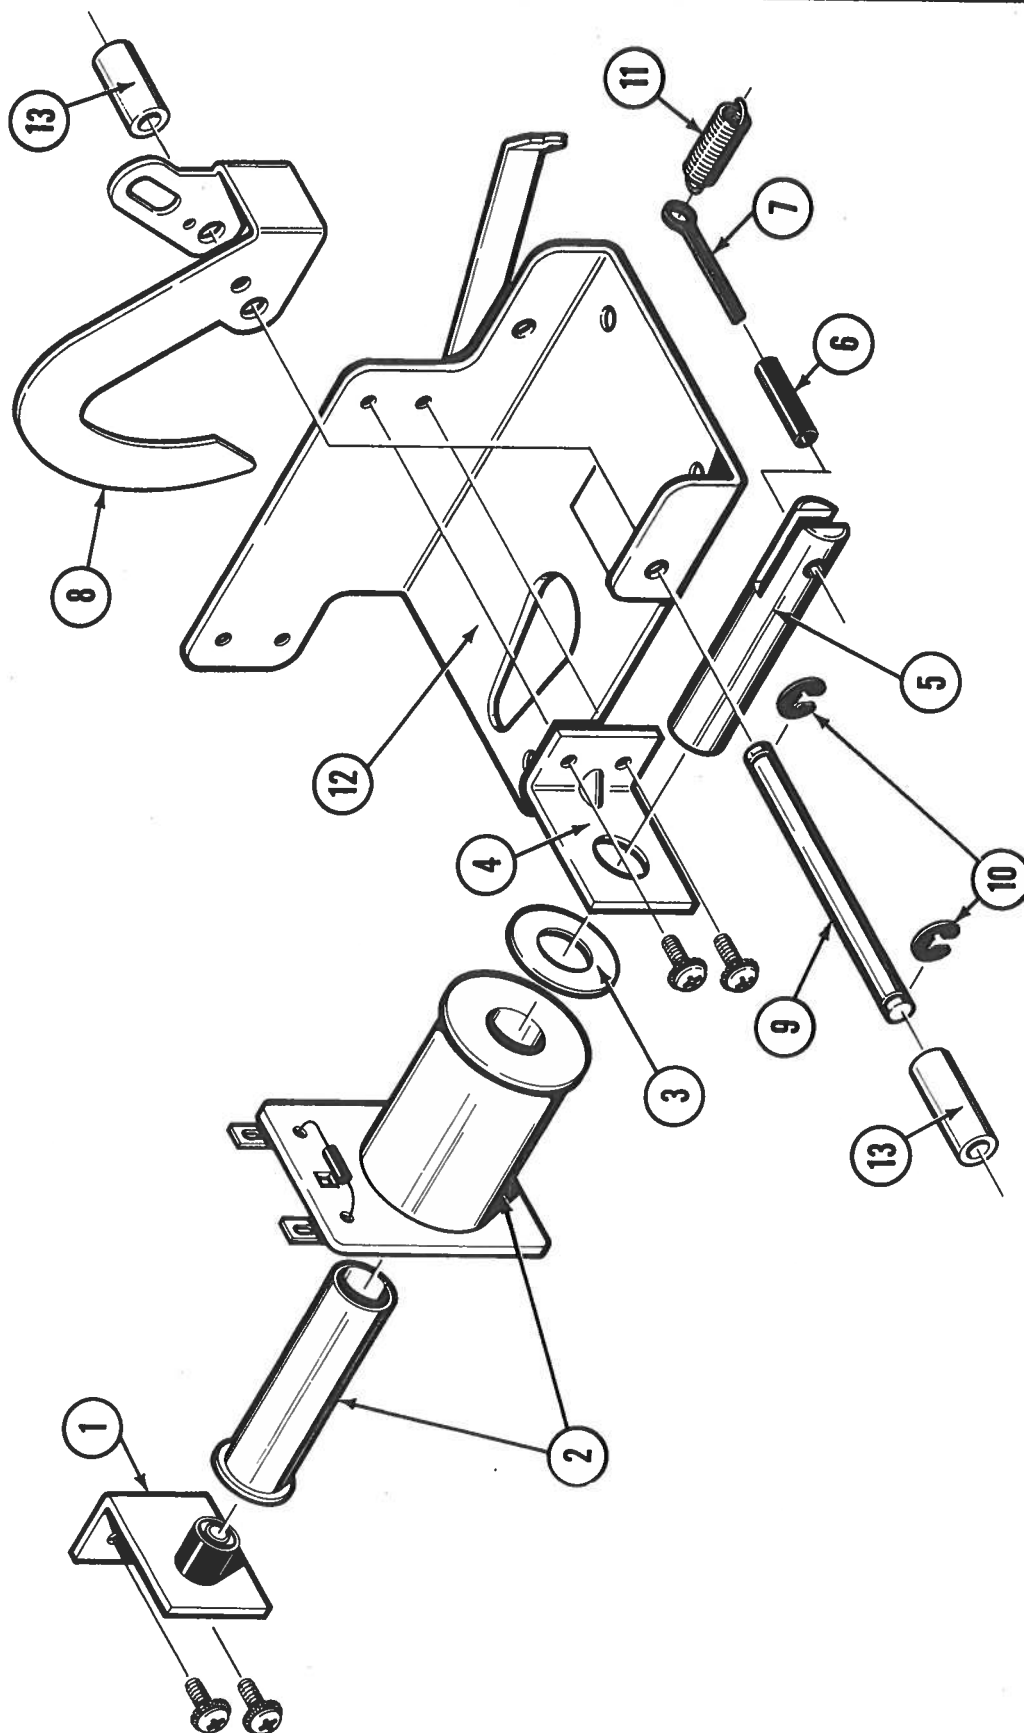

EJECT HOLE (SAUCER) ASSEMBLY - PARTS LIST
PART NO. AE47-00033-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	A360-00012-0000	CORE PLUG ASSY.
2	A360-00211-0000	COIL & TUBING ASSY.
	103E-00002-0015	1N4004 GP 400V 1A DIODE
3	0017-00104-0119	WASHER
4	0360-00313-00XF	SOLENOID BRACKET
	AE47-00036-0000	ARM ASSY. (INCLUDES ITEMS 5 THRU 7)
5	0360-00714-00XF	PLUNGER
6	0017-00007-0089	ROLL PIN
7	0017-00007-0043	COTTER PIN
8	0365-00166-00XF	BALL KICKER ASSY.
9	0360-00708-00XF	SHAFT
10	0017-00100-0110	RING PER .188" DIA. (2 REQ'D.)
11	0010-00275-0230	EXTENSION SPRING
12	A360-00021-00XF	MOUNTING BRKT. WELD ASSY.
	0360-00112-0000	PLATE: GUIDE
	0360-00113-0000	BRKT.: MOUNTING
13	0012-00010-4200	BUSHING (2 REQ'D.)

SPARE PARTS KIT
PART NO. AE14-00041-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
	0017-00003-0007	FUSE MDA 2AG 3A 250V S-B
	0017-00003-0008	FUSE 6A 32V M-B
	0017-00003-0010	FUSE 3AG 3/4A 250V F-B
	0017-00003-0011	FUSE AGC 3AG 15A 32V M-B (2 REQ'D.)
	0017-00003-0103	FUSE MDX 3 AG 1 A 250V S-B
	0017-00003-0175	FUSE 5A 32V F-B
	0017-00003-0177	FUSE 3/4A 250V S-B
	0017-00003-0206	FUSE AGX 8AG 3/16A 250V F-B
	0017-00003-0387	FUSE AGC 3AG 8A 32V M-B
	0017-00003-0501	LAMP WG B 6.3V .2A #555 (10 REQ'D.)
	0017-00003-0525	LAMP WG B 12.8V 1.0A #912 (4 REQ'D.)
	0017-00003-0545	FUSE AGC 3AG 7A 32V M-B
	0017-00009-0546	BALL 1-1/16 DIA. STEEL
	0017-00009-0547	BALL 15/16 DIA. STEEL
	0017-00009-0551	ALLEN WRENCH 1/8 INCH
	0360-00709-0000	REMOVAL TOOL P.C. BDS.
	0360-00900-0000	PLUMB-BOB TILT
	0017-00101-0186	1/4-28 X 5/16" HEX SOCKET CUP POINT SET SCREW (2 REQ'D.)
	0017-00101-0471	3/8-16 X 4-1/2" UNSLOTTED HEX HEAD BOLT (2 REQ'D.)
	0017-00102-0063	3/8-16 X 2-3/8" UNSLOTTED HEX HEAD BOLT (8 REQ'D.)
	0017-00102-0082	HEX NUT 3/8-16 (4 REQ'D.)
	0017-00103-0026	LEG ADJUSTER (4 REQ'D.)
	0017-00104-0050	WASHER - .375 I.D.

