BIG DEAL 279

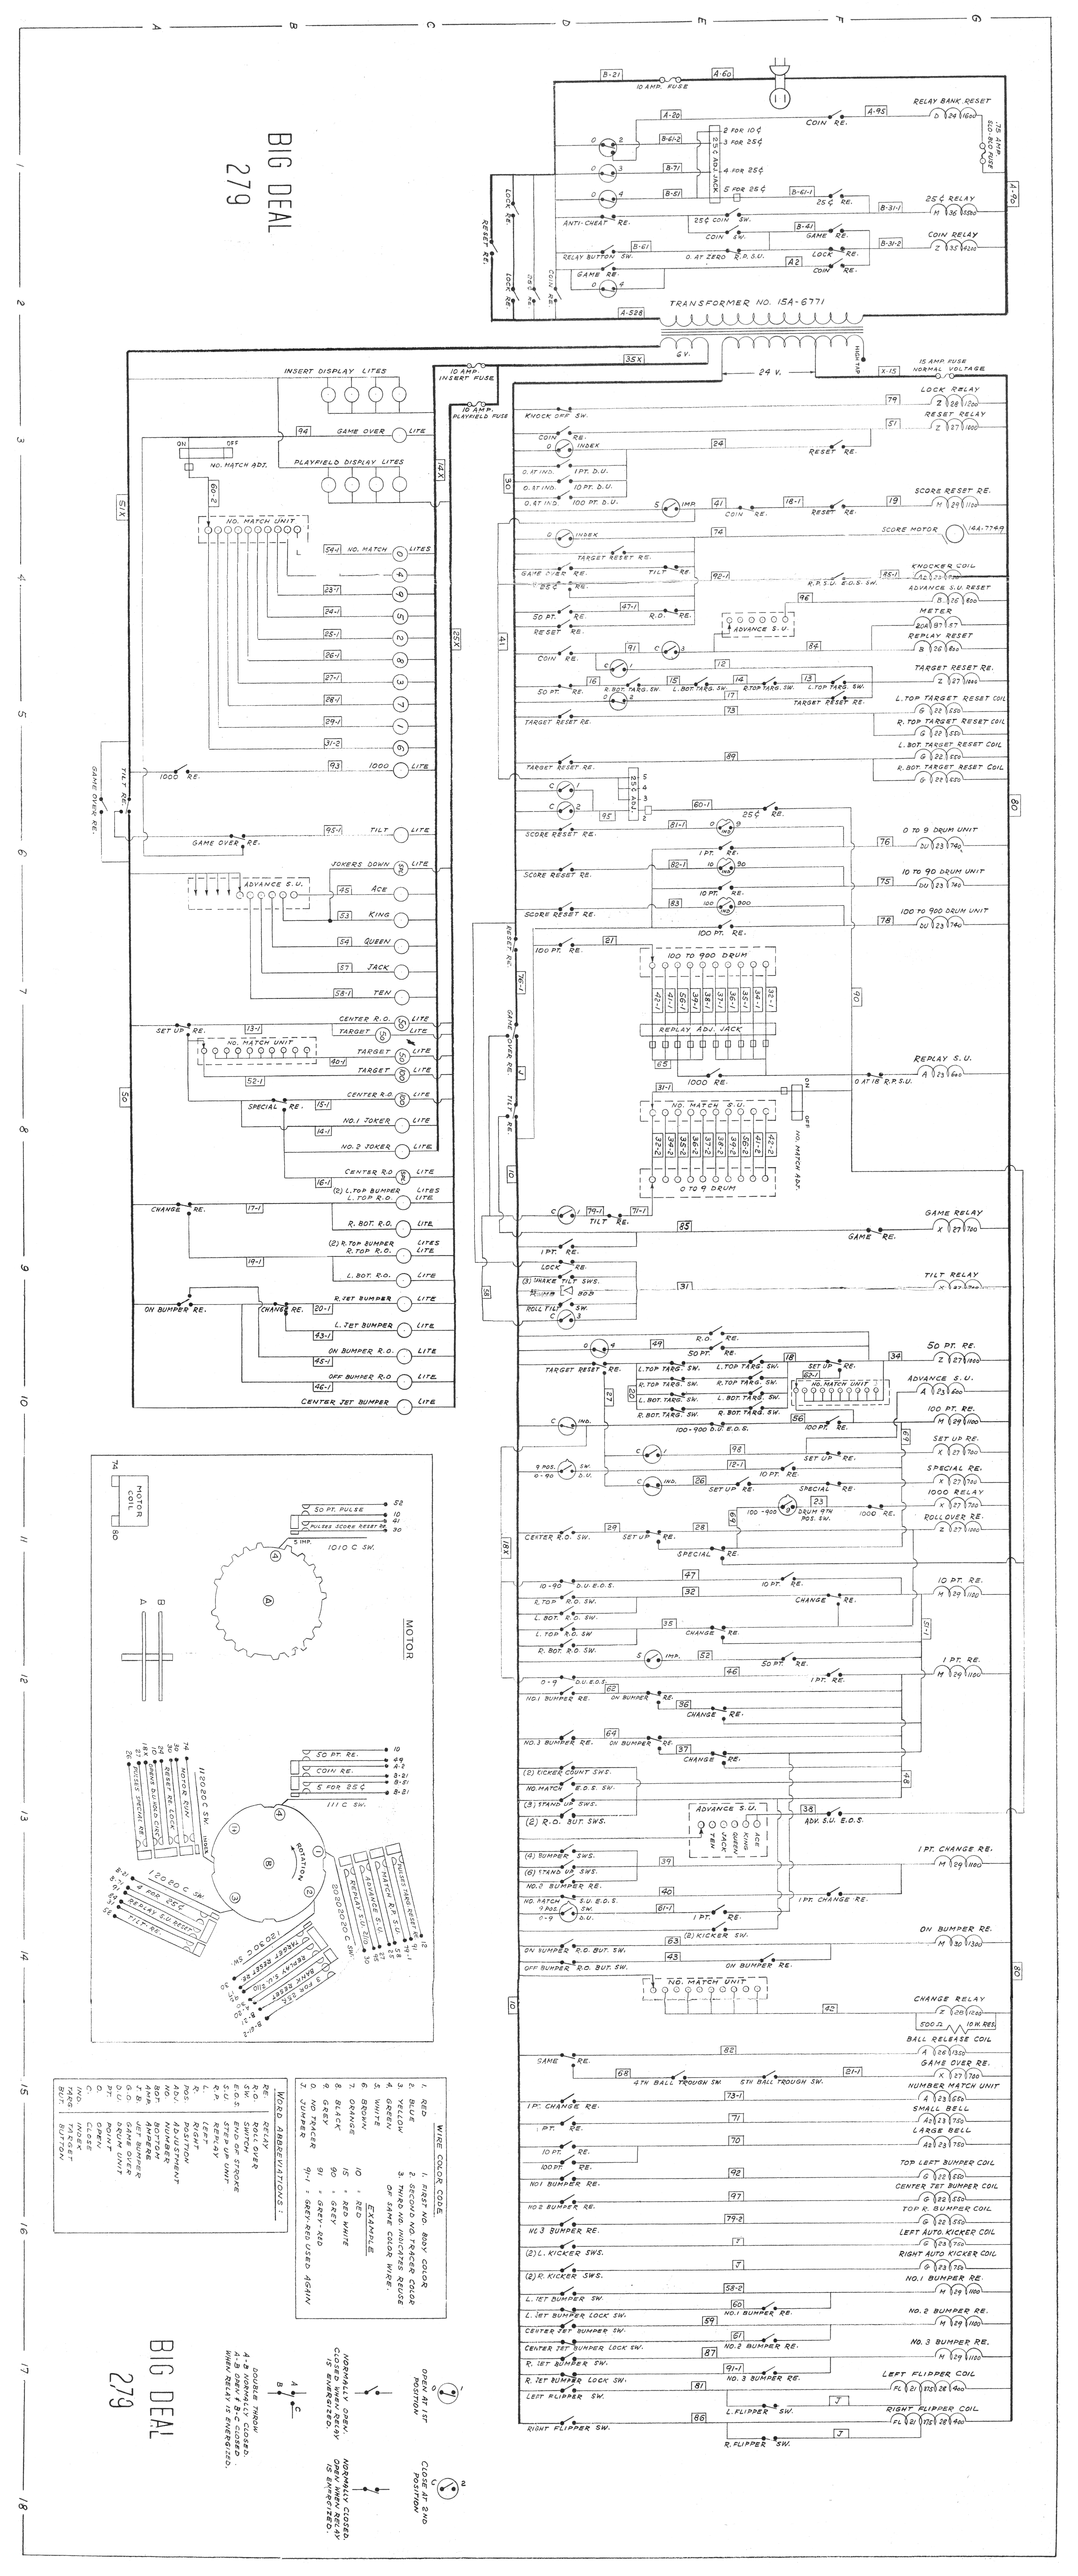
TRANSFORMER NO. 15A-6771
10 AMP. FUSE
RELAY BANK RESET
COIN RE.
2 FOR 10¢
3 FOR 25¢
4 FOR 25¢
5 FOR 25¢
25¢ RELAY
COIN RELAY
ANTI-CHEAT RE.
25¢ COIN SW.
COIN SW.
GAME RE.
RELAY BUTTON SW.
O. AT ZERO R.P.S.U.
LOCK RE.
COIN RE.
RESET RE.
GAME RE.
24 V.
15 AMP FUSE NORMAL VOLTAGE
10 AMP. INSERT FUSE
10 AMP. PLAYFIELD FUSE
INSERT DISPLAY LITES
GAME OVER LITE
PLAYFIELD DISPLAY LITES
NO. MATCH ADJ.
NO. MATCH UNIT
NO. MATCH LITES
1000 LITE
TILT LITE
GAME OVER RE.
1000 RE.
TILT RE.
JOKERS DOWN LITE
ADVANCE S.U.
ACE
KING
QUEEN
JACK
TEN
CENTER R.O. LITE
TARGET LITE
SPECIAL RE.
NO.1 JOKER LITE
NO.2 JOKER LITE
CENTER R.O. LITE
(2) L.TOP BUMPER LITES
L. TOP R.O. LITE
CHANGE RE.
R. BOT. R.O. LITE
(2) R. TOP BUMPER LITES
R. TOP R.O. LITE
L. BOT. R.O. LITE
R. JET BUMPER LITE
ON BUMPER RE.
CHANGE RE.
L. JET BUMPER LITE
ON BUMPER R.O. LITE
OFF BUMPER R.O. LITE
CENTER JET BUMPER LITE
KNOCK OFF SW.
COIN RE. INDEX
O. AT IND.
1 PT. D.U.
10 PT. D.U.
100 PT. D.U.
IMP.
RESET RE.
SCORE RESET RE.
SCORE MOTOR
KNOCKER COIL
R.P.S.U. E.O.S. SW.
ADVANCE S.U. RESET
METER
REPLAY RESET
TARGET RESET RE.
L. TOP TARG. SW.
R. TOP TARG. SW.
L. BOT. TARG. SW.
R. BOT. TARG. SW.
L. TOP TARGET RESET COIL
R. TOP TARGET RESET COIL
L. BOT TARGET RESET COIL
R. BOT TARGET RESET COIL
25¢ RE.
0 TO 9 DRUM UNIT
10 TO 90 DRUM UNIT
100 TO 900 DRUM UNIT
100 PT. RE.
100 TO 900 DRUM
REPLAY ADJ. JACK
REPLAY S.U.
0 AT 18 R.P.S.U.
1000 RE.
NO. MATCH S.U.
0 TO 9 DRUM
NO. MATCH ADJ.
TILT RE.
GAME RELAY
TILT RELAY
1 PT. RE.
LOCK RE.
(3) SNAKE TILT SWS.
ROLL TILT SW.
R.O. RE.
50 PT. RE.
SET UP RE.
ADVANCE S.U.
100 PT. RE.
SET UP RE.
SPECIAL RE.
1000 RELAY
ROLLOVER RE.
10 PT. RE.
1 PT. RE.
CHANGE RE.
ON BUMPER RE.
(2) KICKER SW.
ON BUMPER RE.
NO. MATCH UNIT
CHANGE RELAY
500 Ω 10 W. RES.
BALL RELEASE COIL
GAME RE.
GAME OVER RE.
4TH BALL TROUGH SW.
5TH BALL TROUGH SW.
NUMBER MATCH UNIT
SMALL BELL
LARGE BELL
TOP LEFT BUMPER COIL
CENTER TOP BUMPER COIL
TOP R. BUMPER COIL
LEFT AUTO KICKER COIL
RIGHT AUTO KICKER COIL
NO.1 BUMPER RE.
NO. 2 BUMPER RE.
NO. 3 BUMPER RE.
LEFT FLIPPER COIL
RIGHT FLIPPER COIL
L. FLIPPER SW.
R. FLIPPER SW.
MOTOR COIL
50 PT. PULSE
PULSES SCORE RESET RE.
5 IMP.
1010 C SW.
MOTOR
1120 C SW.
COIN RE.
5 FOR 25¢
111 C SW.
1200 C SW.
TILT RE.
1400 C SW.
1300 C SW.
ROTATION
CENTER JET RESET RE.
R. JET RESET RE.
L. JET RESET RE.
TOP JET RESET RE.
SCORE RESET RE.
REPLAY S.U. RESET RE.
ADVANCE S.U. RESET RE.
1500 C SW.
1600 C SW.
1700 C SW.
1800 C SW.
1900 C SW.
2000 C SW.
2100 C SW.
2200 C SW.
2300 C SW.
2400 C SW.
2500 C SW.
2600 C SW.
2700 C SW.