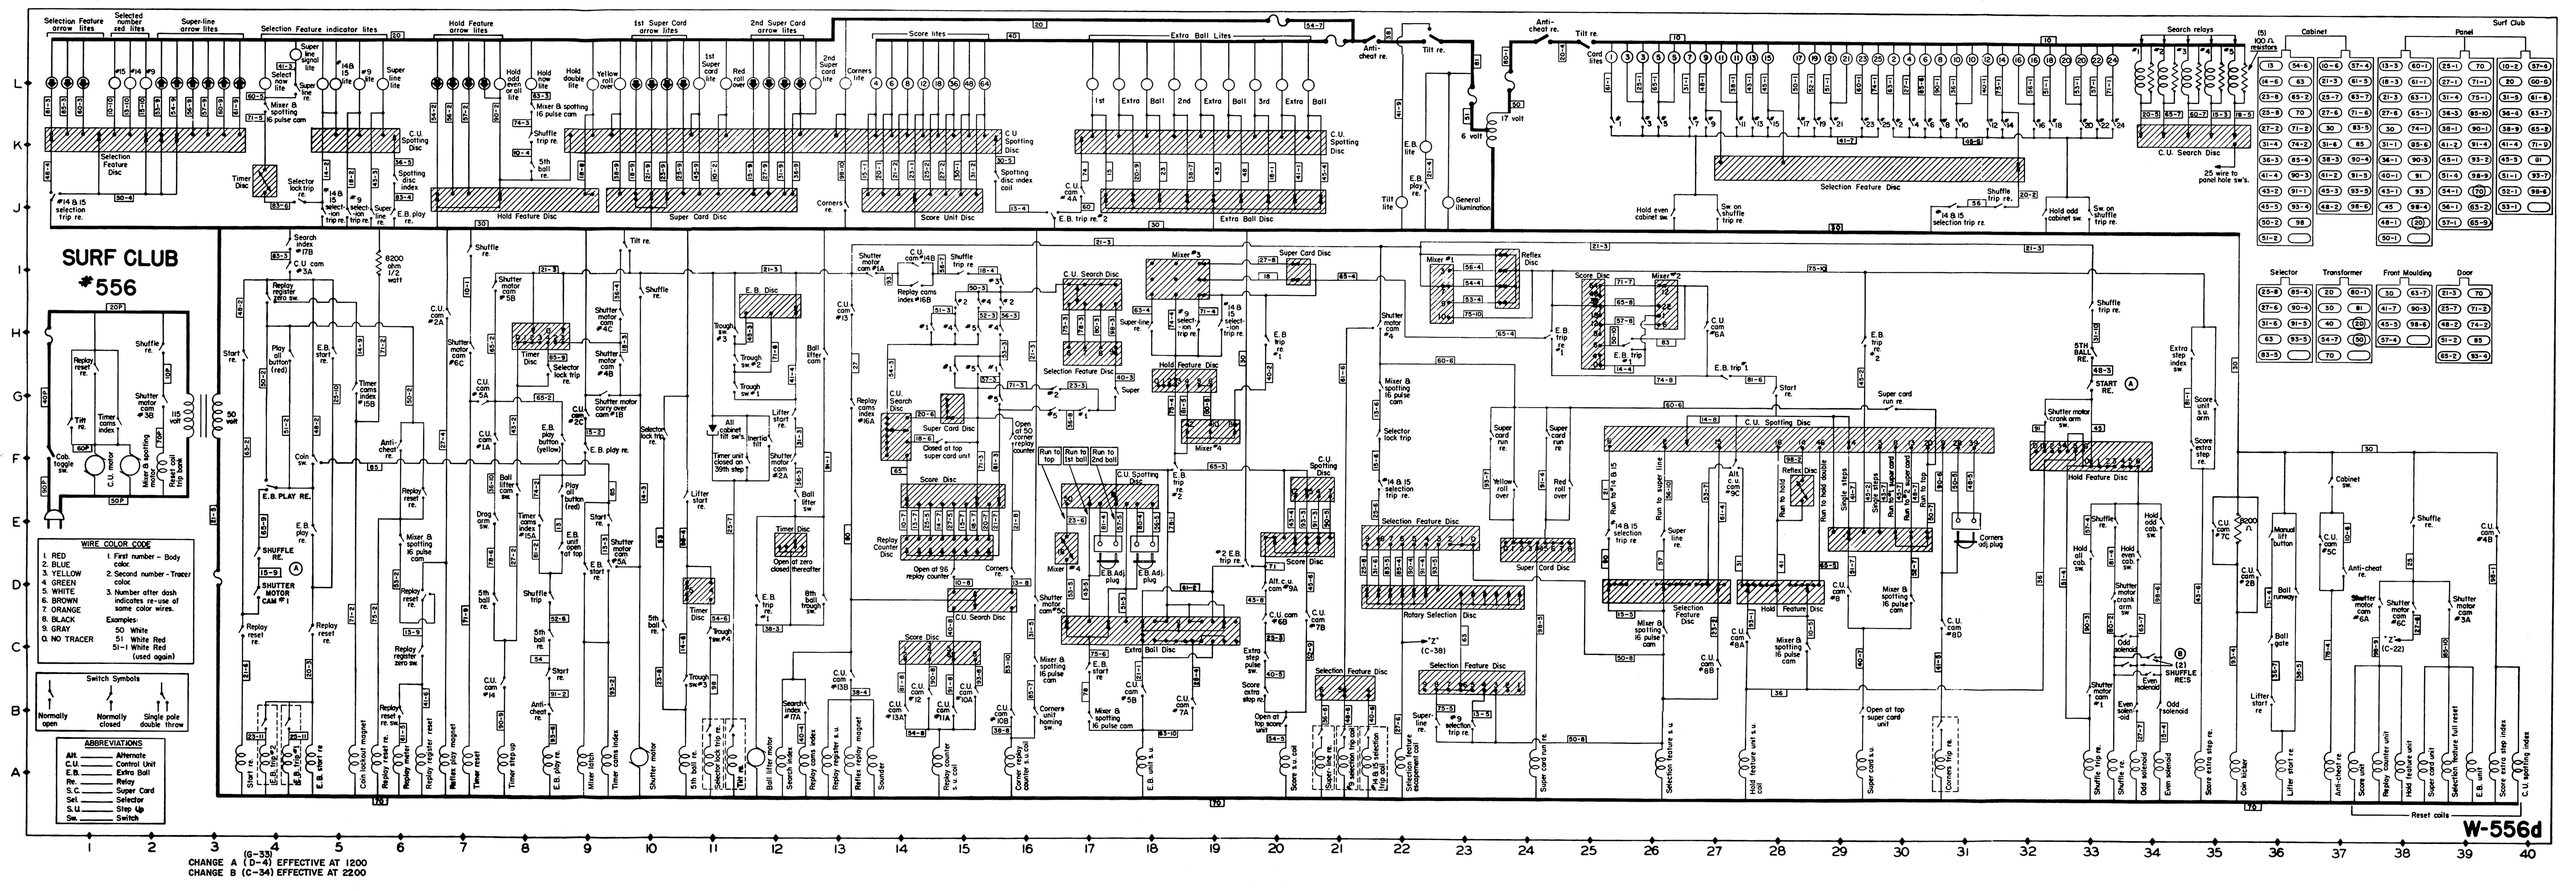
SURF CLUB
#556
WIRE COLOR CODE
1. RED
2. BLUE
3. YELLOW
4. GREEN
5. WHITE
6. BROWN
7. ORANGE
8. BLACK
9. GRAY
0. NO TRACER
1. First number - Body color.
2. Second number - Tracer color.
3. Number after dash indicates re-use of same color wires.
Examples:
50 White
51 White Red
51-1 White Red (used again)
Switch Symbols
Normally open
Normally closed
Single pole double throw
ABBREVIATIONS
Alt. Alternate
C.U. Control Unit
E.B. Extra Ball
Re. Relay
S.C. Super Card
Sel. Selector
S.U. Step Up
Sw. Switch
Selection Feature Disc
Super Card Disc
Hold Feature Disc
Score Unit Disc
Extra Ball Disc
Score Disc
Rotary Selection Disc
Reflex Disc
Mixer #1
Mixer #2
Mixer #3
Mixer #4
Mixer #5
Shuffle re.
Tilt re.
Start re.
Coin sw.
Anti-cheat re.
Ball lifter coil
Ball lifter sw.
Ball trough sw.
Timer Disc
Timer cams index #15B
Timer unit closes on 30th step
Open at zero closed thereafter
Shutter motor #3B
Shutter motor #4B
Shutter motor #5B
Shutter motor #6B
Shutter motor #7B
Shutter motor #8B
Shutter motor #9B
Shutter motor #10B
Shutter motor #11B
Shutter motor #12B
Shutter motor #13B
Shutter motor #14B
Shutter motor #15B
Shutter motor