


TRIUMPH ADJUSTMENTS

To reduce number of hits on 2 and/or 3, turn long rubber bumpers DOWN, as indicated by DOTTED LINES in drawing below. To increase number of hits, turn bumpers up.



To reduce number of hits on 4 and 5, turn long rubber bumpers DOWN, as indicated by DOTTED LINES in drawing below, thus providing a NARROWER passage between the bumpers. To increase number of hits, turn bumpers up, thus providing a wider passage.

Hits on 4 may also be reduced by turning whip-spring above Spiral No. 6 UP, as indicated by DOTTED LINES in drawing below. A similar adjustment of whip-spring above Spiral No. 7 may be made to reduce number of hits on 5.

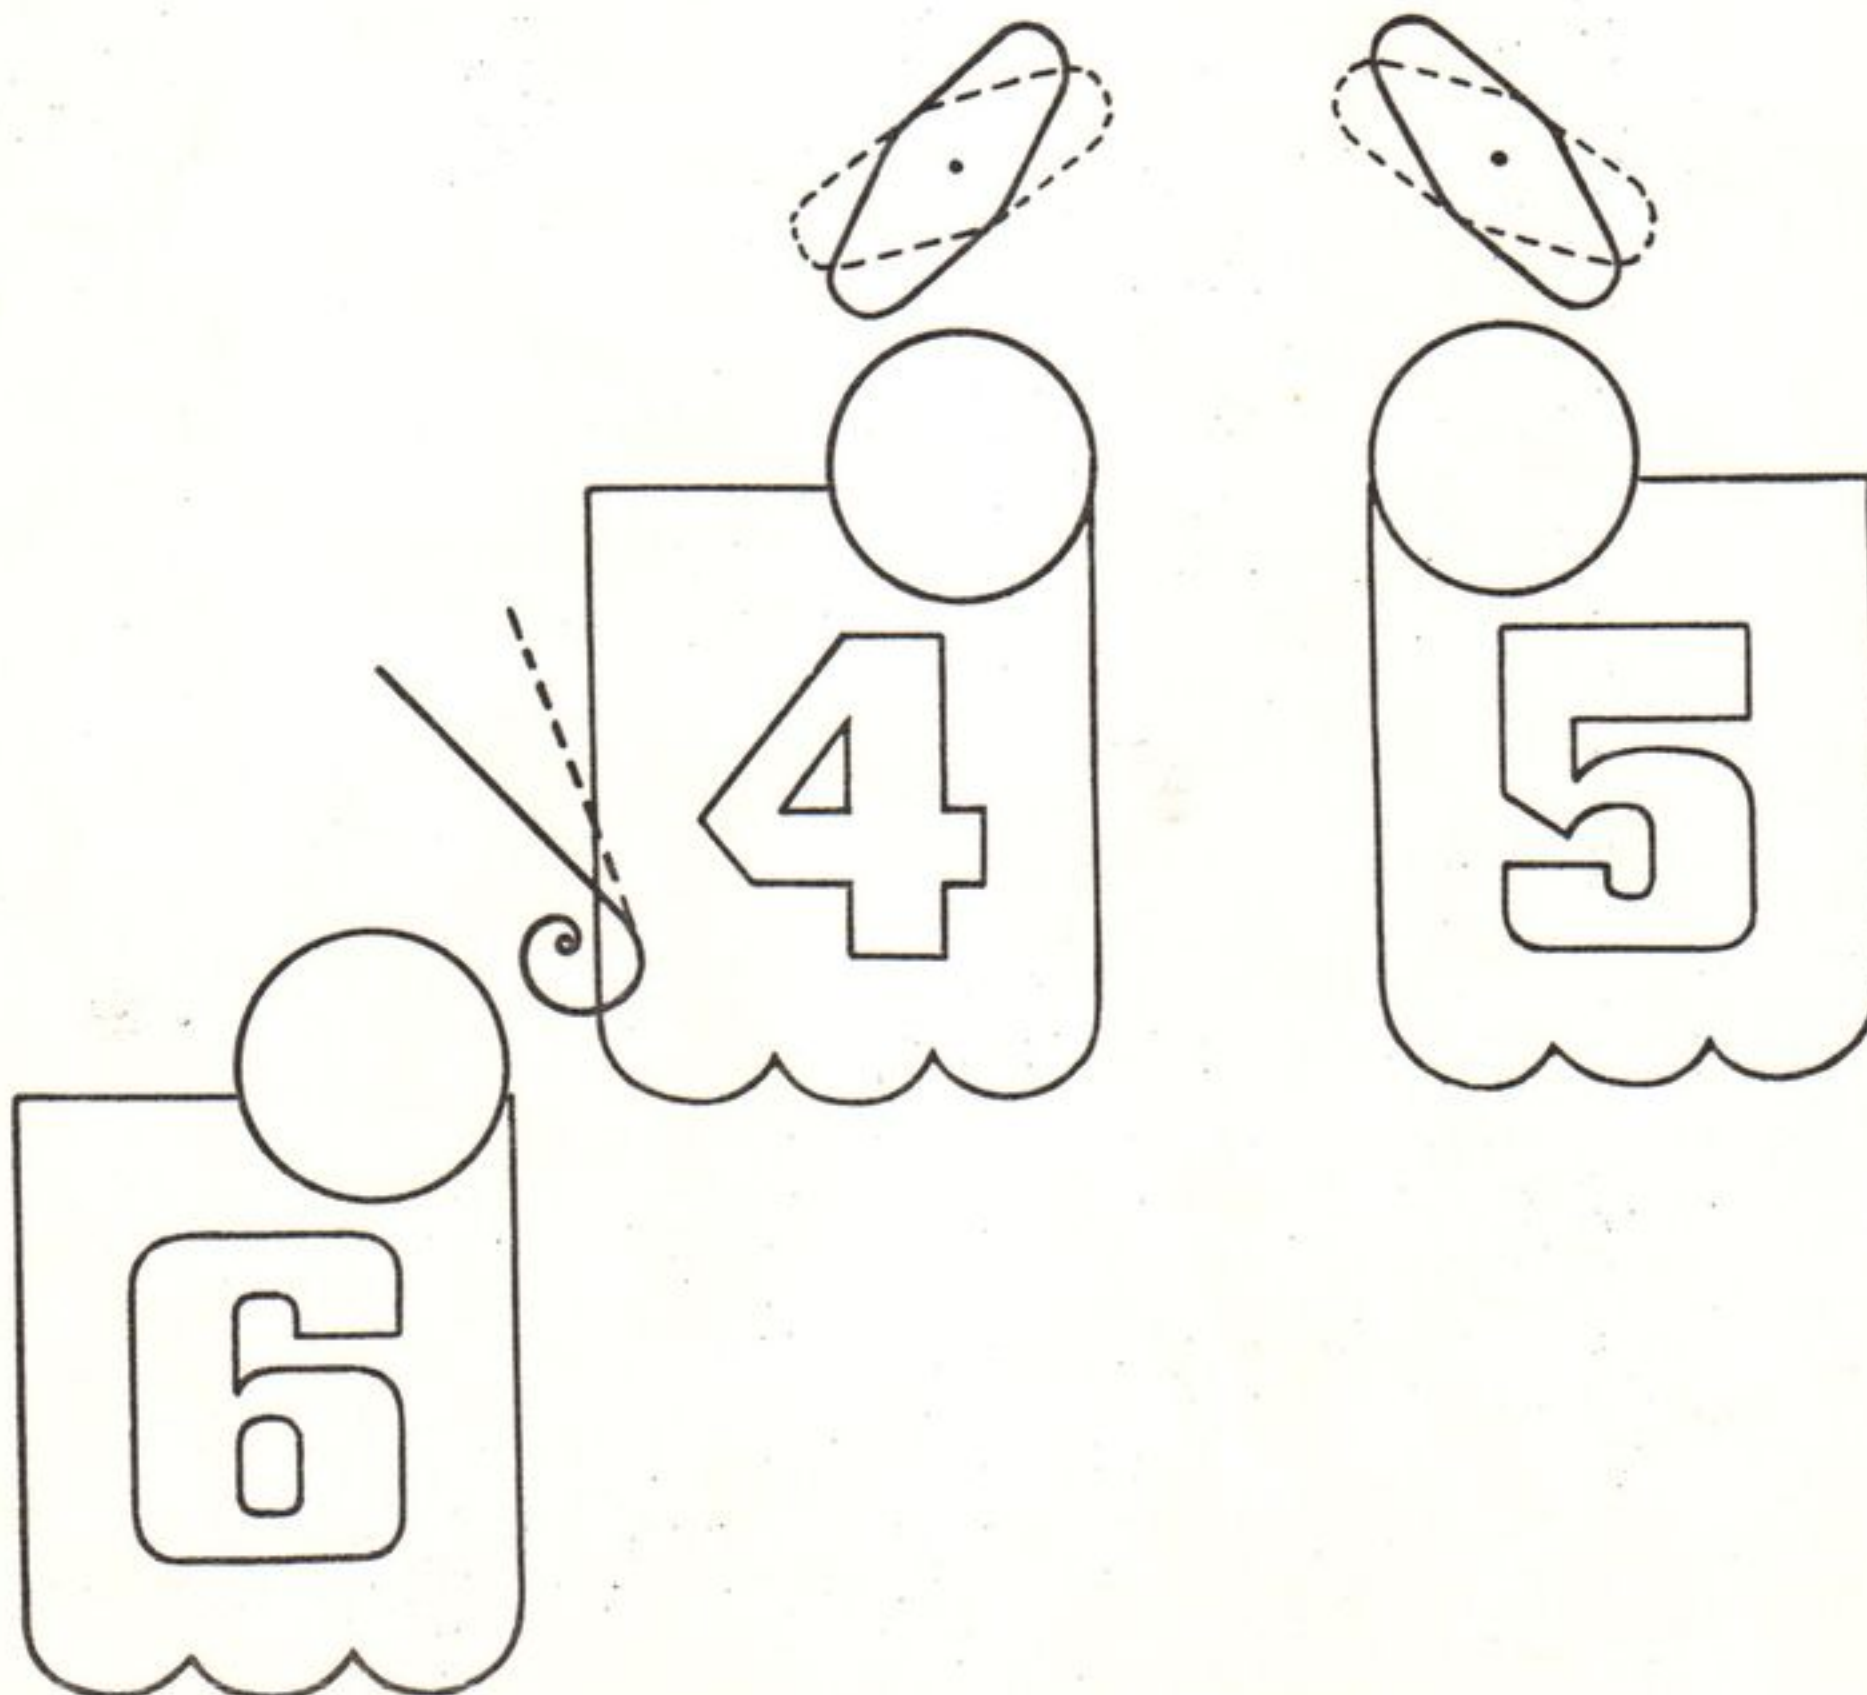

TRIUMPH BUY-BACK ADJUSTMENTS

MAXIMUM number of balls which player may buy back is adjustable by means of 5-POINT PLUG directly back of Relays on under-side of top-panel.

To adjust, open Side Door and reach up under top-panel. Adjustments are indicated by diagrams below.

POSITION A: 5 balls maximum. Use card TRIUMPH-2005


POSITION B: 4 balls maximum. Use card TRIUMPH-2004

POSITION C: 3 balls maximum. Use card TRIUMPH-2003

POSITION D: 2 balls maximum. Use card TRIUMPH-2002

POSITION E: 1 ball maximum. Use card TRIUMPH-2001

WHEN PLUG IS ENTIRELY REMOVED FROM SOCKET, NO BALLS MAY BE BOUGHT BACK. Use card TRIUMPH-2000-N.

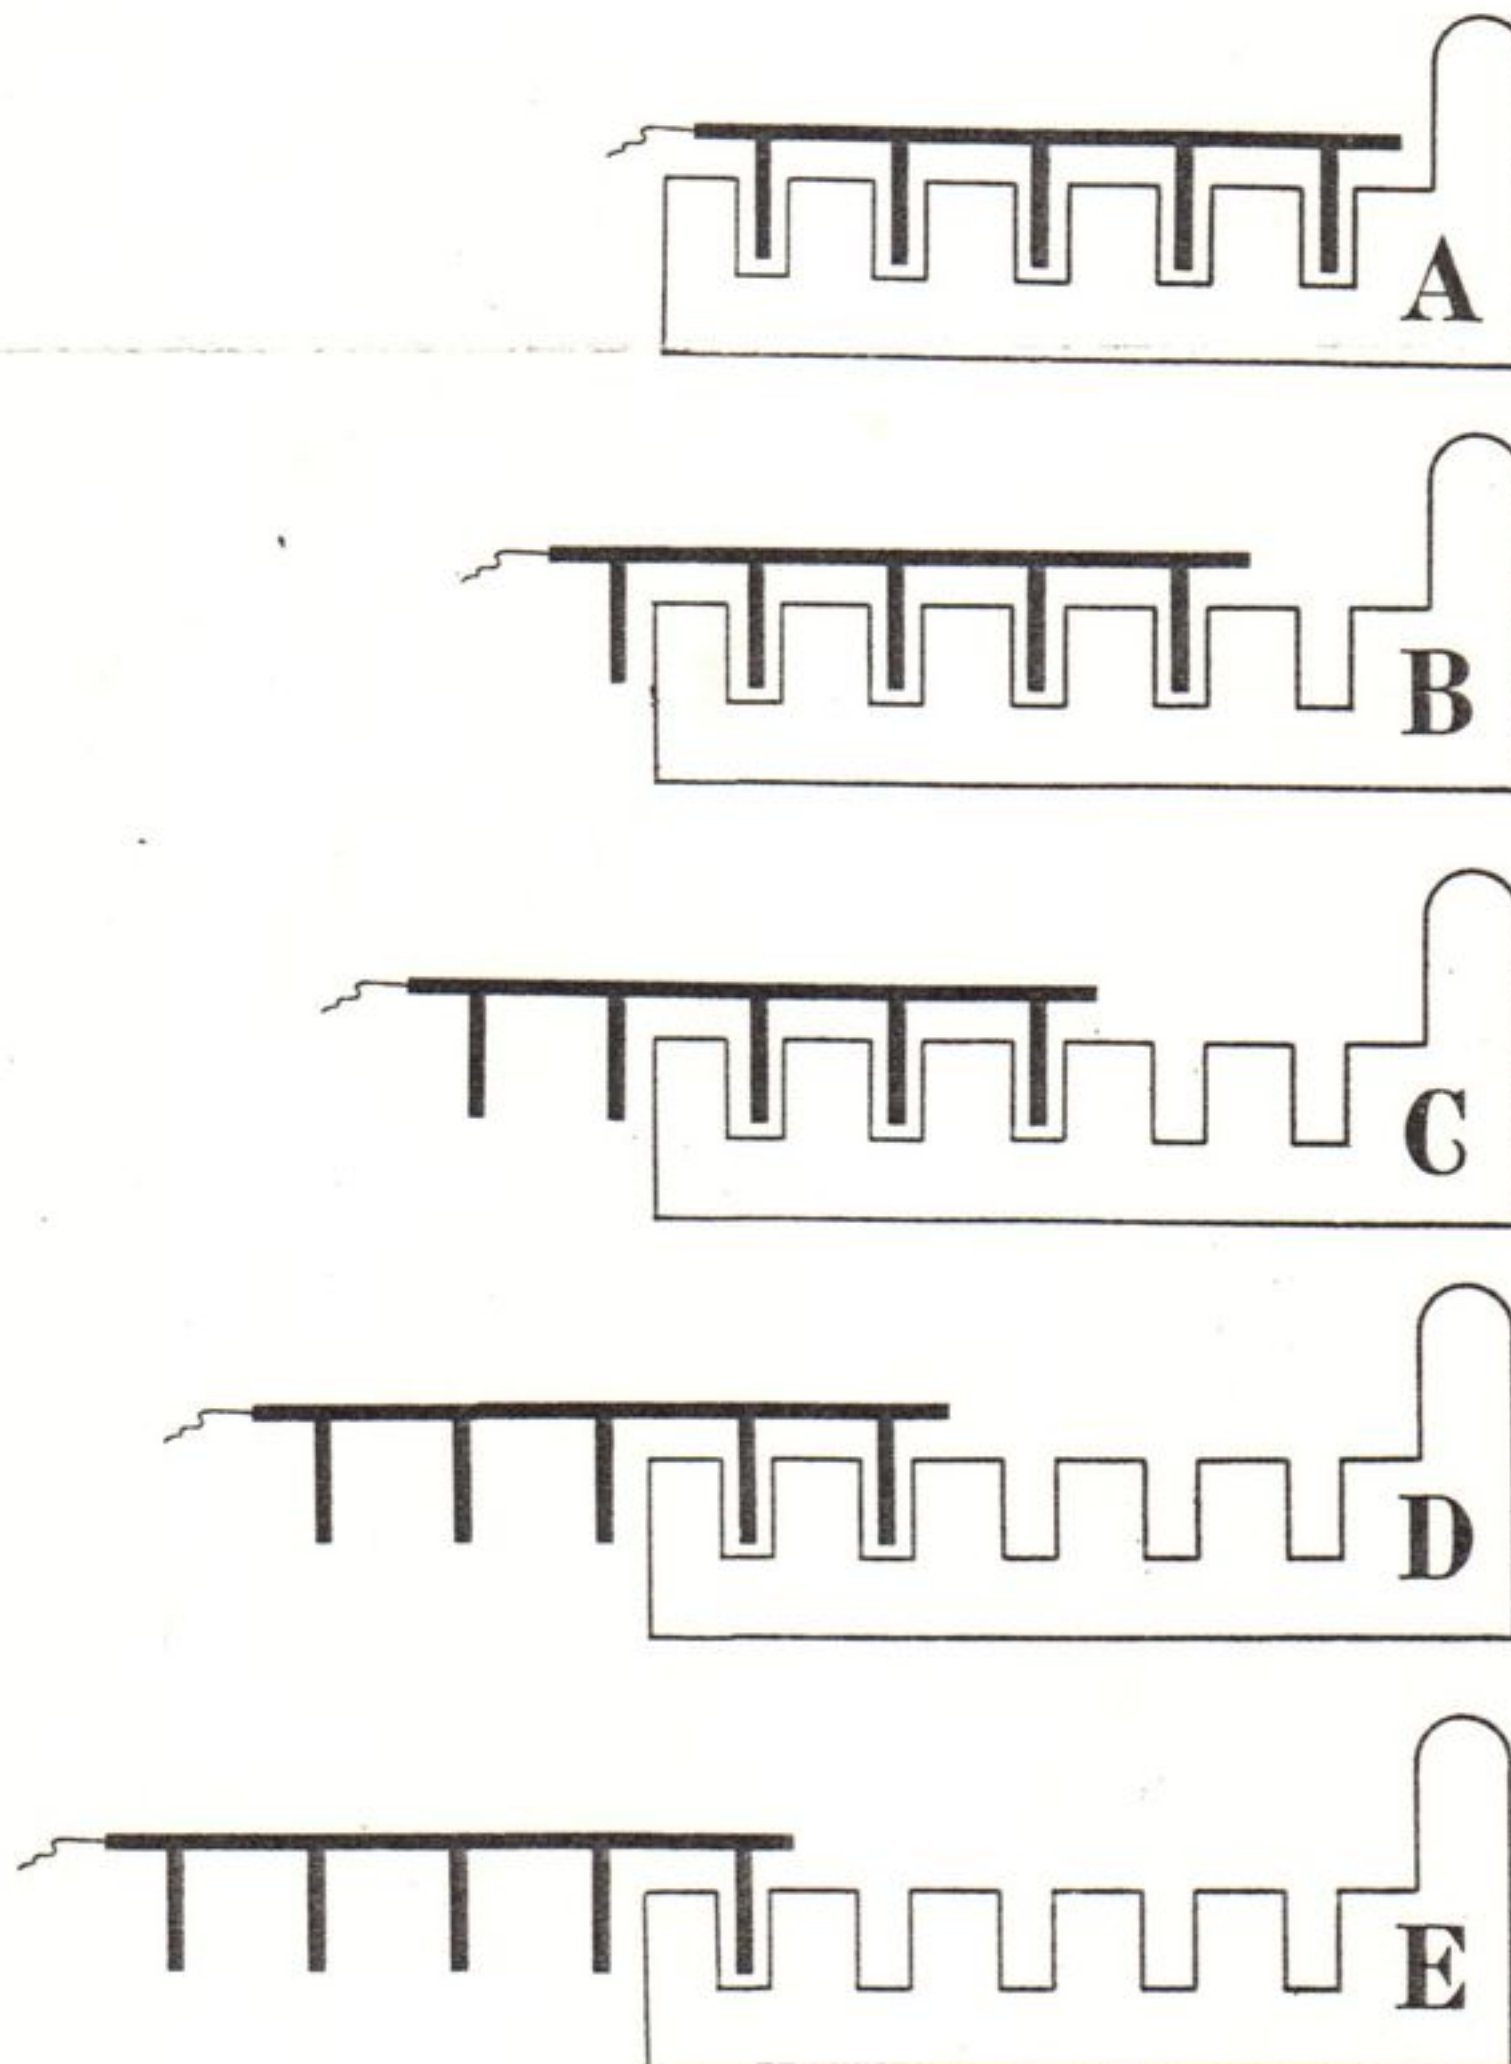

IMPORTANT

When Spiral Bumpers are removed to replace lights or for any other purpose,
BE SURE, when replacing Bumper, to place Bumper so that TAIL IS CENTERED
EXACTLY IN THE CARBON BUSHING.

TRIUMPH-4005