



ELECTRONICS, INC.

STAMPEDE

(MODEL 472)

PARTS CATALOG

NO. 472 - 2002

STERN ELECTRONICS, INC.

1725 DIVERSEY BOULEVARD



CHICAGO, ILLINOIS 60614



PHONE (312) 935-4600


INTRODUCTION

INTRODUCTION

**THIS PARTS CATALOG HAS BEEN COMPILED TO HELP THE SERVICEMAN
IN SELECTING THE PARTS NECESSARY FOR PROPER MAINTENANCE.
WHEN ORDERING PARTS ALWAYS SPECIFY NAME OF UNIT PART NUMBERS
AND A DESCRIPTION OF THE PART AS SHOWN IN THIS CATALOG.**

CAT. NO. 472-2002

CABINET COMPLETE

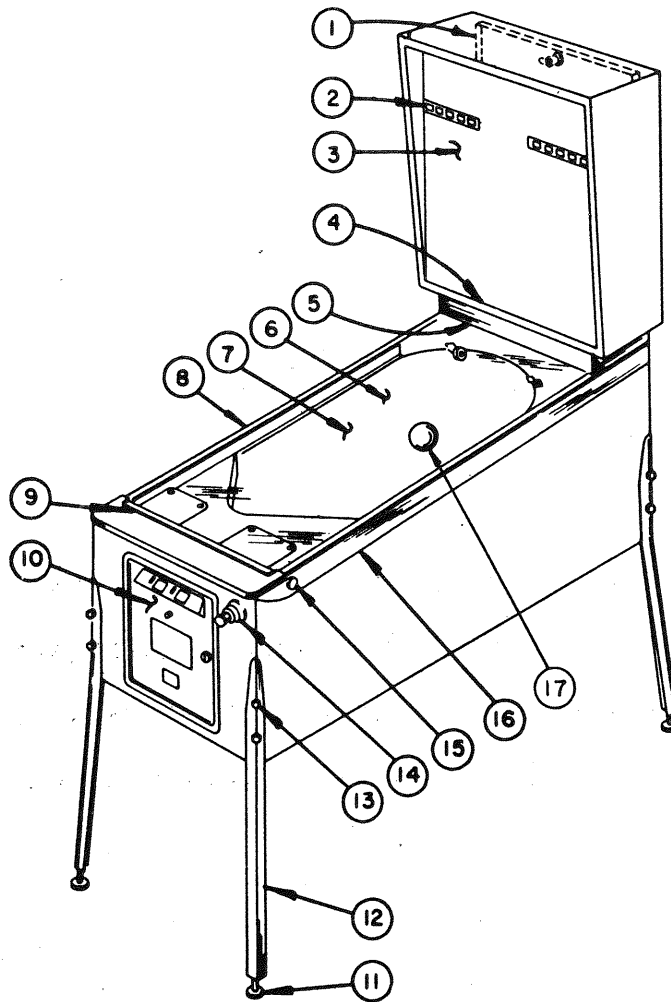

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	460-504	BACK DOOR	9		FRONT MOLDING (SEE PAGE 6)
2		SCORING DRUM UNITS (SEE PAGE 26)	10		CASH DOOR & COMPARTMENT (SEE PAGES 4 & 5)
3	468-350	BACKRACK GLASS (26-1/2" x 23-1/2" x 3/16")	446-509		CASH BOX
4	344-506-M	GLASS LIFT CHANNEL	339-508-B-C		CASH BOX COVER
	344-800-I-1	PLASTIC GLASS CHANNEL (TOP)	446-800		COIN TRAY (WIDE) (2-REQ'D.)
	344-800-H	PLASTIC GLASS CHANNEL (TWO SIDE)	446-801		COIN TRAY (NARROW)
5	295-536	GLASS BACK SPACER	11	#6851	LEG LEVELER
	295-537	GLASS TOP BACK ARCH	12	291-2501-B	METAL CABINET LEG ASS'Y
6		TOP OF PLAYFIELD (SEE PAGE 8)	13		3/8-16 x 2-1/2" LG. HEX HD. BOLTS
7	#6550-T	TOP GLASS (21" x 43" x 3/16")	14		SHOOTER ASS'Y (SEE PAGE 6)
	295-801-A	EXTRUDED GLASS CHANNEL (ONE ON EACH SIDE)	15		FLIPPER BUTTON (SEE PAGE 32)
8	326-539-L	GLASS CHANNEL COVER	16	326-539-R	GLASS CHANNEL COVER
			17	#6717-C	1-1/16" DIA. CHROME STEEL BALL

ADJUSTMENTS

HI-SCORE POINT ADJUSTMENT FOR SCORES UNDER 108,000

2,000 - G-W		50000- ☐	☐ -00000
4,000 - O-BLU		60000- ☐	☐ -10000
6,000 - BLU-Y		70000- ☐	☐ -20000
8,000 - B-R		80000- ☐	☐ -30000
		90000- ☐	☐ -40000

EXAMPLE

G-W WIRE INTO 60,000 POSITION SCORES AT 62,000.
B-R WIRE INTO 90,000 POSITION SCORES AT 98,000.


HI-SCORE POINT ADJUSTMENT FOR SCORES STARTING AT 102,000

2,000 - G-W		50000- ☐	☐ -00000
4,000 - O-BLU		60000- ☐	☐ -10000
6,000 - BLU-Y		70000- ☐	☐ -20000
8,000 - B-R		80000- ☐	☐ -30000
		90000- ☐	☐ -40000


EXAMPLE

G-W WIRE INTO 00,000 POSITION SCORES AT 102,000.
B-R WIRE INTO 20,000 POSITION SCORES AT 128,000.

RIGHT CHUTE ADJ.

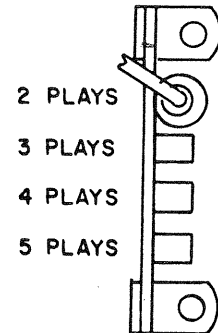

1 COIN = 1 PLAY
2 COINS = 3 PLAYS

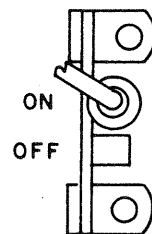


HI-SCORE ADJ.


ADDED
BALL
CREDIT




MATCH ON OFF

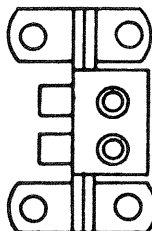


HI-SCORE LOW SCORE ADJ. SCORES OVER 102,000 SCORES UNDER 108,000

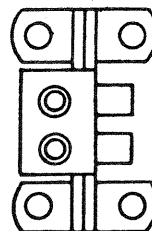

GAME ADJ. 3 BALLS 5 BALLS

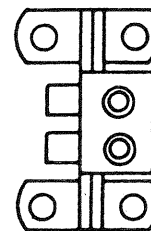


CASH COMPARTMENT

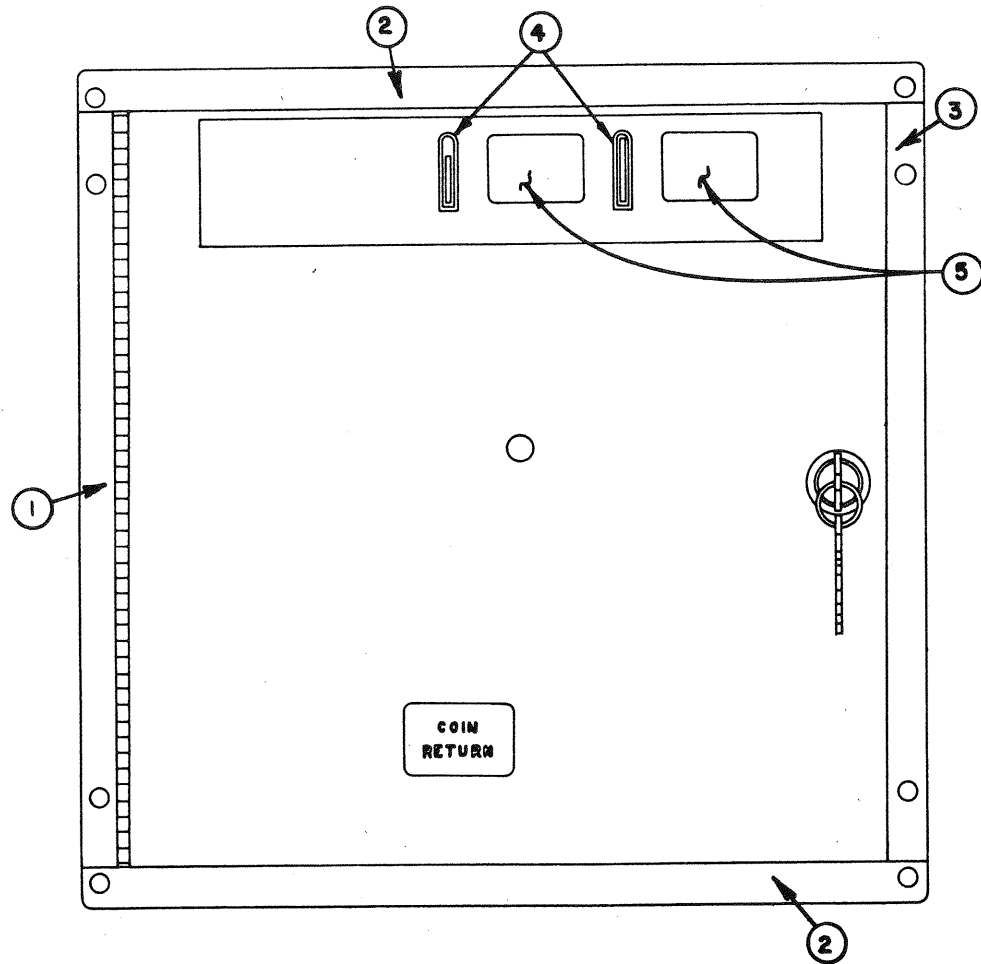


ITEM	PART NO.	DESCRIPTION
1	382-2523-B-C	COMPLETE DOOR ASS'Y (SEE PAGE 5)
2	384-501	TOP & BOTTON DOOR FRAME
3	384-500	SIDE DOOR FRAME
4		COIN ENTRY MOLDING (SEE PAGE 30)
5		COIN DENOMINATION WINDOWS (SEE PAGE 30 & 31)
6		CASH BOX (SEE PAGE 2)

CASH COMPARTMENT DOOR

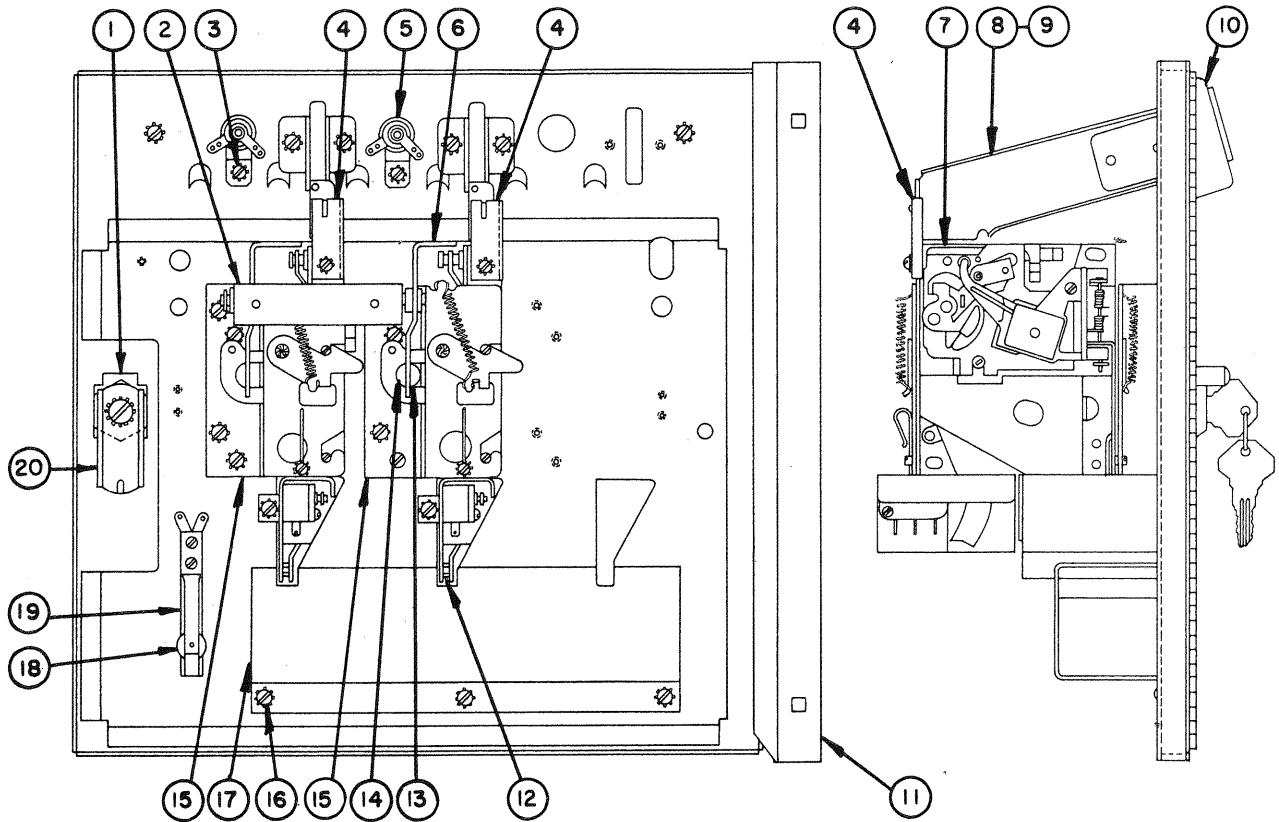


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
	382-2523-B-C	COMPLETE FRONT ASS'Y	11	382-2522	FRONT DOOR & REINFORCEMENT ASS'Y
1	246-551	LOCK PLATE	12	333-2528	REJECTED COIN CONCUR FUNNEL ASS'Y
2	326-521	REJECTOR BRACKET	13	326-1505	REJECTOR ROD
3		#6-32 x 1/4" LG. SEMS UNIT	14	#6828-37	RETAINING RING
4	248-510	CENTERING BRACKET	15	333-2530-S	HOUSING, MICRO SWITCH & COIN LOCK
5	#5266	BAYONET SOCKET			OUT COIL ASS'Y (248-301 COIL)
	#5212	BULB		326-2522	HOUSING SHELL ASSEMBLY (326-2522-S
6	326-2510	REJECTOR ARM & BUSHING ASS'Y			WITH COIN LOCK OUT COIL MOUNTED)
	#5303	WASHER		248-300	MICRO SWITCH (SPECIFY COIN
	#6722-18	RETAINING RING			DENOMINATION FOR PROPER MICRO SW.)
7	#6801	COIN ACCEPTOR INSERT (SPECIFY	16		#8-32 x 1/4" LG. SEMS UNIT
		COIN DENOMINATION)	17	326-2527	COIN RETURN HOUSING ASS'Y
8	382-2501	COIN GUIDE ASSEMBLY	18	#220	SWITCH ASS'Y
9	382-2502	COIN GUIDE COVER ASS'Y	19	326-544-A	ANTI-GROUNDING FINGER
	382-2502-A	COIN GUIDE COVER ASS'Y FOR 25¢	20	460-505	LOCK CAM
		COIN ACCEPTOR ONLY		#6720	LOCK
10	382-2504-B-C	COIN WINDOW BRACKET ASS'Y			

FRONT MOLDING & SHOOTER ASSEMBLY

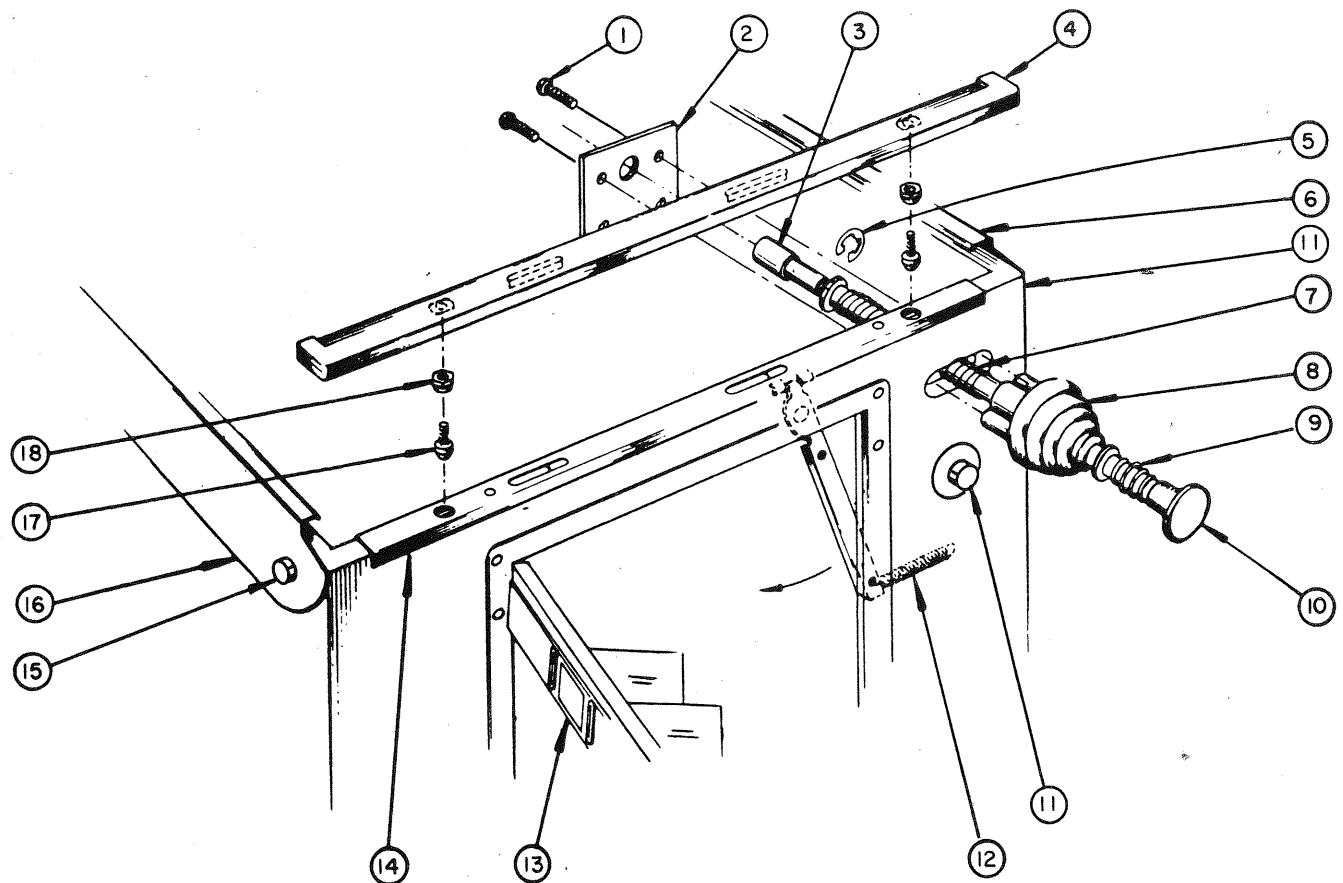


ITEM	PART NO.	DESCRIPTION
1		#8 x 1-1/4" LG. P.R. HD. S.M.S. TYPE "A"
2	308-500	PLUNGER BUSHING MTG. BRKT.
3	#6086	PLUNGER TIP
4	339-2516	FRONT MOLDING ASS'Y
5	#6722-37	RETAINING RING
6	326-539-R	GLASS CHANNEL COVER
7	295-903	SHOOTER TENSION SPRING
8	#16519-W	BALL SHOOTER HOUSING
9	295-902	SHOOTER CHECK SPRING
10	439-2508	SHOOTER ROD ASS'Y
11		CREDIT & FLIPPER BUTTON (SEE PAGE 32)
12	250-900	RETRACTION SPRING
13		CASH COMPARTMENT DOOR (SEE PAGES 4 & 5)
14	393-2503	FRONT MOLDING LOCK ASS'Y
15		LEFT FLIPPER BUTTON (SEE PAGE 32)
16	326-539-L	GLASS CHANNEL COVER
17	326-1500	FRONT MOLDING ADJUSTING SCREW
18	326-1501	FRONT MOLDING LOCK NUT

BALL EJECTOR UNIT

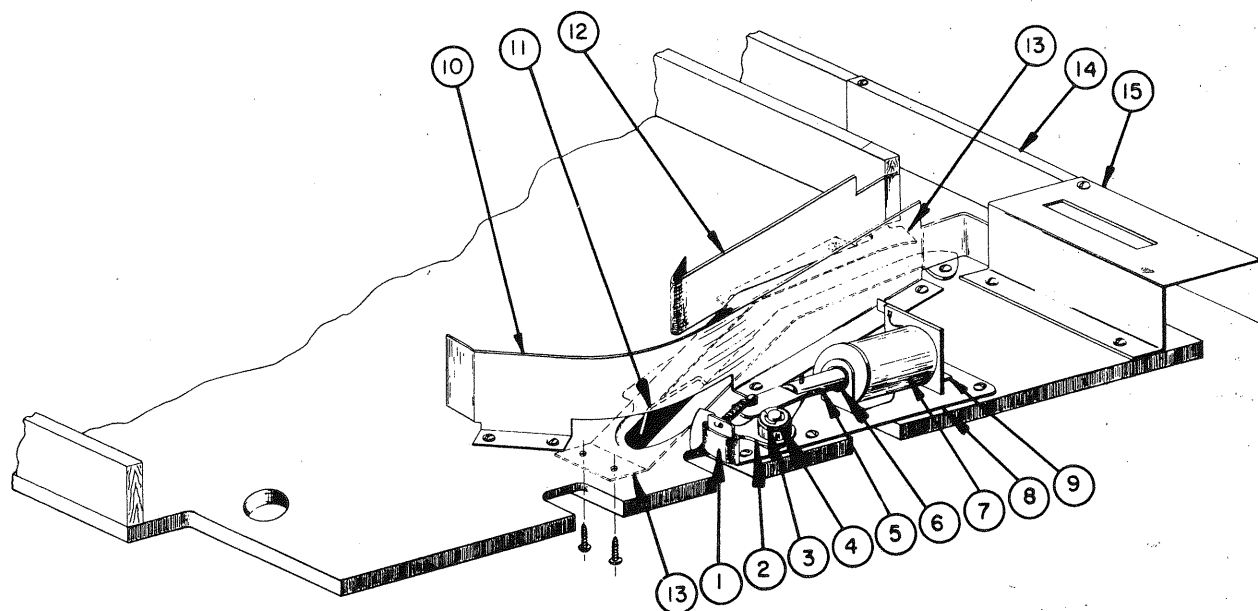

ITEM	PART NO.	DESCRIPTION
	366-2505	COMPLETE BALL EJECTOR ASS'Y (CONTAINS ITEMS 1 THRU 9)
1	326-302	PLASTIC SLEEVE
2	366-2504	BALL EJECTOR ARM ASS'Y
3	#5373	WASHER
4	#6722-25	RETAINING RING
5	366-2506-G	PLUNGER & LINK ASS'Y
6	130-1535	SOLENOID TUBING
7	J-22-550	COIL COMPLETE
8	326-2519	BALL EJECTOR MTG. PLATE ASS'Y
9	347-2512	PLUNGER STOP ASS'Y
10	326-513	LOWER BALL RETURN GUIDE RAIL
11	326-904	BALL EJECTOR WIRE FORM
12	326-512	UPPER BALL RETURN GUIDE RAIL
13	326-508	BALL RETURN RUNWAY
14	326-528	STRIKE PLATE
15	460-507-S	SHOOTER INDICATOR

TOP OF PLAYFIELD

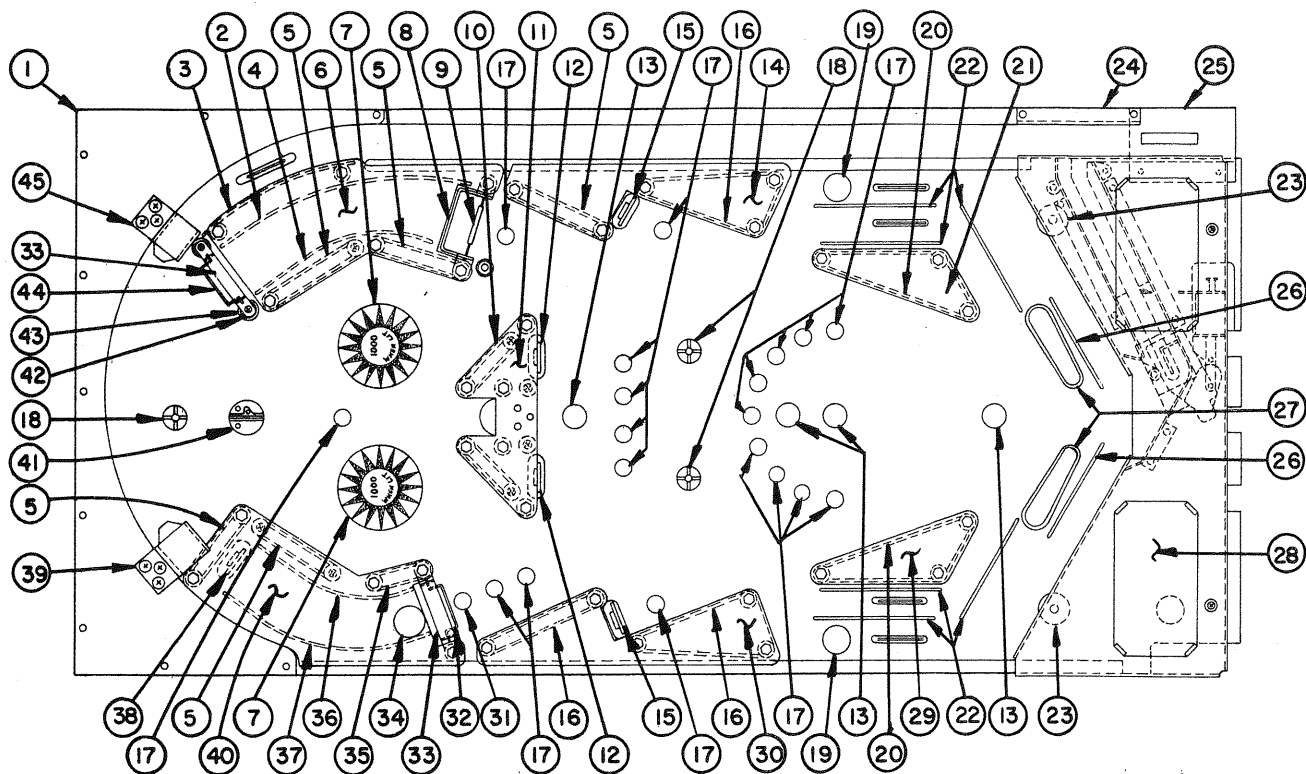


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	472-504-S	METAL ARCH TOP (SCREENED)	23	16552-8-M	PLASTIC BUSHING
2	472-905	PLAYFIELD WIRE FORM		5393	WASHER
3	393-902	BALL GUIDE WIRE FORM		5427	SPLIT TYPE LOCKWASHER
4	472-904	PLAYFIELD WIRE FORM			#8-32 x 2-1/2" LG. S.R. HD. M.S.
5	6052	1-1/2" DIA. RUBBER RING			#8-32 HEX NUT
6	472-300-B	PLAYFIELD LIGHT SHIELD (*)	24	326-528	STRIKE PLATE
7	468-2516	THUMPER BUMPER ASS'Y (SEE PAGE 10)	25	472-503-S	SHOOTER INDICATOR (SCREENED)
8	472-500	SPINNER TARGET MTG. BRKT.	27	468-2515-L&R	FLIPPER ASS'Y (SEE PAGE 11)
9	472-2503	SPINNER TARGET ASS'Y	28	472-502-S	INSTRUCTION PLATE (SCREENED)
	333-301-A	NYLON LIMIT WASHER (2-REQ'D.)	29	472-300-F	PLAYFIELD LIGHT SHIELD (*)
10	6062	1-1/4" DIA. RUBBER RING	30	472-300-D	PLAYFIELD LIGHT SHIELD (*)
11	472-2501	CENTER LIGHT SHIELD ASS'Y (*)	31	16529-R	3/4" DIA. PANEL INSERT (RED)
12	472-2505-C	PLAYFIELD TARGET & SWITCH ASS'Y (SEE PAGE 28)	32	472-901	LANE GATE WIRE FORM
13	16528-W	1" DIA. PANEL INSERT (WHITE)	33	339-2502-R	LANE GATE & STOP BRKT. ASS'Y
14	472-300-E	PLAYFIELD LIGHT SHIELD (*)	34	6717-C	1-1/16" DIA. CHROME STEEL BALL
15	472-2505-B	PLAYFIELD TARGET & SWITCH ASS'Y (SEE PAGE 28)	35	6051	1" DIA. RUBBER RING
16	6063	2" DIA. RUBBER RING	36	472-903	PLAYFIELD WIRE FORM
17	16529-W	3/4" DIA. PANEL INSERT (WHITE)	37	472-902	PLAYFIELD WIRE FORM
18	408-2502	ROLL OVER BUTTON ASS'Y (SEE PAGE 16)	38	472-2505-A	PLAYFIELD TARGET & SWITCH ASS'Y (SEE PAGE 28)
19	16528	1" DIA. PANEL INSERT (YELLOW)	39	231-2517-L	BALL GATE ASS'Y (LEFT)
20	6056	3" DIA. RUBBER RING	40	472-300-A	PLAYFIELD LIGHT SHIELD (*)
21	472-300-G	PLAYFIELD LIGHT SHIELD (*)	41		BALL KICKER ASS'Y (SEE PAGE 13)
22	465-900-B	PLAYFIELD WIRE FORM	42	16533-W	PLASTIC POST (WHITE)
23	9-570	WASHER	43	6060	5/16" DIA. RUBBER RING
			44	452-901	LANE GATE WIRE FORM
			45	231-2517-R	BALL GATE ASS'Y (RIGHT)

*MOUNTED WITH

326-1507-A ACETATE COVER MTG. POSTS &
16566-BL PLASTIC ACORN NUT

PARTS CATALOG


UNDERSIDE OF PLAYFIELD

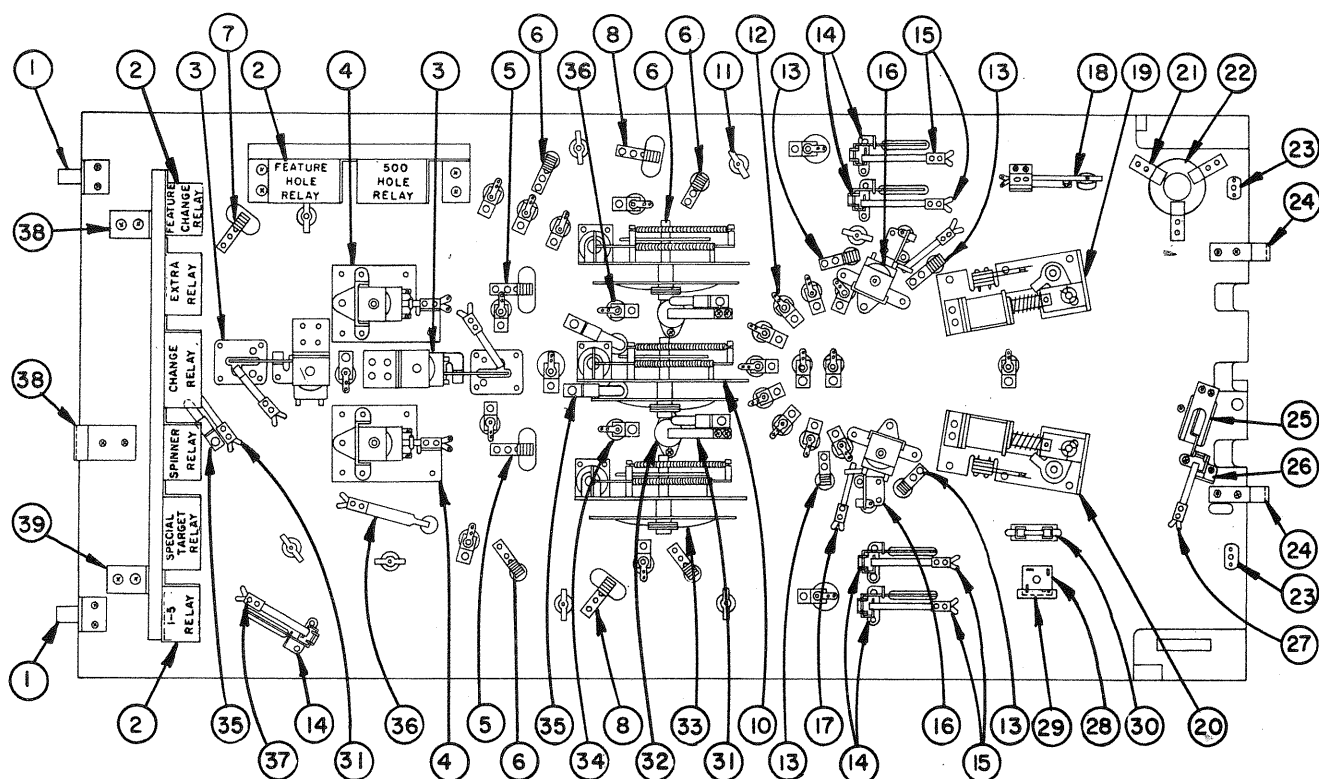


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	295-2529	PLAYFIELD LOCK ASSEMBLY	20	468-2515-R	FIGHT FLIPPER ASS'Y (SEE PAGE 11)
2		FOR ALL THESE RELAYS SEE PAGE 24	21	404-520	SPEAKER MOUNTING STRAP
3		BALL KICKER ASS'Y (SEE PAGE 13)	22	404-311	2-1/4" SPEAKER
4	468-2516	THUMPER BUMPER ASS'Y (SEE PAGE 10)	23	6809	#10-32 "T" NUT
5	472-2505-C	PLAYFIELD TARGET & SWITCH ASS'Y (SEE PAGE 28)	24	326-525	PLAYFIELD SUPPORT BRACKET
6	437-2506	CONTACT SWITCH BRACKET ASS'Y	25		BALL EJECTOR UNIT (SEE PAGE 7)
7	472-2505-A	PLAYFIELD TARGET & SWITCH ASS'Y (SEE PAGE 28)	26	295-2560	ROLL OVER WIRE FORM ASS'Y
8	472-2505-B	PLAYFIELD TARGET & SWITCH ASS'Y (SEE PAGE 28)	27	43	3 SPACER BLOCK ASS'Y (BOTTOM)
9	130-2519-B	BONUS UNIT (SEE PAGE 18)		421-A	CONTACT SWITCH ASS'Y (TOP)
10	130-2568-A	SPECIAL TARGET UNIT (SEE PAGE 23)	28	5608-1	RECTIFIER
11	5232	BAYONET SOCKET (9 REQ'D.)	29	5607-A-1/200	1 MFD 200 VDC CAPACITOR
	5112	#47 BULB IN ALL THE SOCKETS (40 REQ'D.)	30	5747-1	1 PLACE FUSE BLOCK
12	5240	BAYONET SOCKET (24 REQ'D.)	31	420	CONTACT SWITCH ASS'Y (SEE PAGE 16)
13	468-2542	ACTION KICKER CONTACT SWITCH	32	408-2502	ROLL OVER BUTTON ASS'Y (SEE PAGE 16)
	434	CONTACT SWITCH	33	130-2571-B	FEATURE UNIT (SEE PAGE 22)
14	295-2557	ROLL OVER WIRE FORM & BRKT. ASS'Y	34	5231	BAYONET SOCKET (2-REQ'D.)
15	201	CONTACT SWITCH (TOP)	35	5206	BAYONET SOCKET (5-REQ'D.)
	202	CONTACT SWITCH (BOTTOM)	36	392	CONTACT SWITCH ASS'Y
16	43	3 SPACER BLOCK (BOTTM)	37	304	CONTACT SWITCH ASS'Y
17	26	CONTACT SWITCH (TOP)		139-510-B	FINGER STOP
18	468-2541	TILT CONTACT SWITCH ASS'Y	38	439-513	RELAY BOARD MTG. BRKT.
	302	CONTACT SWITCH	39	295-586	PLAYFIELD LIMIT BRKT.
	339-514	TILT CONTACT BRACKET			
19	468-2515-L	LEFT FLIPPER ASS'Y (SEE PAGE 11)			

THUMPER BUMPER ASSEMBLY

ITEM	PART NO.	DESCRIPTION
	468-2516	COMPLETE THUMPER BUMPER ASS'Y
1		#4 x 1/2" LG. P.R. HD. S.M.S.
2	#16563-C	RED (100) DIAMOND SUNFLOWER CAP
3	#5112	#47 BULB
4	#5234	BUMPER SOCKET
5	#16513-B-Y	THUMPER WAFER
6	231-1507-A	POWER BUMPER ROD
7	#16552-6-C	PLASTIC SPACER
8	#16556	PLASTIC STAND-OFF
9	468-2514	THUMPER BUMPER MTG. PLATE ASS'Y
10	119-502	COIL SUPPORT BRACKET
11	J-24-850-DC	D.C. COIL COMPLETE
12	130-805	SOLENOID TUBING
13		#6-32 x 1/4 LG. S.R. HD. EXTERNAL LOCKWASHER SEMS
14		#8-32 x 1/4 LG. S.R. HD. EXTERNAL LOCKWASHER SEMS
15		#6-32 HEX NUT
16	#5476	EXTERNAL SHAKEPROOF LOCKWASHER
17	393-508	COIL MTG. BRACKET
18	439-2510	PLUNGER STOP ASS'Y
19		#6-32 x 3/8 LG. S.R. HD EXTERNAL LOCKWASHER SEMS
20		#4 x 3/4" LG. S.R. HD. S.M.S. TYPE "B"
21	#6771	TINNERMAN SPACER
22	#443	CONTACT SWITCH ASS'Y
23		#6-32 ELASTIC STOP NUT
24	119-512	FIBER PLUNGER ARM
25	119-503	STAINLESS PLUNGER ARM
26	#5612-4004	DIODE
27	437-900	SPRING
28	119-1507	PLUNGER
29	#6770	TINNERMAN NUT
30	#16512	THUMPER BASE
31	3-119	SPRING
32	312-504	THUMPER RING
33	#16511-W	THUMPER BODY
34		#6-32 x 1-1/4" LG. S.R. HD. M.S.

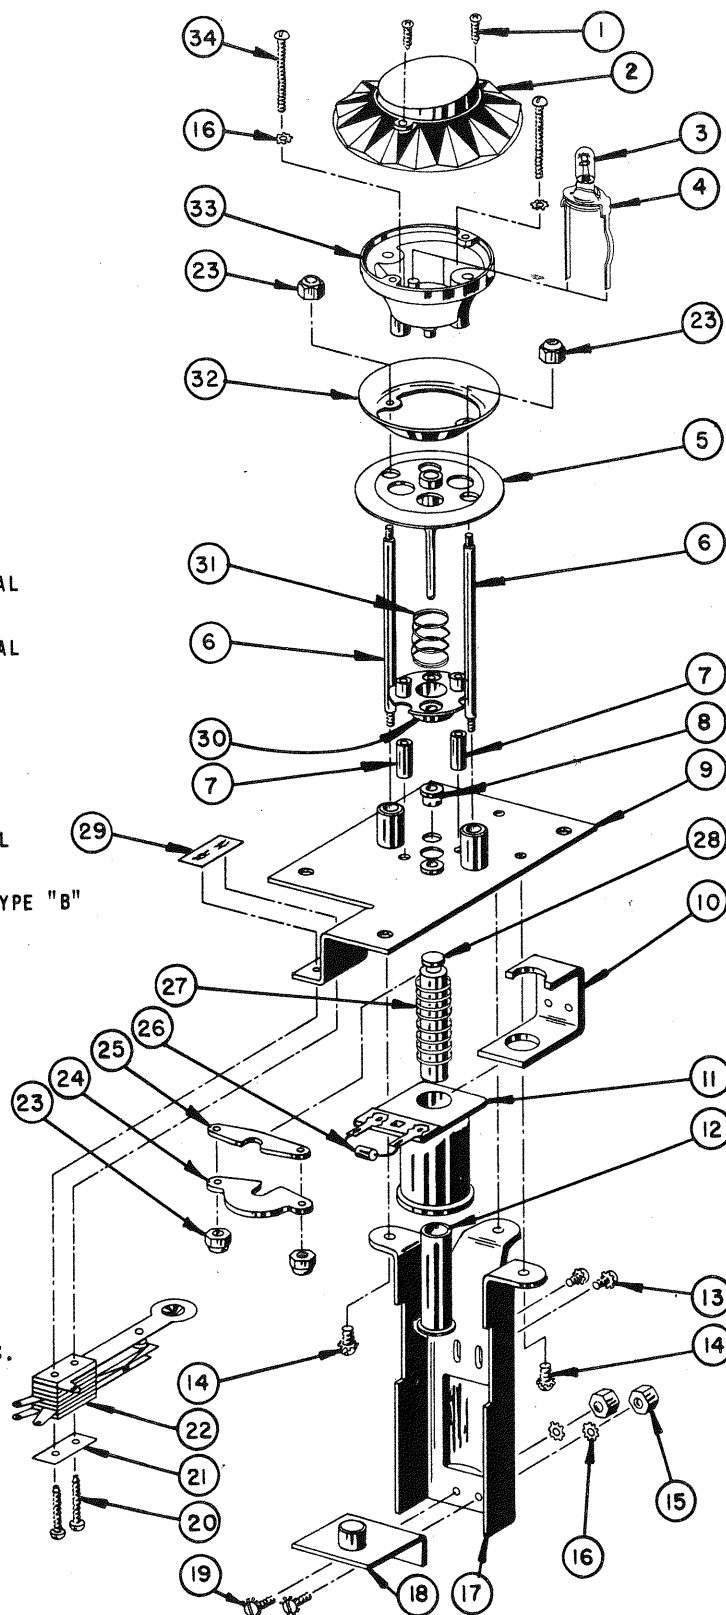


FLIPPER ASSEMBLY

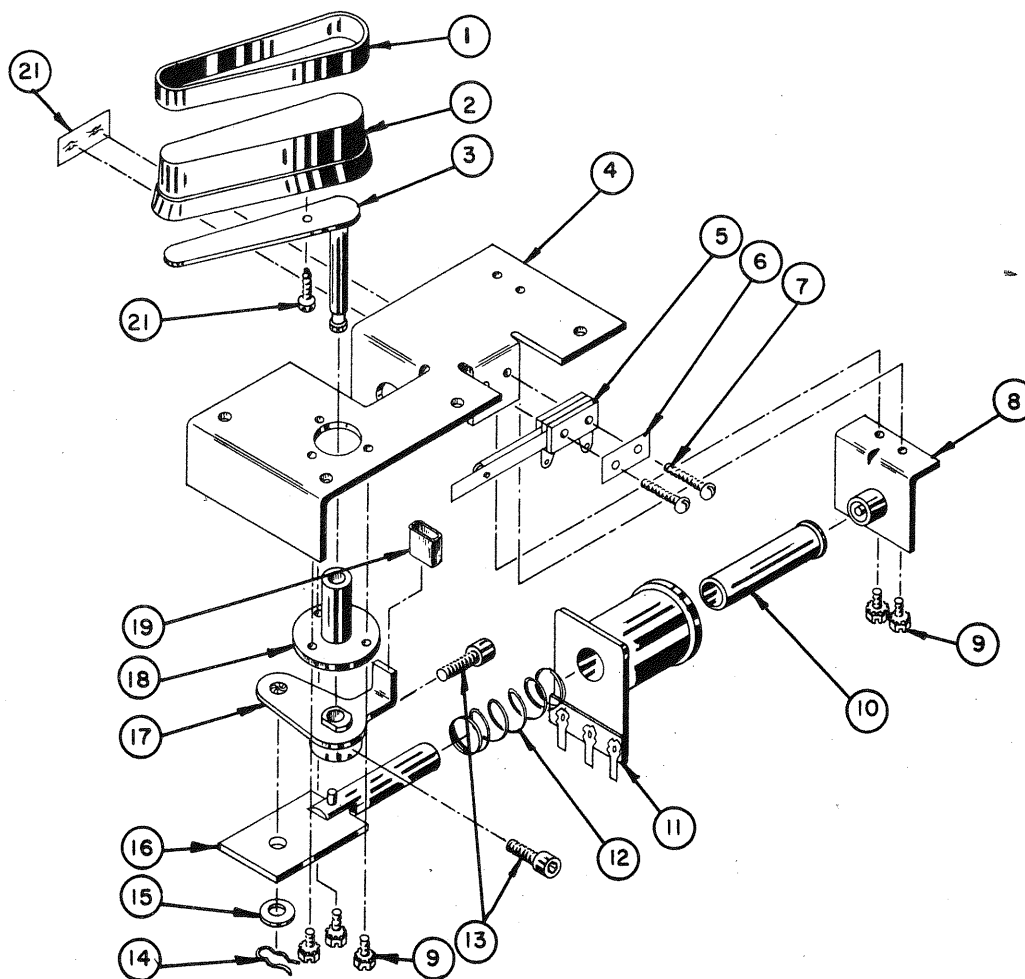

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
	468-2515-L	COMPLETE FLIPPER ASS'Y (LEFT)	10	130-805	SOLENOID TUBING
	468-2515-R	COMPLETE FLIPPER ASS'Y (RIGHT)	11	J-29-400	COIL COMPLETE
		RIGHT HAND ASS'Y SHOWN		J-22-400	
1	#6064	FLIPPER RUBBER RING	12	209-901	SPRING
2	#16550	3" FLIPPER	13		#10-32 x 3/8" LG. SOC. HD. CAP SCREW
3	468-2512	FLIPPER PLATE & SHAFT ASS'Y	14	91-905	SPRING CLIP
4	468-508-L	FLIPPER MTG. BRACKET (LEFT)	15	#5330	WASHER
	468-508-R	FLIPPER MTG. BRACKET (RIGHT)	16	468-2521	FLIPPER PLUNGER & LINK ASS'Y
5	#294-BL	SWITCH ASS'Y ON LEFT FLIPPER	17	468-2511-L	FLIPPER ARM ASS'Y (LEFT)
	#294-BR	SWITCH ASS'Y ON RIGHT FLIPPER		468-2511-R	FLIPPER ARM ASS'Y (RIGHT)
6	#6771	TINNERMAN SPACER	18	#16567	FLIPPER BUSHING
7		#4 x 5/8 LG. SHEET METAL SCREW	19	#6527	3/8" LG. PLASTIC SLEEVE
8	347-2512	COIL STOP ASS'Y	20		#6-32 x 1/2" LG. P. TRUSS HD.
9		#6-32 x 1/4 LG. S.H. HD. EXTERNAL			TYPE 23 S.T.S.
		LOCKWASHER SEMS	21	#6770	TINNERMAN NUT


ACTION KICKER

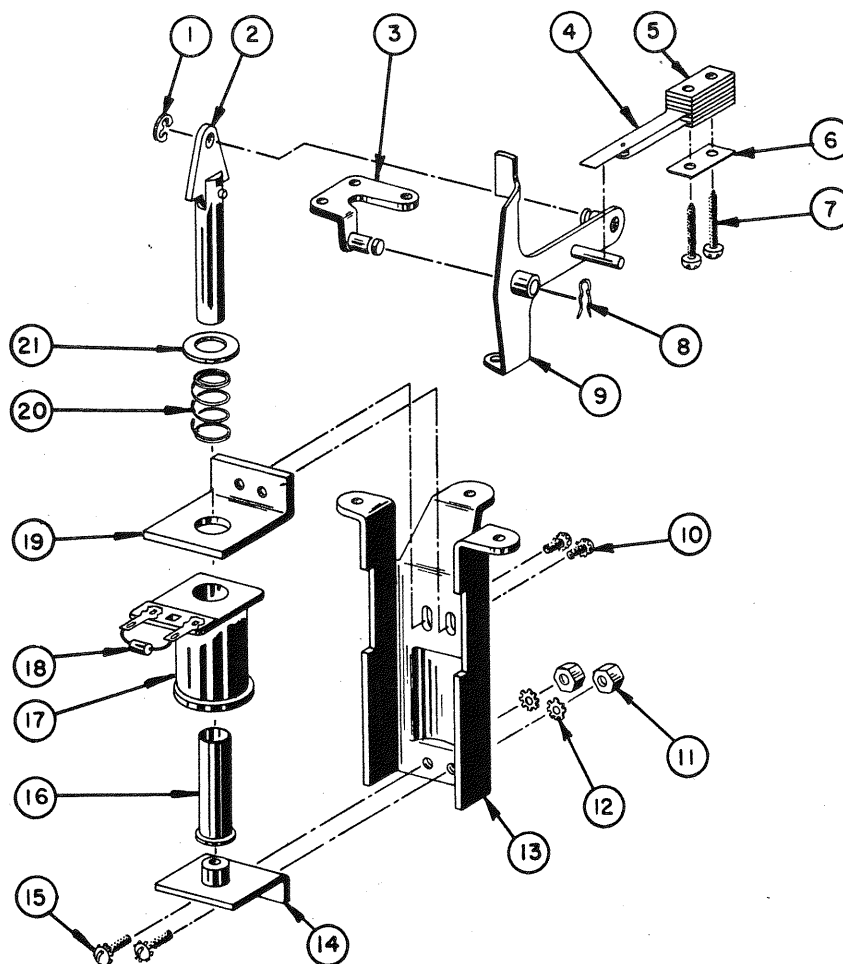

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	#6722-X21	RETAINING RING	12	#5476	EXTERNAL SHAKEPROOF LOCKWASHER
2	295-2513	PLUNGER & LINK ASS'Y	13	393-508	COIL MTG. BRACKET
3	295-2509	KICKER ARM BRKT. ASS'Y	14	439-2510	PLUNGER STOP ASS'Y
4	#26	SWITCH ASS'Y	15		#6-32 x 3/8" LG. S.R. HD. EXTERNAL
5	#43	SPACER BLOCK			LOCKWASHER SEMS
6	#6771	TINNERMAN SPACER	16	130-805	SOLENOID TUBING
7		#4 x 1" LG. S.R. HD. S.M.S.	17	J-25-1050	D.C. COIL COMPLETE
8	91-905	SPRING CLIP	18	#5612-4004	DIODE
9	331-2510	KICKER ARM ASS'Y	19	347-508	COIL SUPPORT BRACKET
10		#6-32 x 1/4" LG. S.R. HD. EXTERNAL	20	209-901	SPRING
		LOCKWASHER SEMS	21	#5348	WASHER
11		#6-32 HEX NUT			


NOTE:
TWO #434 CONTACT SWITCHES
USED PER KICKER

BALL KICKER UNIT

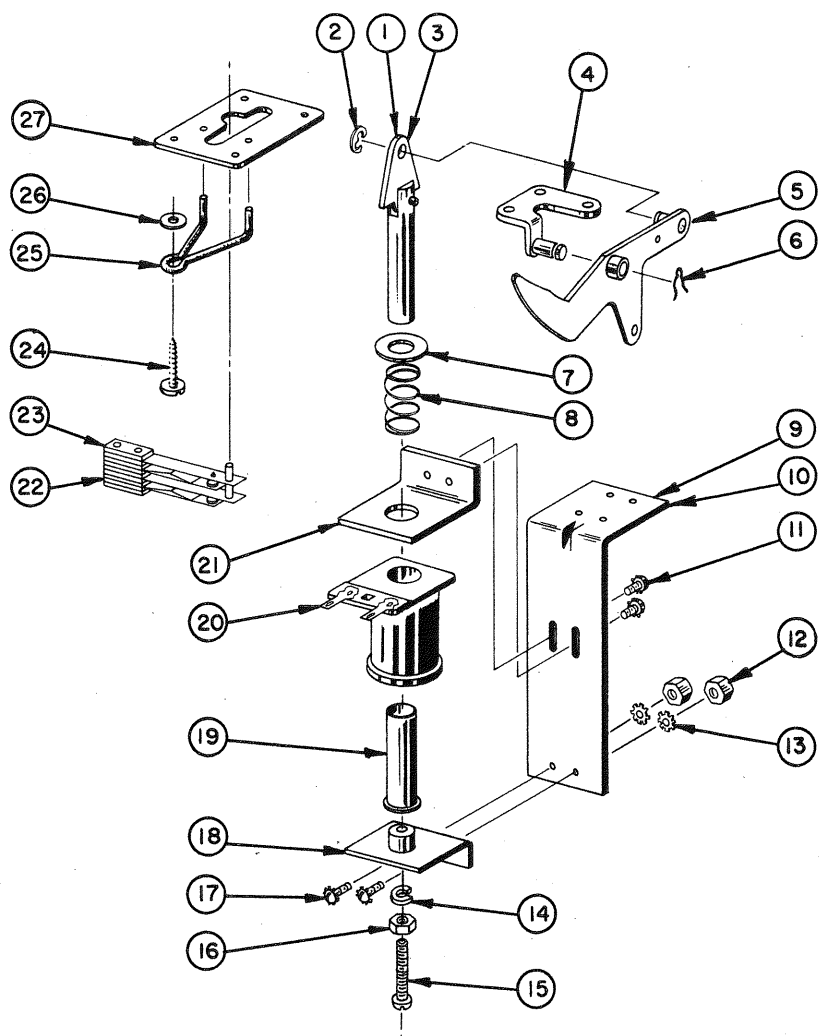


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	468-2537	BALL KICKER ARM & PLUNGER ASS'Y (INCLUDING ITEMS 2 THRU 6)	15		#10-32 x 1" LG. BRASS S.R. HD. M.S.
2	6722-X21	RETAINING RING	16		#10-32 HEX NUT
3	295-2513	PLUNGER & LINK ASS'Y	17		#6-32 x 3/8" LG. S.R. HD. EXT. L/W SEMS
4	295-2509	KICKER ARM BRACKET ASS'Y	18	124-2500	PLUNGER STOP ASS'Y
5	295-2510	BALL KICKER ARM ASS'Y	19	130-805	SOLENOID TUBING
6	91-905	SPRING CLIP	20	J-26-800	COIL COMPLETE
7	5348	WASHER	21	347-508	COIL SUPPORT BRACKET
8	209-901	SPRING	22	201	SWITCH ASS'Y
9	468-2538	BALL KICKER COIL ASS'Y (INCLUDING ITEMS 11 THRU 22)	23	201-D	SWITCH ASS'Y
10	347-506	COIL MOUNTING BRACKET	24		08-1/2" LG. P. TRUSS HD. S.M.S. TYPE "A"
11		#6-32 x 1/4" LG. S.R. HD. EXT. L/W SEMS	25	393-900	BALL KICK-OUT HOLE WIRE FORM
12		#6-32 HEX NUT	26	5393	WASHER
13	5476	EXTERNAL SHAKEPROOF L/W	27	16549	KICKER PAD
14	5428	SPLIT TYPE LOCKWASHER			

BACKRACK

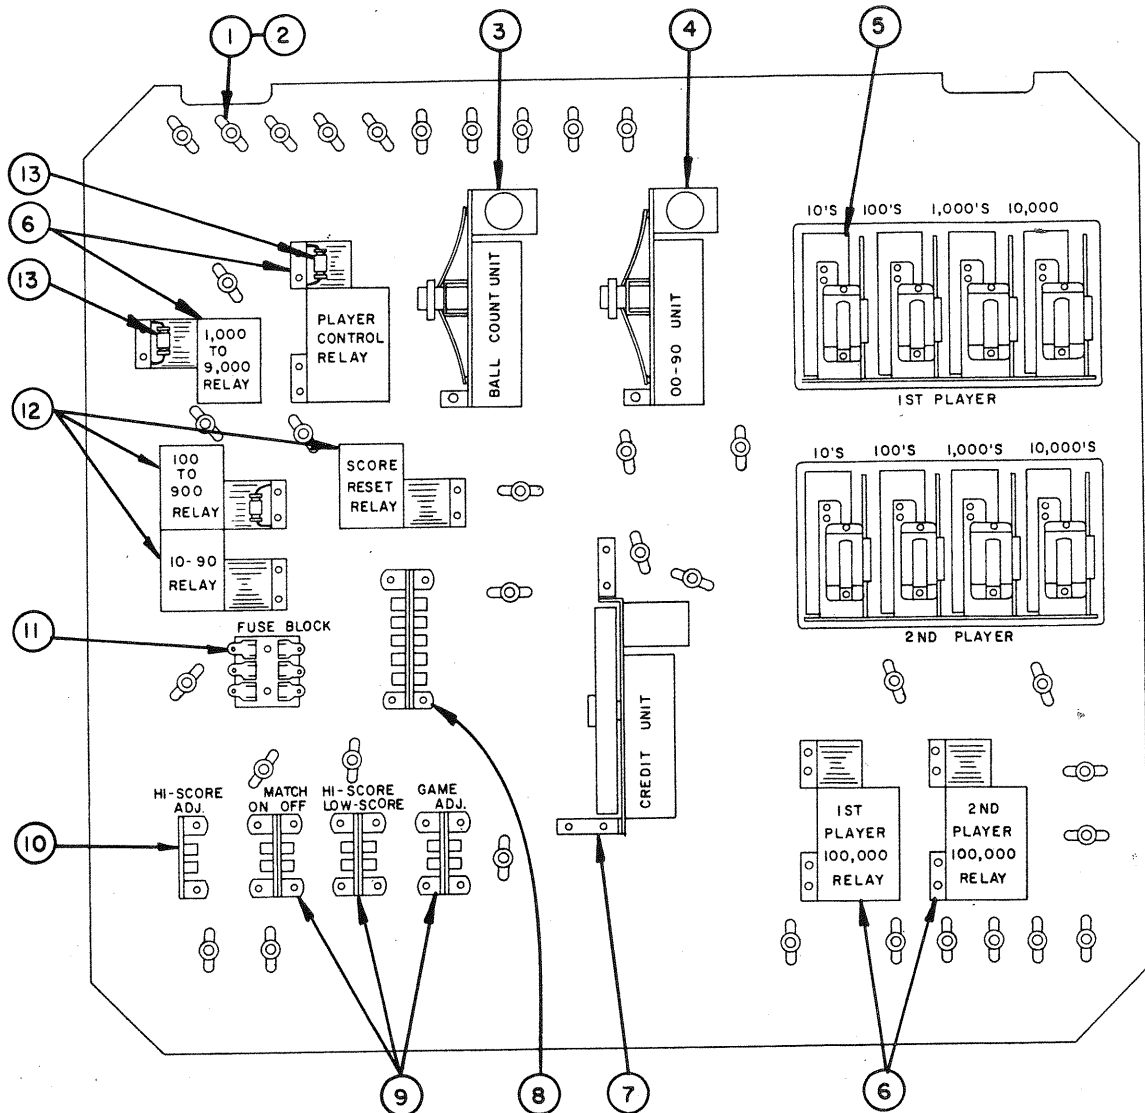


ITEM	PART NO.	DESCRIPTION
1	#5232	BAYONET SOCKET
2	#5112	#47 BULB
3	130-2568-B	BALL COUNT UNIT (SEE PAGE 19)
4	130-2571-B	00-90 UNIT (SEE PAGE 20)
5		SCORING DRUM UNIT (SEE PAGE 26)
6		FOR THESE RELAYS SEE PAGE 24
7	130-2532-H	CREDIT UNIT (SEE PAGE 21)
8	#5879	10 POINT REGULAR SOCKET
9	#5876	4 POINT REGULAR SOCKET
10	#5816	2 POINT INLINE SOCKET
11	#5747-3	3 PLACE FUSE BLOCK ASS'Y
12		FOR THESE RELAYS SEE PAGE 25
13	#5607-A-5-10/50	NON POLARIZED CAPACITOR

SUB PANEL

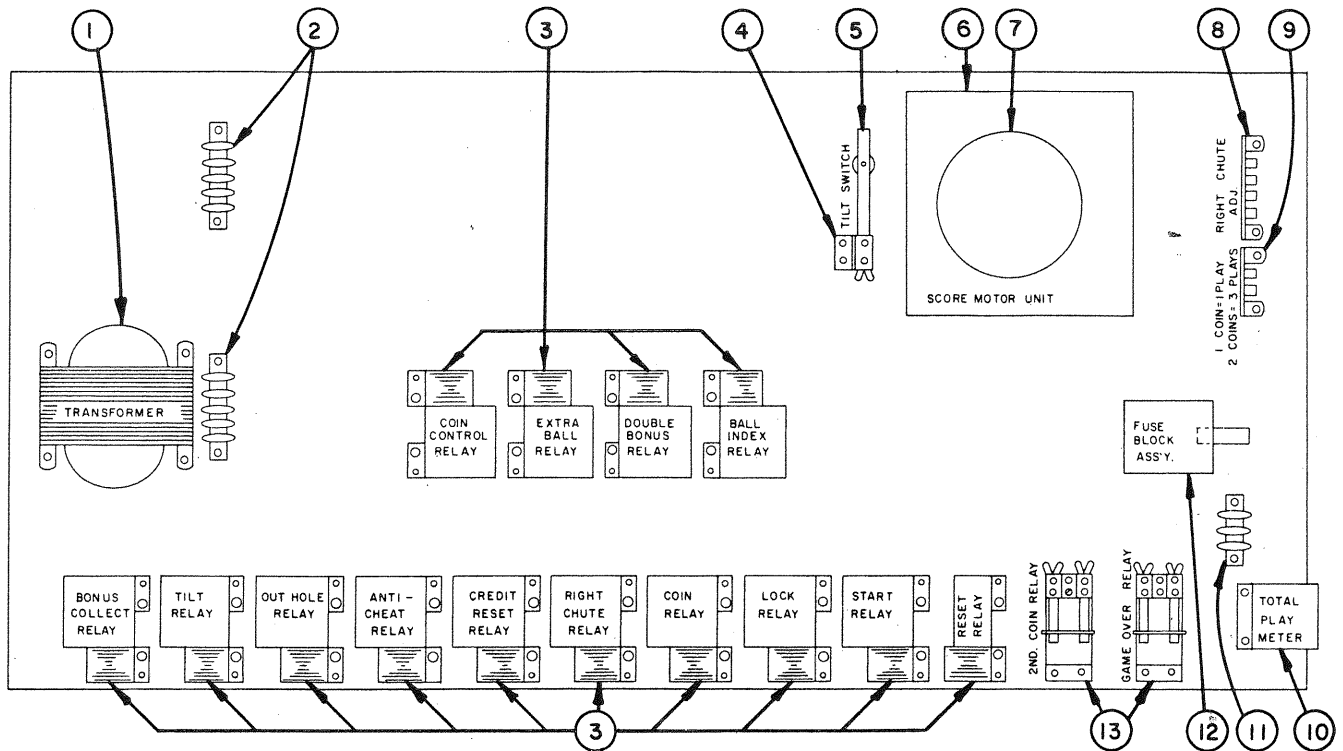

ITEM	PART NO.	DESCRIPTION
1	#5666-2518	TRANSFORMER
2	#6685-5	5 PLACE TERMINAL STRIP
3		FOR ALL THESE RELAYS SEE PAGE 24
4	431-504	CONTACT BRACKET
5	#302	TILT SWITCH
6	472-2500	COMPLETE SCORE MOTOR ASS'Y
	472-2507	SCORE MOTOR MTG. PLATE ASS'Y
	#5750-2333	SCORE MOTOR (60 Hz 22 R.P.M.)
	5750-2334	SCORE MOTOR (50 Hz 22 R.P.M.)
7	472-2506	SCORE MOTOR CAM ASS'Y (SEE PAGE 72)
8	#5821	4 POINT INLINE SOCKET
9	#5616	2 POINT MNLN SOCKET
10	#5707	TOTAL PLAY METER
11	#6685-3	3 PLACE TERMINAL STRIP
12	431-2504	5 PLACE FUSE BLOCK ASS'Y
13		FOR THESE RELAYS SEE PAGE 25

CHIME ASSEMBLY

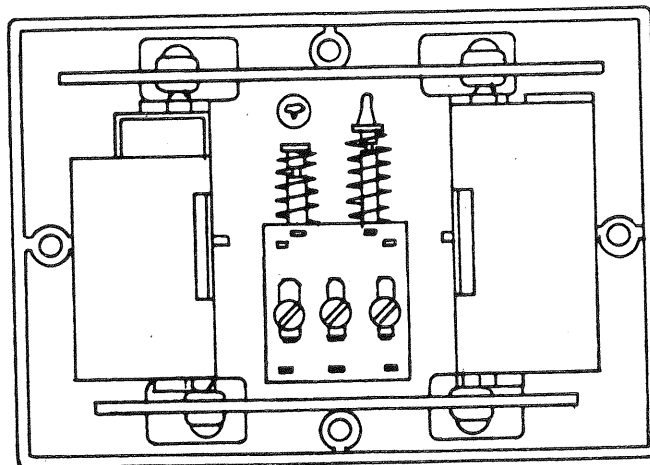


CHIME #5635


ROLL OVER BUTTON ASSEMBLY

408-2502

COMPLETE (INCLUDES 5 ITEMS UNDER LINED)

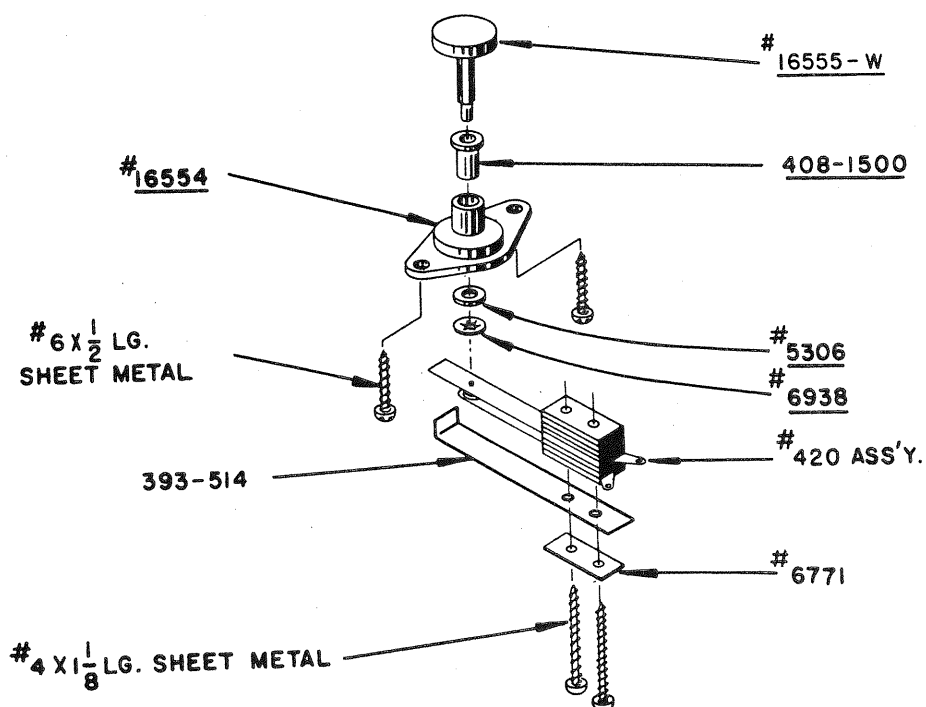


TILT BOARD & KNOCKER ASSEMBLY

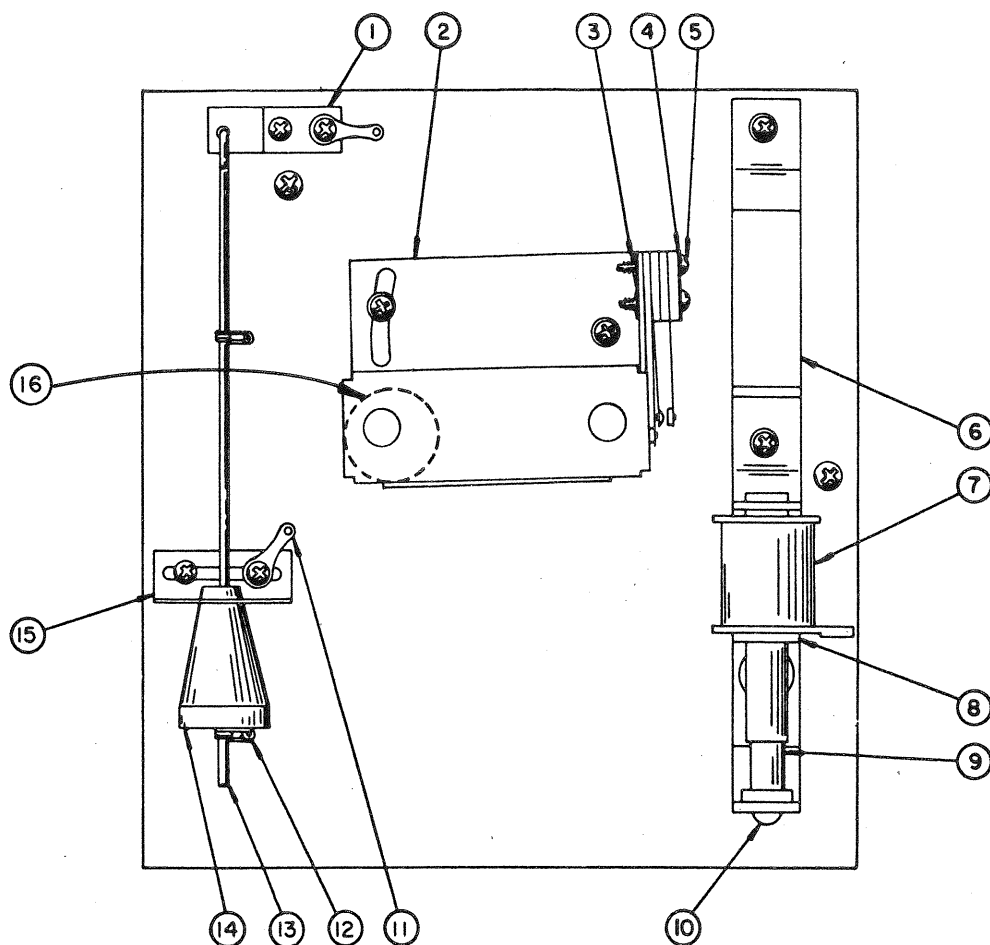

ITEM	PART NO.	DESCRIPTION
1	295-557	TILT PLUMB HANGER
2	339-511	ELEVATOR TILT
3	#6770	TINNERMAN NUT
4	#6771	TINNERMAN SPACER
5		#4 x 5/8" LG. S.M.S.
6	295-2538	KNOCKER MOUNTING BRACKET ASS'Y
7	N-26-1000	COIL COMPLETE
8	167-511	ADJ. COIL SUPPORT BRACKET
9	167-2507	PLUNGER & TIP ASSEMBLY
10	#6079	RUBBER GROMMET
11	#6654	SOLDERING LUG
12	231-907	TILT PLUMB SPRING
13	295-906	TILT PLUMB WIRE
14	295-1513	TILT PLUMB
15	295-556	TILT PLUMB CONTACT PLATE
16	#6717-C	1-1/16" DIA. CHROME STEEL BALL


BONUS UNIT

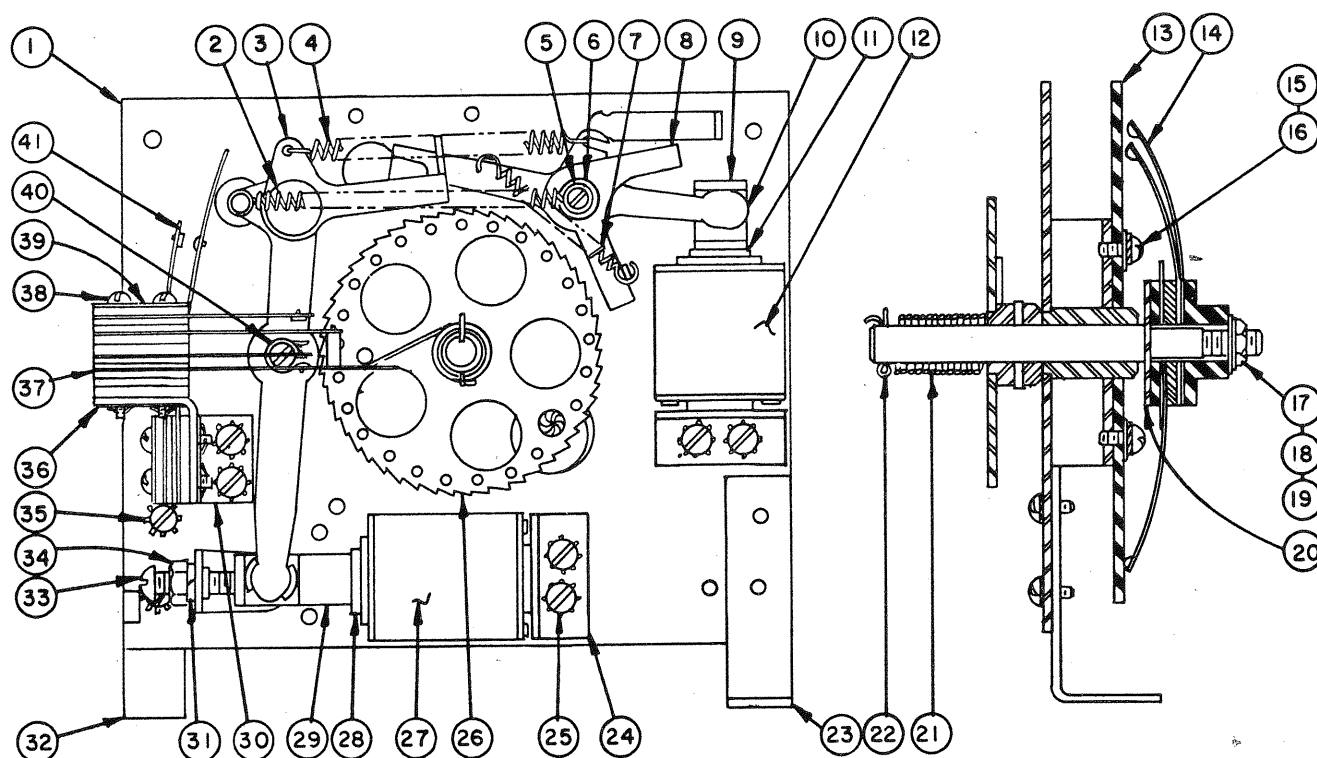


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
	130-2519-A	COMPLETE BONUS UNIT (19 STEPS)	21	130-905	TORSION SPRING
1	130-2502	MOUNTING PLATE ASS'Y	22	#6752-10	COTTER PIN
2	130-910-18	SPRING	23	130-560-AS	MOUNTING LEG
3	130-2511	OPERATING ARM ASS'Y	24	347-2512	PLUNGER STOP ASS'Y
4	130-901	SPRING	25		#6-32 x 1/4 LG. SEMS UNIT
5	130-1510	RESET ARM POST	26	130-2542-19	RATCHET & POST ASS'Y
6	130-1517	RESET ARM BUSHING	27	J-22-550	STEP-UP COIL
7	129-900	SPRING	28	130-1535	STEP-UP SOLENOID TUBING
8	130-2514	ESCAPEMENT PAWL & BUSHING	29	91-1538	STEP-UP PLUNGER
9	91-1507	RESET PLUNGER	30	130-511	DOUBLE CONTACT BRKT.
10	130-2513	RESET ARM ASS'Y	31	#5428	LOCKWASHER
11	130-1536	RESET SOLENOID TUBING	32	130-560-A	MOUNTING LEG
12	H-26-650	RESET COIL	33		#10-32 x 3/4 LG. BRASS R.H.M.S.
13	468-2525	BONUS UNIT P.C. ASS'Y	34		#10-32 HEX NUT
14	468-2529	WIPER FINGER ASS'Y	35		#8-32 x 1/4 LG. SEMS
15		#6-32 x 3/8 LG. SEMS UNIT	36	#6770	TINNERMAN NUT
16	#5305	FLAT WASHER	37	#120 & #80	CONTACT SWITCH ASS'Y
17		1/4-28 HEX NUT	38		#4 S.M.S. LENGTH AS REQUIRED
18	#5429	LOCKWASHER	39	#6771	TINNERMAN SPACER
19	#5331	PLAIN WASHER	40	130-1508	OPERATING ARM POST
20	130-518	FINGER BACK-UP WASHER	42	#108	SWITCH ASS'Y

PARTS CATALOG

BALL COUNT UNIT

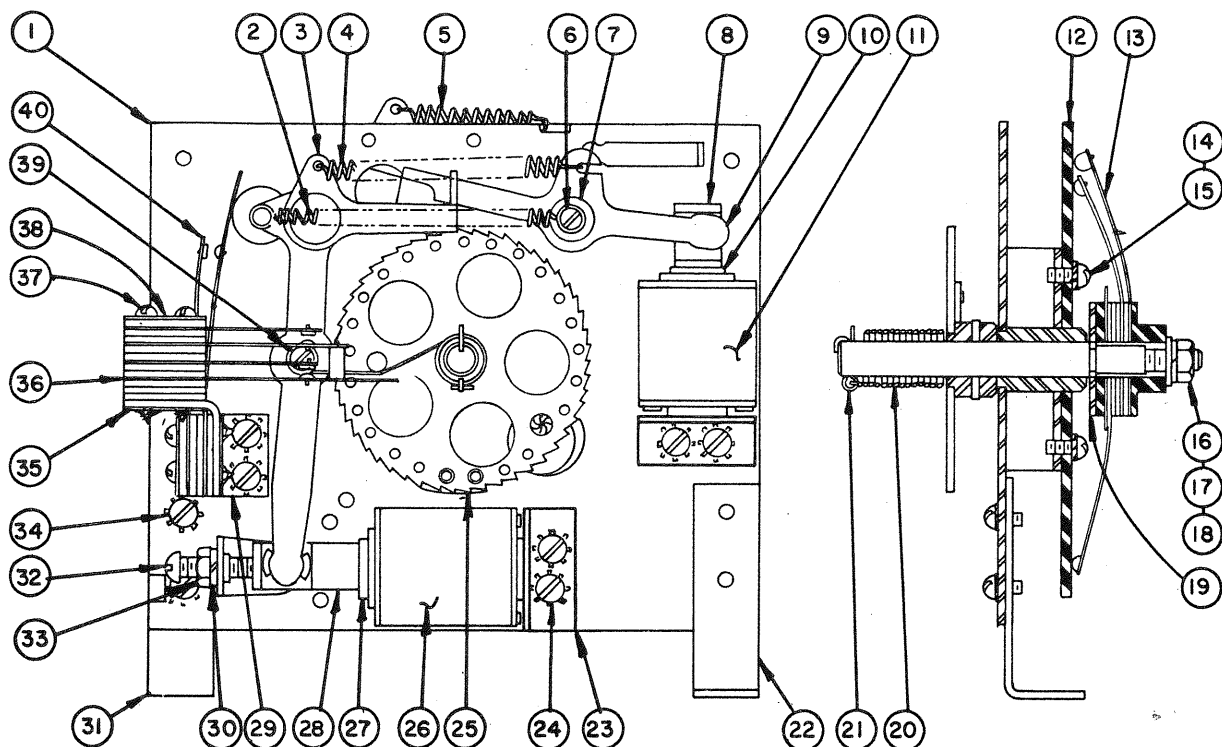

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
	130-2568-B	COMPLETE BALL COUNT UNIT (10 STEPS)	21	#6752-10	COTTER PIN
1	130-2502	MOUNTING PLATE ASS'Y	22	130-560-AS	MOUNTING LEG
2	130-910-18	SPRING	23	347-2512	PLUNGER STOP ASS'Y
3	130-2511	OPERATING ARM ASS'Y	24		#6-32 x 1/4 LG. SEMS UNIT
4	130-901	SPRING	25	130-2542-10	RATCHET & POST ASS'Y
5	130-904	SPRING	26	J-22-550	STEP-UP COIL
6	130-1510	RESET ARM POST	27	130-1535	STEP-UP SOLENOID TUBING
7	130-1517	RESET ARM BUSHING	28	91-1538	STEP-UP PLUNGER
8	91-1507	RESET PLUNGER	29	130-511	DOUBLE CONTACT BRKT.
9	130-2513	RESET ARM ASS'Y	30	#5428	LOCKWASHER
10	130-1536	RESET SOLENOID TUBING	31	130-560-A	MOUNTING LEG
11	H-26-650	RESET COIL	32		#10-32 x 3/4 LG. BRASS R.H.M.S.
12	468-2527	BALL COUNT UNIT P.C. ASS'Y	33		#10-32 HEX NUT
13	464-2507	WIPER FINGER ASS'Y	34		#8-32 x 1/4 LG. SEMS
14		#6-32 x 3/8 LG. SEMS UNIT	35	#6770	TINNERMAN NUT
15	#5305	FLAT WASHER	36	#128 & #80	CONTACT SWITCH ASS'Y
16		1/4-28 HEX NUT	37		#4 S.M.S. LENGTH AS REQUIRED
17	#5429	LOCKWASHER	38	#6771	TINNERMAN SPACER
18	#5331	PLAIN WASHER	39	130-1508	OPERATING ARM POST
19	130-518	FINGER BACK-UP WASHER	40	#108	SWITCH ASS'Y
20	130-905	TORSION SPRING			

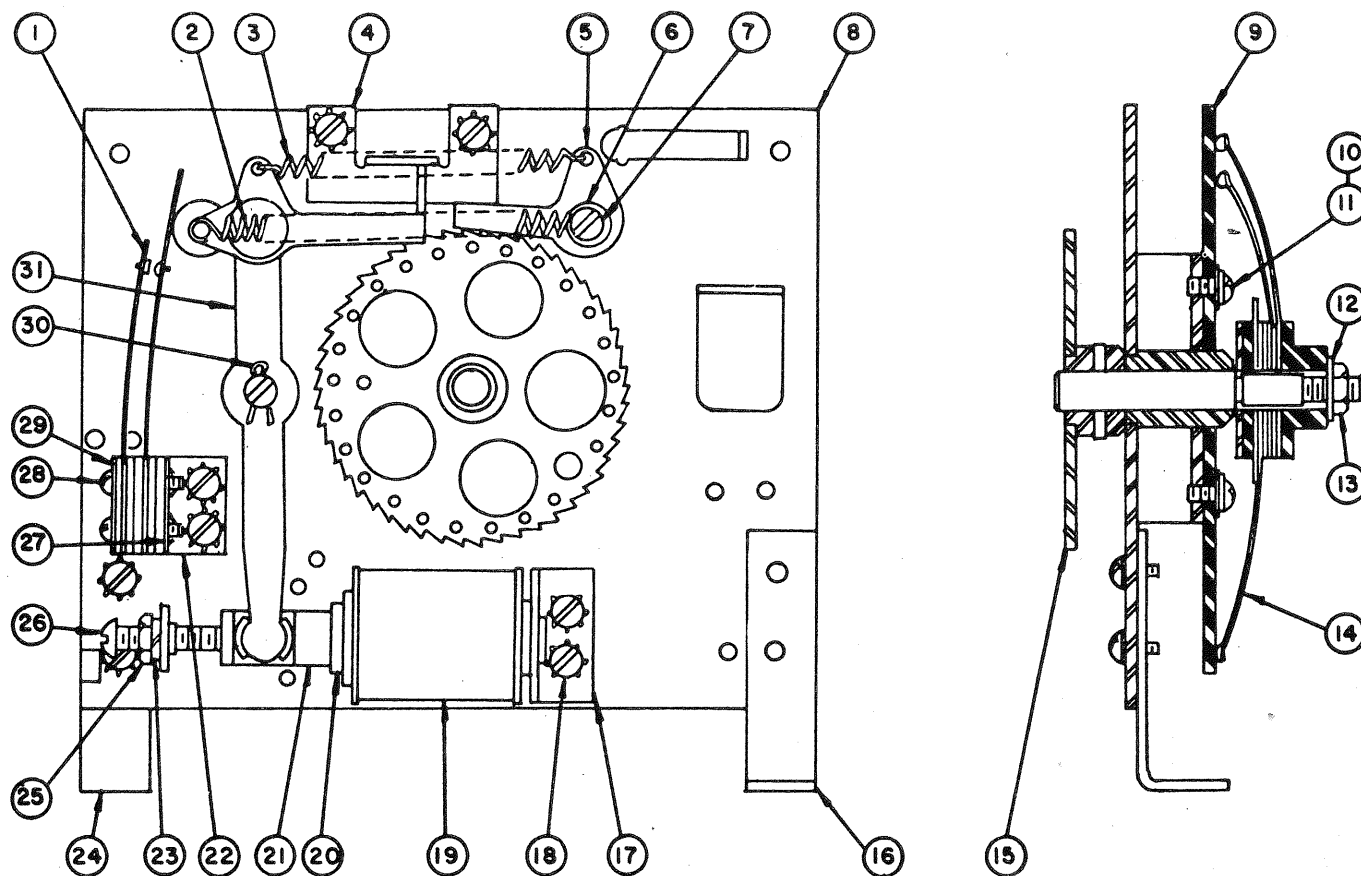


ITEM	PART NO.	DESCRIPTION
------	----------	-------------

	130-2571-B	COMPLETE 00-90 UNIT
1	#108	CONTACT SWITCH ASS'Y
2	130-910-21	SPRING
3	130-901	SPRING
4	130-531	OVER RIDE RESTRAINER
5	130-2517	HOLDING PAWL & BUSHING ASS'Y
6	130-1517	RESET POST BUSHING
7	130-1510	RESET PAWL POST
8	130-2505	MOUNTING PLATE, BRKT. & BUSHING ASS'Y
9	468-2526	P.C. BOARD ASS'Y (00-90 UNIT)
10	#5305	FLAT WASHER
11		#6-32 x 3/8 LG. SEMS UNIT
12	#5429	SPLIT TYPE LOCKWASHER
13		#1/4-28 HEX NUT
14	344-2506	WIPER FINGER ASS'Y (00-90 UNIT)
15	130-2546	SHAFT, BUSHING & RATCHET ASS'Y

ITEM	PART NO.	DESCRIPTION
------	----------	-------------


16	130-560-AS	MOUNTING LEG
17	347-2512	PLUNGER STOP ASS'Y
18		#6-32 x 1/4 LG. SEMS UNIT
19	J-23-700	COIL COMPLETE
20	130-1535	SOLENOID TUBING
21	91-1538	OPERATING PLUNGER
22	91-524	CONTACT BRACKET
23	#5428	SPLIT TYPE LOCKWASHER
24	130-560-A	MOUNTING LEG
25		#10-32 HEX NUT
26		#10-32 x 3/4 LG. BRASS R.H.M.S.
27	#6770	TINNERMAN NUT
28		#4 S.M.S. LENGTH AS REQUIRED
29	#6771	TINNERMAN SPACER
30	143-902	SPRING CLIP
31	130-2511	OPERATING ARM ASS'Y

CREDIT UNIT

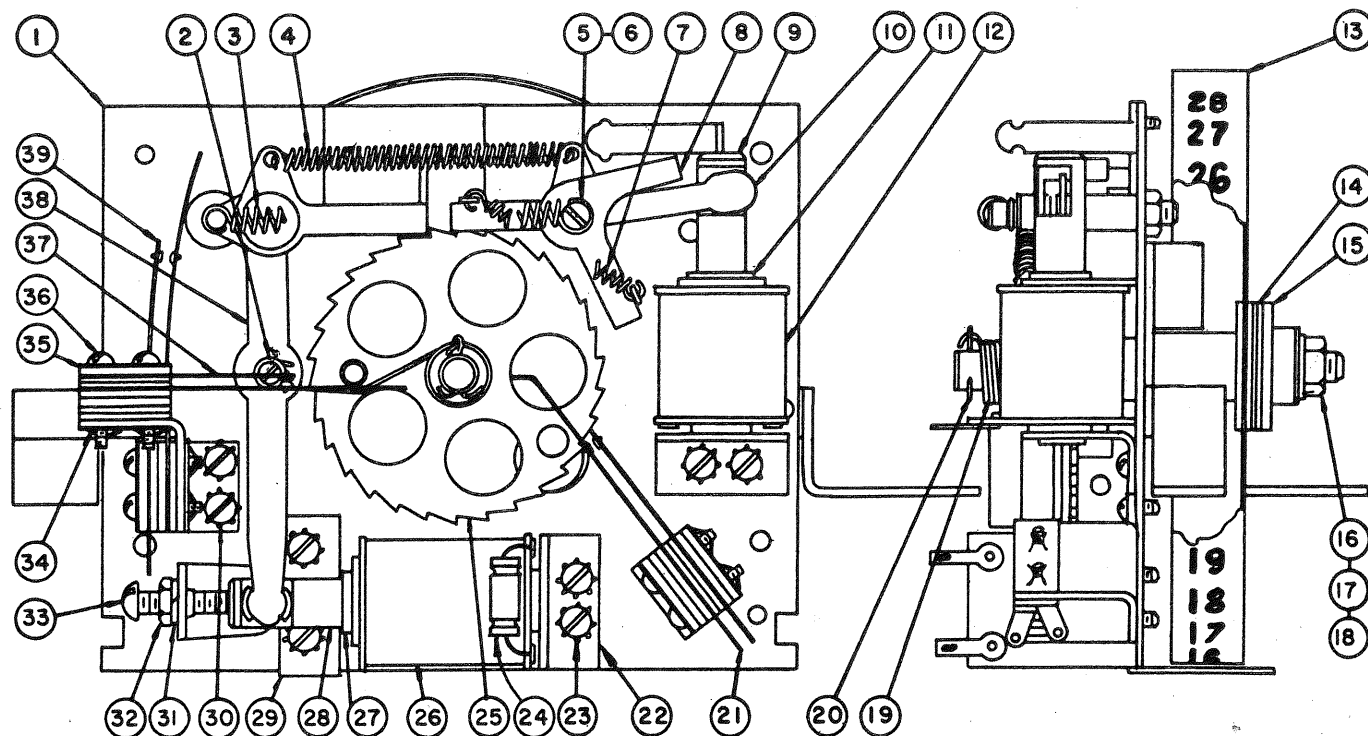


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
	130-2532-H	COMPLETE CREDIT UNIT	20	#6752-10	COTTER PIN
1	130-2597	MOUNTING PLATE ASS'Y	21	#46	SWITCH ASS'Y
2	130-1508	OPERATING ARM POST	22	347-2512	PLUNGER STOP ASS'Y
3	130-910-18	SPRING	23		#6-32 x 1/4 LG. SEMS UNIT
4	130-901	SPRING	24	#5607-A-5-10/50	NON POLARIZED CAPACITOR
5	130-1510	RESET ARM POST	25	130-2579-A	SHAFT, BUSHING, RATCHET & STUD ASS'Y
6	130-1517	RESET POST BUSHING	26	J-22-550	COIL (STEP-UP)
7	129-900	SPRING	27	130-1535	STEP-UP SOLENOID TUBING
8	130-2514	ESCAPEMENT PAWL & BUSHING	28	130-1513	STEP-UP PLUNGER
9	130-1539	RESET PLUNGER	29	130-532	WINDOW BRACKET
10	130-2513	RESET ARM ASS'Y	30	130-511	DOUBLE CONTACT BRACKET
11	130-1536	RESET SOLENOID TUBING	31	#5428	LOCKWASHER
12	H-26-650	COIL RESET	32		#10-32 HEX NUT
13	130-2552	DRUM ASS'Y	33		#10-32 x 3/4 LG. BRASS R.H.M.S.
14	130-518	WASHER	34	#6770	TINNERMAN NUT
15	130-806	FINGER HUB	35	#6771	TINNERMAN SPACER
16		1/4-28 HEX NUT	36		#4 S.M.S. LENGTH AS REQUIRED
17	#5429	LOCKWASHER	37	#128	SWITCH ASS'Y
18	#5331	PLAIN WASHER	38	130-2533	OPERATING ARM & POST ASS'Y
19	130-907	TORSION SPRING	39	#108	SWITCH ASS'Y

FEATURE UNIT

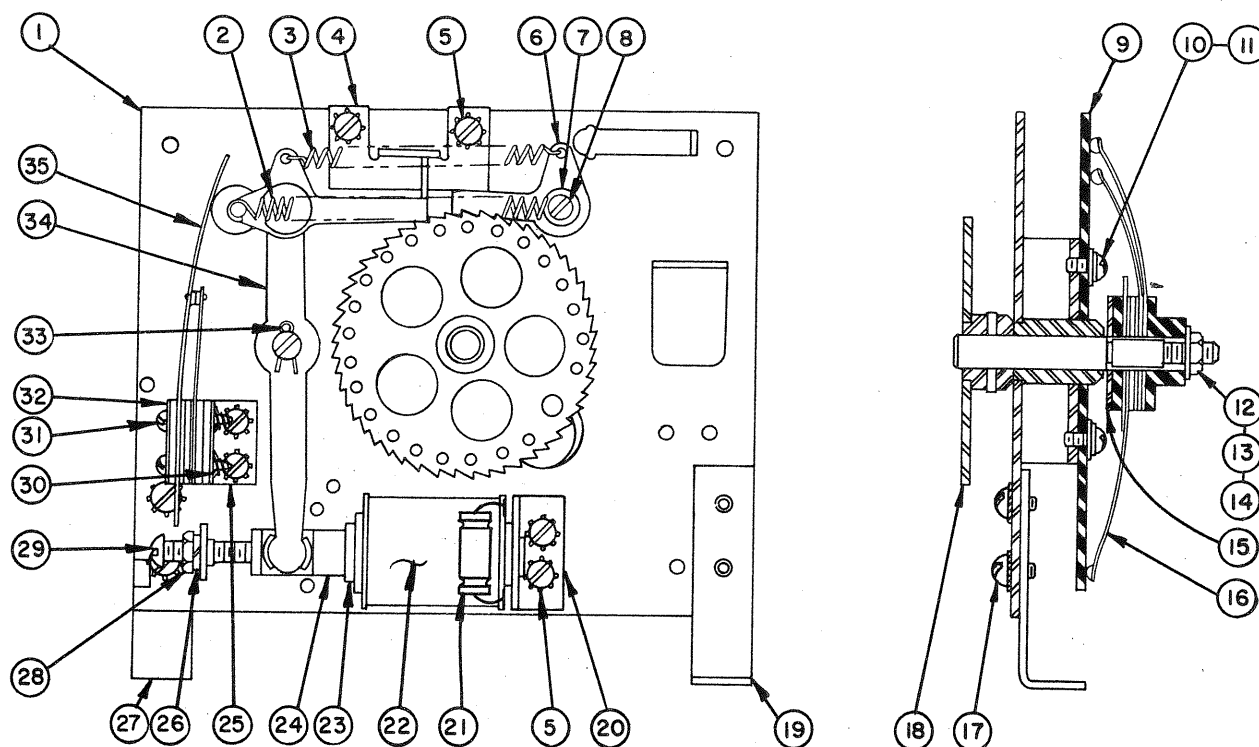


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
	130-2571-B	COMPLETE FEATURE UNIT	17		#8-32 x 1/4" LG. R.S. HD. EXT. L/W SEMS
1	130-2505	MOUNTING PLATE ASS'Y	18	130-2546	SHAFT BUSHING & RATCHET ASS'Y
2	130-910-18	SPRING	19	130-560-AS	MOUNTING LEG
3	130-901	SPRING	20	347-2512	PLUNGER STOP ASS'Y
4	130-531	OVERRIDE RESTRAINER	21	5607-A-5-10/50	NON POLARIZED CAPACITOR
5		#6-32 X 1/4" LG. S.R. HD. EXT. L/W SEMS	22	J-23-700	COIL COMPLETE
6	130-2517	HOLDING PAWL & BUSHING ASS'Y	23	130-1535	SOLENOID TUBING
7	130-1517	RESET POST BUSHING	24	130-1513	OPERATING PLUNGER
8	130-1510	RESET PAWL POST	25	91-524	CONTACT BRACKET
9	472-501	FEATURE UNIT P.C. BOARD	26	5428	SPLIT TYPE LOCKWASHER
10	5305	WASHER	27	130-560-A	MOUNTING LEG
11		#6 x 32 x 3/8" LG. S.R. HD. EXT. L/W SEMS	28		#10-32 HEX NUT
12	5331	WASHER	29		#10-32 x 3/4" LG. BRASS S.R. HD. M.S.
13	5429	SPLIT TYPE LOCKWASHER	30	6770	TINNERMAN NUT
14		1/4-28 HEX NUT	31		#4 x 5/8" LG. S.R. HD. S.M.S.
15	130-518	FINGER BACK-UP WASHER	32	6771	TINNERMAN SPACER
16	472-2502	WIPER FINGER ASS'Y	33	143-902	SPRING CLIP
			34	130-2511	OPERATING ARM ASS'Y
			35	448	CONTACT SWITCH ASS'Y

SPECIAL TARGET UNIT

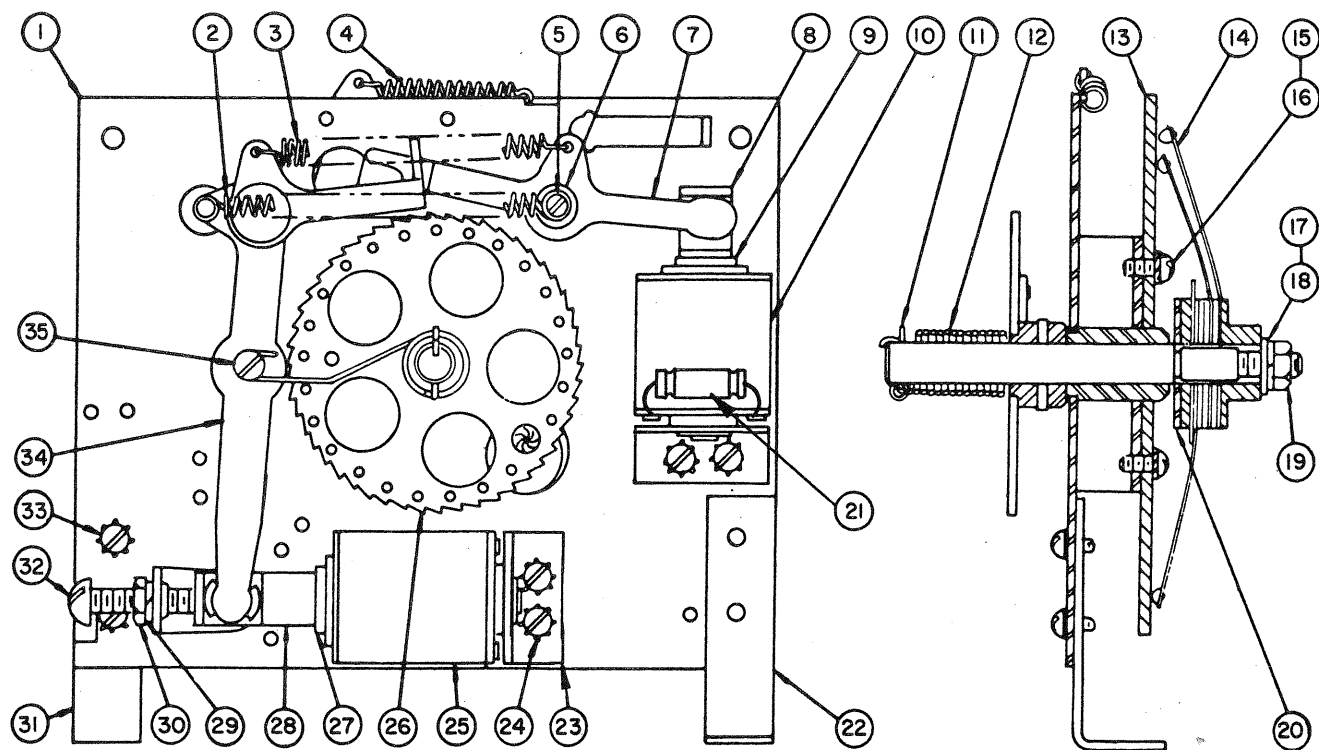

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
	130-2568-A	SPECIAL TARGET UNIT (3 STEPS)	19		#1/4-28 HEX NUT
1	130-2502	MTG. PLATE, BRKT. & BUSHING ASS'Y	20	130-518	CONTACT WASHER
2	130-910-18	SPRING	21	5607-A-5-10/50	NON POLARIZED CAPACITOR
3	130-901	SPRING	22	130-560-AS	MOUNTING LEG
4	130-904	SPRING	23	347-2512	PLUNGER STOP ASS'Y
5	130-1510	RESET ARM POST	24		#6-32 x 1/4 LG. SEMS
6	130-1517	RESET POST BUSHING	25	J-22-550	COIL COMPLETE
7	130-2513	RESET ARM ASS'Y	26	130-2524-3	3 STEP SHAFT, BUSHING, RATCHET & STUD ASS'Y
8	91-1507	OPERATING PLUNGER	27	130-1535	SOLENOID TUBING
9	91-1509	SOLENOID TUBING	28	91-1538	OPERATING PLUNGER
10	H-26-650	COIL COMPLETE	29	#5428	SPLIT TYPE LOCKWASHER
11	#6752-10	COTTER PIN	30		#10-32 HEX NUT
12	130-905	TORSION SPRING	31	130-560-A	MOUNTING LEG
13	472-2508	SPECIAL TARGET UNIT P.C. ASS'Y	32		#10-32 x 3/4 LG. BRASS R.H.M.S.
14	472-2509	WIPER FINGER	33		#8-32 x 1/4 SEMS
15		#6-32 x 3/8 LG. SEMS	34	130-2538	OPERATING ARM & POST ASS'Y
16	#5303	WASHER	35	130-1508	OPERATING ARM POST
17	#5331	WASHER			
18	#5429	SPLIT TYPE LOCKWASHER			

OPERATING RELAYS

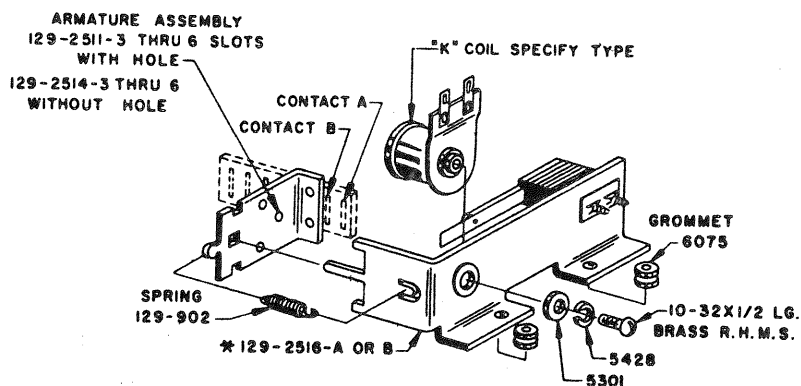


CONTACT SWITCH CODE
M-CONTACT OPEN WHEN COIL IS NOT ENERGIZED
B-CONTACT CLOSED WHEN COIL IS NOT ENERGIZED
T-TRIPLE CONTACT

* 129-2516-A FRAME ASSEMBLY WITH HOLES FOR GROMMETS
129-2516-B FRAME ASSEMBLY WITH HOLES FOR SCREWS

RELAY NAME	COMPLETE RELAY	COIL NO.	ARMATURE	CONTACT SWITCHES					
				A	B	C	D	E	F
ANTI-CHEAT RE.	550-25502	K-28-1100	129-2511-4	M-27	T-31	B-32	B-26	B-26	
BALL INDEX RE.	550-25300	K-28-1200	129-2511-3	M-27	M-26	M-26			
BONUS COLLECT RE.	550-25600	K-28-1200	129-2511-5	M-27	M-26	M-34	M-26	M-48	B-26
CHANGE RE. (*)-----	550-25603	K-28-1200	129-2511-5	T-31	T-31	B-32	T-31	T-31	T-31
COIN CONTROL RE.	550-25201	K-28-1400	129-2511-3	M-27	T-31				
COIN RE.	550-25500	K-28-1200	129-2511-4	M-27	M-26	M-34	M-26	M-26	
CREDIT RESET RE.	550-25403	K-28-1200	129-2511-4	M-27	M-26	M-26	T-31		
DOUBLE BONUS RE.	550-25302	K-28-1400	129-2511-3	M-27	M-26	B-26			
EXTRA BALL RE.	550-25301	K-28-1200	129-2511-3	M-27	M-26	B-26			
EXTRA RE.	550-25403	K-28-1200	129-2511-4	M-27	M-26	M-26	T-31		
FEATURE HOLE RE.	550-25406	K-28-1100	129-2511-4	M-27	M-26	M-26	M-26		
FEATURE CHANGE RE.	550-25304	K-28-1200	129-2511-3	M-27	M-26	T-31-B			
LOCK RE.	550-25404	K-28-1600	129-2511-4	M-27	B-26				
OUT HOLE RE.	550-25501	K-28-1100	129-2511-4	M-27	T-31	B-32	M-26	T-31	
PLAYER CONTROL RE.	550-25504	K-28-1200	129-2511-4	M-27	M-26	M-34	B-26	T-31	
RESET RE.	550-25200	K-28-1400	129-2511-3	M-27	B-26				
RIGHT CHUTE RE.	550-25402	K-28-1200	129-2511-4	M-27	M-26	B-26	T-31		
SPECIAL TARGET RE.	550-25602	K-28-1100	129-2511-5	M-27	M-26	M-34	M-26	M-26	M-26
SPINNER RE.	550-25303	K-28-1200	129-2511-3	M-27	M-26	T-31			
START RE.	550-25601	K-28-1100	129-2511-5	M-27	T-31	M-34	M-48	T-31	B-48
TILT RE.	550-25401	K-28-1200	129-2511-4	M-27	M-26	M-26	B-48		
1st. PLAYER 100,000 RE.	550-25404	K-28-1200	129-2511-4	M-27	M-26	M-26	M-26		
2nd. PLAYER 100,000 RE.	550-25404	K-28-1200	129-2511-4	M-27	M-26	M-26	M-26		
1-5 RELAY -----	550-25405	K-28-1100	129-2511-4	M-27	M-26	M-26	B-26		
500 HOLE RE.	550-25507	K-28-1100	129-2511-5	M-27	M-26	M-26	M-26	M-26	


(*) CHANGE RELAY HAS A 5607-A-5-10/50 NON POLARIZED CAPACITOR

OPERATING RELAYS

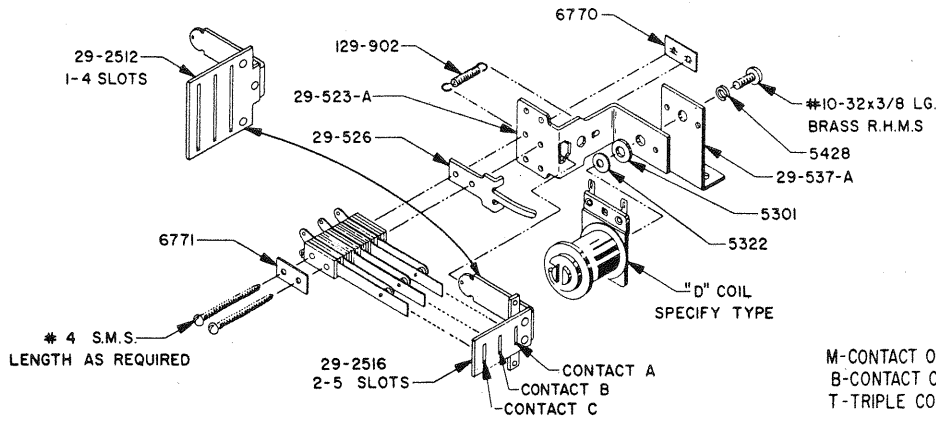


CONTACT SWITCH CODE
M-CONTACT OPEN WHEN COIL IS NOT ENERGIZED
B-CONTACT CLOSED WHEN COIL IS NOT ENERGIZED
T-TRIPLE CONTACT

RELAY NAME	COMPLETE RELAY	COIL NO.	ARMATURE	CONTACT SWITCHES
10-90 RE.	551-25001	D-27-1000	29-2516-4	ALL CONTACT SWITCHES M-28
100-900 RE.	551-25001	D-27-1000	29-2516-5	ALL CONTACT SWITCHES M-28
1000's RE.	551-25500	D-27-1000	29-2516-15	ALL CONTACT SWITHCES M-28
SCORE RESET RE. #1	551-25801	D-26-800	29-2512-3	ALL CONTACT SWITCHES M-28

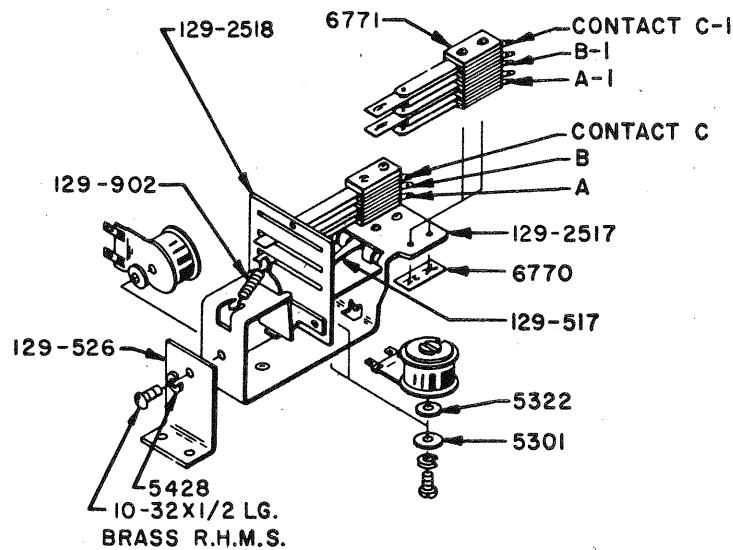


RELAY NAME	COMPLETE RELAY	COIL NO.	ARMATURE	A	B	C	A1	B1	C1
AME OVER RE.	552-25600	L-29-700	129-2518-3	M-357-A	B-357	B-357	T-356-A	B-357	T-356
nd COIN RE.	552-25400	L-29-7 0	129-2512-2	M-357-A	T-356-A	B-356	T-356-A		

SCORING DRUM UNITS

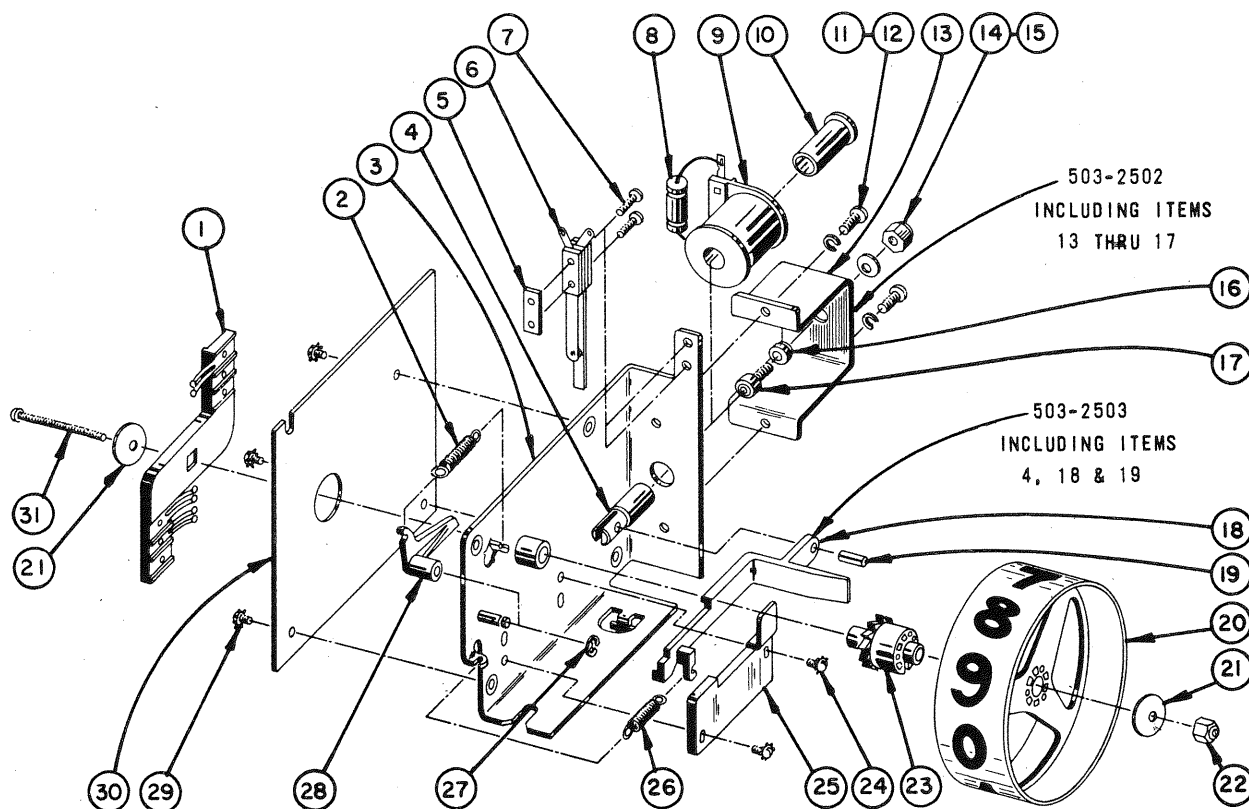

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
	503E-2530-A	10-90, 100-900, 1000-9000 SCORING DRUM UNITS (6-REQ'D.)	15	#5322	BRASS WASHER
	503E-2530-B	10,000's SCORING DRUM UNITS (2-REQ'D.)	16	500-1501	PLUNGER STOP BUSHING
1	503-2505	WIPER FINGER ASS'Y	17	500-2507	PLUNGER STOP & SLUG ASS'Y
2	503-901	SPRING (HOLDING PAWL)	18	503-802	OPERATING ARM
3	503-2501	MOUNTING PLATE ASS'Y	19	6703-6	ROLL PIN
4	503-1502-G	OPERATING PLUNGER	20	503-800-WB	DRUM
5	503-510	NUT PLATE	21	#5366	WASHER
6	#431-A	SWITCH ASS'Y (USED ON 503E-2530-A)	22		#4-40 ELASTIC STOP NUT
	#431-B	SWITCH ASS'Y (USED ON 503E-2530-B)	23	503-801	RATCHET
7		#2-56 x 1/2" LG. R.H.M.S.	24		#4-40 x 3/16 LG. SEMS UNIT
8	5607-A-5-10/50	NON POLARIZED CAPACITOR (USED ONLY ON 10,000's DRUMS)	25	503-803	ADJUSTABLE STOP
9	NA-26-900-X	COIL COMPLETE	26	300-900-B	SPRING (OPERATING ARM)
10	143-1516	SOLENOID TUBING	27	6722-14	RETAINING RING
11		#8-32 x 3/8" LG. TYPE "F" PHILLIP PAN HD. SELF TAPPING SCREW	28	503-804	HOLDING PAWL
12	#5427	SPLIT TYPE LOCKWASHER	29		#4-40 x 3/16 LG. TYPE "F" PHILLIP PAN HD. SELF TAPPING SCREW
13	503-506	COIL MTG. BRACKET	30	503E-507	COUNTER SWITCH P.C.
14		#10-32 ELASTIC STOP NUT	31		#4-40 x 1-1/4" LG. SLOTTED HD. M.S.


SCORE MOTOR CAMS

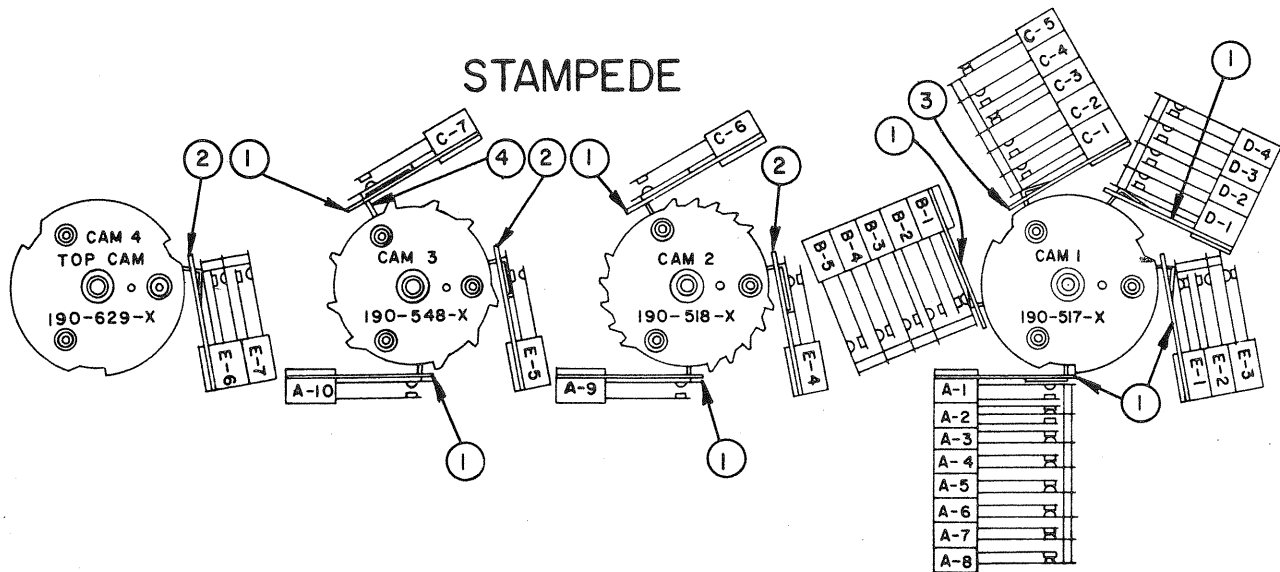

ITEM	PART NO.	DESCRIPTION
	472-2506	SCORE MOTOR CAM ASS'Y
	#5750-2333	SCORE MOTOR (60 Hz 22 R.P.M.)
	#5750-2334	SCORE MOTOR (50 Hz 22 R.P.M.)
1	115-501-F	CAM RIDER PLATE
2	115-501-A	CAM RIDER PLATE
3	115-501-P	CAM RIDER PLATE
4	115-508	CAM RIDERS (12)
A-1	#63	SWITCH ASSEMBLY
A-2	#234	SWITCH ASSEMBLY
A-3	#57	SWITCH ASSEMBLY
A-4	#57	SWITCH ASSEMBLY
A-5	#57	SWITCH ASSEMBLY
A-6	#57	SWITCH ASSEMBLY
A-7	#57	SWITCH ASSEMBLY
A-8	#57	SWITCH ASSEMBLY
A-9	#63	SWITCH ASSEMBLY
A-10	#63	SWITCH ASSEMBLY
B-1	#17	SWITCH ASSEMBLY
B-2	#325	SWITCH ASSEMBLY
B-3	#325	SWITCH ASSEMBLY
B-4	#325	SWITCH ASSEMBLY
B-5	#57	SWITCH ASSEMBLY

ITEM	PART NO.	DESCRIPTION
C-1	#60	SWITCH ASSEMBLY
C-2	#64	SWITCH ASSEMBLY
C-3	#9-B	SWITCH ASSEMBLY
C-4	#325	SWITCH ASSEMBLY
C-5	#326-A	SWITCH ASSEMBLY
C-6	#63	SWITCH ASSEMBLY
C-7	#63	SWITCH ASSEMBLY
D-1	#60	SWITCH ASSEMBLY
D-2	#325	SWITCH ASSEMBLY
D-3	#325	SWITCH ASSEMBLY
D-4	#57	SWITCH ASSEMBLY
E-1	#63	SWITCH ASSEMBLY
E-2	#325	SWITCH ASSEMBLY
E-3	#430-B	SWITCH ASSEMBLY
E-4	#63	SWITCH ASSEMBLY
E-5	#63	SWITCH ASSEMBLY
E-6	#60	SWITCH ASSEMBLY
E-7	#64	SWITCH ASSEMBLY


TARGETS & SWITCH ASSEMBLIES

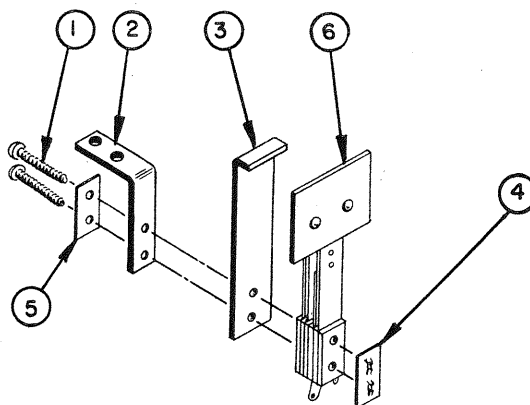

ITEM	PART NO.	DESCRIPTION
	472-2505-A	TARGET & SWITCH ASS'Y COMPLETE (1-REQ'D.)
	472-2505-B	TARGET & SWITCH ASS'Y COMPLETE (2-REQ'D.)
	472-2505-C	TARGET & SWITCH ASS'Y COMPLETE (2-REQ'D.)
1		#4 x 7/8" LG. S.R. HD. S.M.S. TYPE "B"
2	295-530-B	PLAYFIELD CONTACT BRACKET
3	468-520	FINGER STOP
4	6770	TINNERMAN NUT
5	6771	TINNERMAN SPACER
6	445-A	TARGET SWITCH ASS'Y (1-REQ'D.)
	445-B	TARGET SWITCH ASS'Y (2-REQ'D.)
	445-C	TARGET SWITCH ASS'Y (2-REQ'D.)

TRANSFORMER # 5666-2518

FOR 115 VOLT
50/60 HZ INPUT

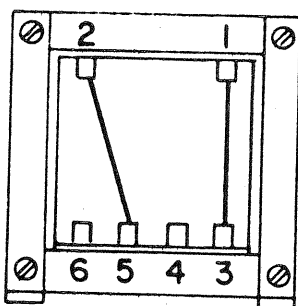


CONNECT #1 & #3 TOGETHER
CONNECT #2 & #5 TOGETHER

YELLOW = #1

BLACK = #2

DO NOT USE #4 OR #6 FOR 115 VOLT OPERATION

FOR 220-230-245 VOLT
50/60 HZ INPUT

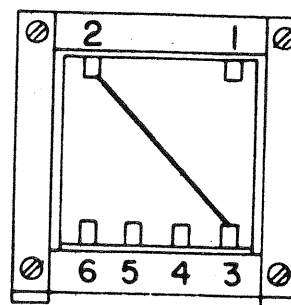


CONNECT #2 & #3 TOGETHER

YELLOW = #1


BLACK TO #4 = 220 V.

BLACK TO #5 = 230 V.


BLACK TO #6 = 245 V.

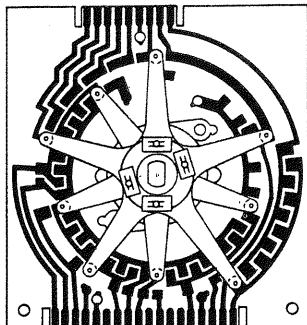


BALL COUNT UNIT
PLATE ASS'Y. 468-2527
FINGER ASS'Y. 464-2507

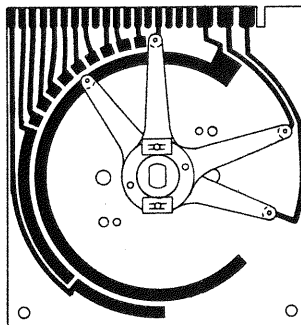


BONUS UNIT
PLATE ASS'Y. 468-2525
FINGER ASS'Y. 468-2529

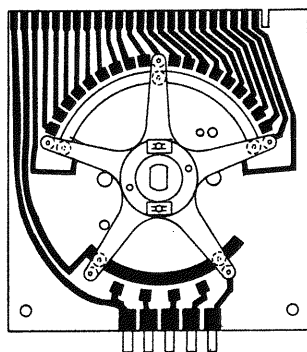


00-90 UNIT
PLATE ASS'Y. 468-2526
FINGER ASS'Y. 344-2506

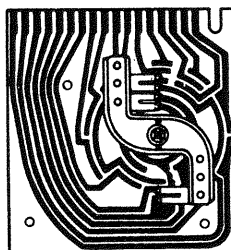

SCORING DRUM
P.C. BOARD 503E-507
WIPER FINGER ASS'Y. 503-2505

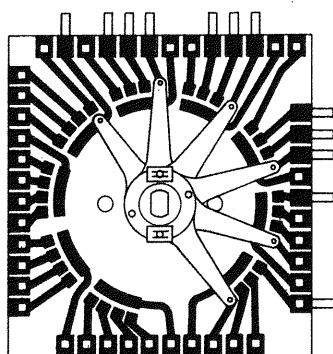


SPECIAL TARGET UNIT
PLATE ASS'Y. 472-2508
FINGER ASS'Y. 472-2509

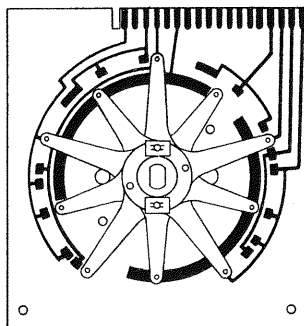

FEATURE UNIT
PLATE ASS'Y. 472-501
FINGER ASS'Y. 472-2502

COIN DENOMINATION WINDOWS

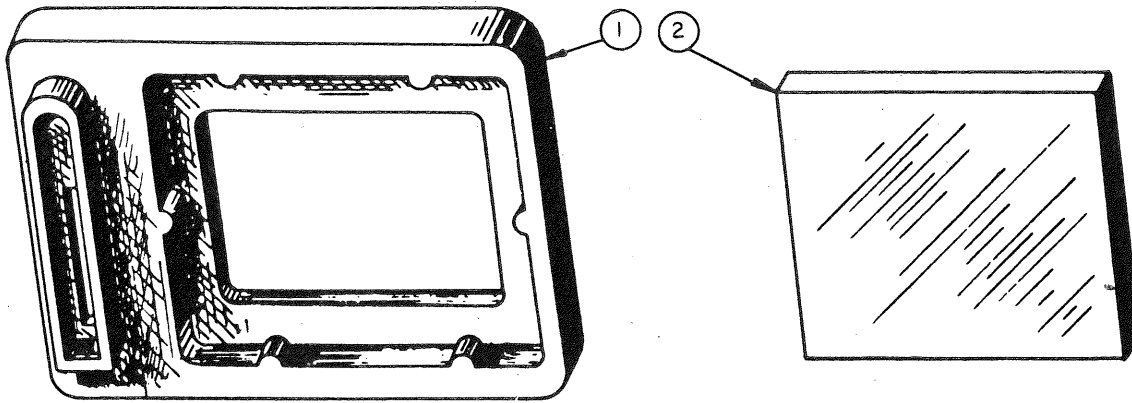


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	382-800-A	5¢ COIN ENTRY MOLDING	2	326-306-M	(2 D.M. - 5 PLAYS) (GERMAN)
	382-800-B	10¢ COIN ENTRY MOLDING		326-306-N	(1 D.M. - 2 PLAYER) (GERMAN)
	382-800-C	25¢ COIN ENTRY MOLDING		326-306-O	(2 D.M. - 4 PLAYER) (GERMAN)
	382-800-F	FOREIGN COIN ENTRY MOLDING (SPECIFY COIN OPENING)		326-306-P	(50 PFENNING) (GERMAN)
2	326-305-A	COIN DENOMINATION WINDOWS (2 NICKELS - 1 PLAY)		326-306-Q	(1 D.M.) (GERMAN)
	326-305-B	(10¢ - 1 PLAY)		326-306-R	(2 D.M.) (GERMAN)
	326-305-C	(25¢ - 3 PLAYS)		326-307-A	(50 LIRE - 1 PLAY) (ITALY)
	326-305-D	(5¢ - 1 PLAY)		326-307-B	(100 LIRE - 2 PLAYS) (ITALY)
	326-305-E	(25¢ - 5 PLAYS)		326-307-C	(100 LIRE - 1 PLAY) (ITALY)
	326-305-F	(25¢ - 6 PLAYS)		326-307-D	(100 LIRE - 3 PLAYS) (ITALY)
	326-305-G	(10¢ - 2 PLAYS)		326-307-E	(100 LIRE - 2 PLAYERS) (ITALY)
	326-305-H	(3 NICKELS - 1 PLAY)		326-308-A	(2 x 25 ORE - 1 PLAY) (SWEDISH OR DENMARK)
	326-305-J	(1 DIME & 1 NICKEL - 1 PLAY)		326-308-B	(1 KRONE - 3 PLAYS) (DENMARK)
	326-305-K	(1 QUARTER - 2 PLAYS)		326-308-C	(50 ORE - 1 PLAY) (SWEDISH OR DENMARK)
	326-305-L	(25¢ - 2 PLAYERS)		326-308-D	(1 KRONE - 2 PLAYERS) (DENMARK)
	326-305-M	(2 DIMES - 2 PLAYERS)		326-309-A	(2 x 10 YEN - 1 PLAY) (JAPANESE)
	326-305-O	(10¢ - 1 PERIOD)		326-309-B	(50 YEN - 3 PLAYS) (JAPANESE)
	326-305-P	(25¢ - 3 PERIODS)		326-309-C	(50 YEN - 1 PLAY) (JAPANESE)
	326-305-Q	(25¢ - 1 PLAY)		326-309-D	(100 YEN - 3 PLAYS) (JAPANESE)
	326-305-R	(25¢)		326-309-E	(3 x 10 YEN - 1 PLAY) (JAPANESE)
	326-305-S	(25¢ - 4 PLAYS)		326-309-F	(50 YEN - 2 PLAYS) (JAPANESE)
	326-305-T	(1 QUARTER - 1 PLAY)		326-310-A	(1/2 FRANC - 1 PLAY) (FRENCH)
	326-305-U	(A GAME OF SKILL)		326-310-B	(1 FRANC - 3 PLAYS) (FRENCH)
	326-305-V	(1 QUARTER EACH PLAYER)		326-310-C	(1 FRANC - 4 PLAYS) (FRENCH)
	326-305-W	(1 DIME EACH PLAYER)		326-310-D	(1 FRANC - 1 PLAY) (FRENCH)
	326-305-X	(QUARTER)		326-310-E	(2-20 CENTIMES - 1 PLAY) (FRENCH)
	326-306-A	(2 x 10 PFENNING - 1 PLAY) (GERMAN)		326-310-F	(100 FRANC - 1 PLAY) (FRENCH)
	326-306-B	(50 PFENNING - 3 PLAYS) (GERMAN)		326-310-G	(50 CENTIMES - 1 PLAY) (FRENCH)
	326-306-C	(1 D.M. - 6 PLAYS) (GERMAN)		326-310-H	(1 FRANC - 2 PLAYS) (FRENCH)
	326-306-D	(50 PFENNING - 1 PLAY) (GERMAN)		326-310-I	(5 FRANCS - 1 PLAY) (FRENCH)
	326-306-E	(50 PFENNING - 2 PLAYS) (GERMAN)		326-310-J	(50 CENTIMES - 2 PLAYS) (FRENCH)
	326-306-F	(1 D.M. - 4 PLAYS) (GERMAN)		326-310-K	(1 FRANC - 5 PLAYS) (FRENCH)
	326-306-G	(1 D.M. - 5 PLAYS) (GERMAN)		326-310-L	(10 FRANCS - 2 PLAYS) (FRENCH)
	326-306-H	(2 D.M. - 10 PLAYS) (GERMAN)		326-310-M	(2 x 1 FRANC - 1 PLAY) (FRENCH)
	326-306-I	(2 D.M. - 11 PLAYS) (GERMAN)		326-310-N	(2 x 5 FRANCS - 1 PLAY) (FRENCH)
	326-306-J	(2 D.M. - 12 PLAYS) (GERMAN)		326-310-O	(1 FRANC - 2 PLAYERS) (FRENCH)
	326-306-K	(1 D.M. - 2 PLAYS) (GERMAN)		326-310-P	(1/2 FRANC - 2 PLAYERS) (FRENCH)
	326-306-L	(1 D.M. - 1 PLAY) (GERMAN)		326-310-Q	(2 x 5 FRANCS - 2 PLAYERS) (FRENCH)
				326-310-R	(10 FRANC - 1 PLAY) (FRENCH)
				326-311-A	(6d - 1 PLAY) (BRITISH)

COIN DENOMINATION WINDOWS

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>
326-311-B	(ONE SHILLING - 1 PLAY) (BRITISH)	326-314-B	(5 SCHILLINGS - 3 PLAYS) (AUSTRIA)
326-311-C	(TWO SHILLINGS - 2 PLAYS) (BRITISH)	326-315-A	(1 KRONA - 1 PLAY) (SWEDEN)
326-311-D	(TWO SHILLINGS - 4 PLAYS) (BRITISH)	326-315-B	(1 KRONA - 2 PLAYERS) (SWEDISH)
326-311-E	(ONE SHILLING - 3 PLAYS) (BRITISH)	326-316-A	(1 MARKKA - 1 PLAY) (FINLAND)
326-311-F	(TWO SHILLINGS - 1 PLAY) (BRITISH)	326-317-A	(1 ESCUDO - 1 PLAY) (PORTUGAL)
326-311-G	(20 CENTS - 1 PLAY) (BRITISH)	326-317-B	(5 ESCUDOS - 2 PLAYERS) (PORTUGAL)
326-311-H	(5d - 1 PLAY) (BRITISH)	326-318-A	(25 PIASTRES - 1 PLAY) (LEBANON)
326-311-I	(5d - 2 PLAYERS) (BRITISH)	326-318-B	(50 PIASTRES - 2 PLAYS) (LEBANON)
326-311-J	(10 PENCE - 4 PLAYERS) (BRITISH)	326-319-A	(25 CENTIMOS - 1 PLAY) (VENEZUELA)
326-311-K	(TWO SHILLINGS - 5 PLAYS) (BRITISH)	326-320-A	(1 PESO - UN JUEGO) (MEXICO)
326-311-L	(10 PENCE - 1 PLAY) (BRITISH)	326-320-B	(2 x 1 PESO - UN JUEGO) (MEXICO)
326-312-A	(1 DINAR - 2 PLAYS) (YUGOSLAVIA)	326-321-A	(2 x 5 PESETAS - 2 PLAYERS) (SPAIN)
326-312-B	(50 PARA - 1 PLAY) (YUGOSLAVIA)	382-301-A	(1 QUARTER - 2 PLAYS)
326-312-C	(1 DINAR - 1 PLAY) (YUGOSLAVIA)	382-301-B	(1 QUARTER - 3 PLAYS)
326-313-A	(1 SPEL - 25¢) (HOLLAND)	382-301-C	(1 DIME & 1 NICKEL - 1 PLAY)
326-313-B	(1 GULDEN) (4 SPELEN) (HOLLAND)	382-301-D	(3 NICKELS - 1 PLAY)
326-313-C	(1 GULDEN - 2 SPELER) (HOLLAND)	382-301-E	(10¢ - 1 PLAY)
326-314-A	(2 x 1 SCHILLING - 1 PLAY) (AUSTRIA)	382-301-F	(2 NICKELS - 1 PLAY)

FLIPPER BUTTON & CREDIT BUTTON ASSEMBLY

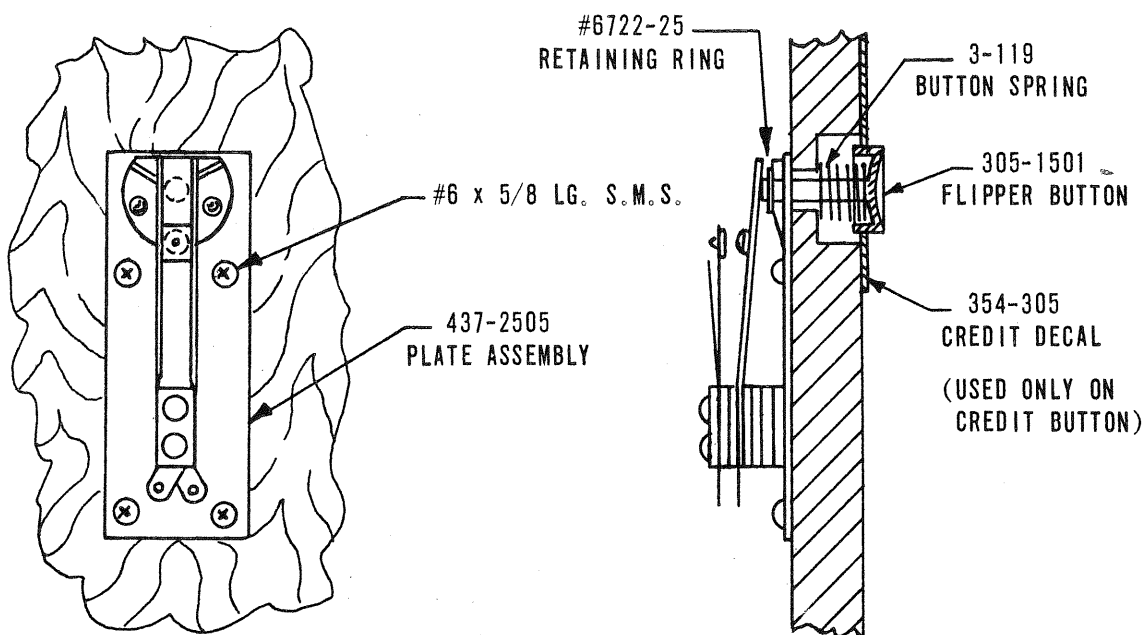

AH
ANNEX
COIN RELAY

**STERN
ELECTRONICS, INC.**

STAMPEDE