


GAME NO. 0E79

FORM NO. 0E79-00300-0200

City Slicker

T.M.

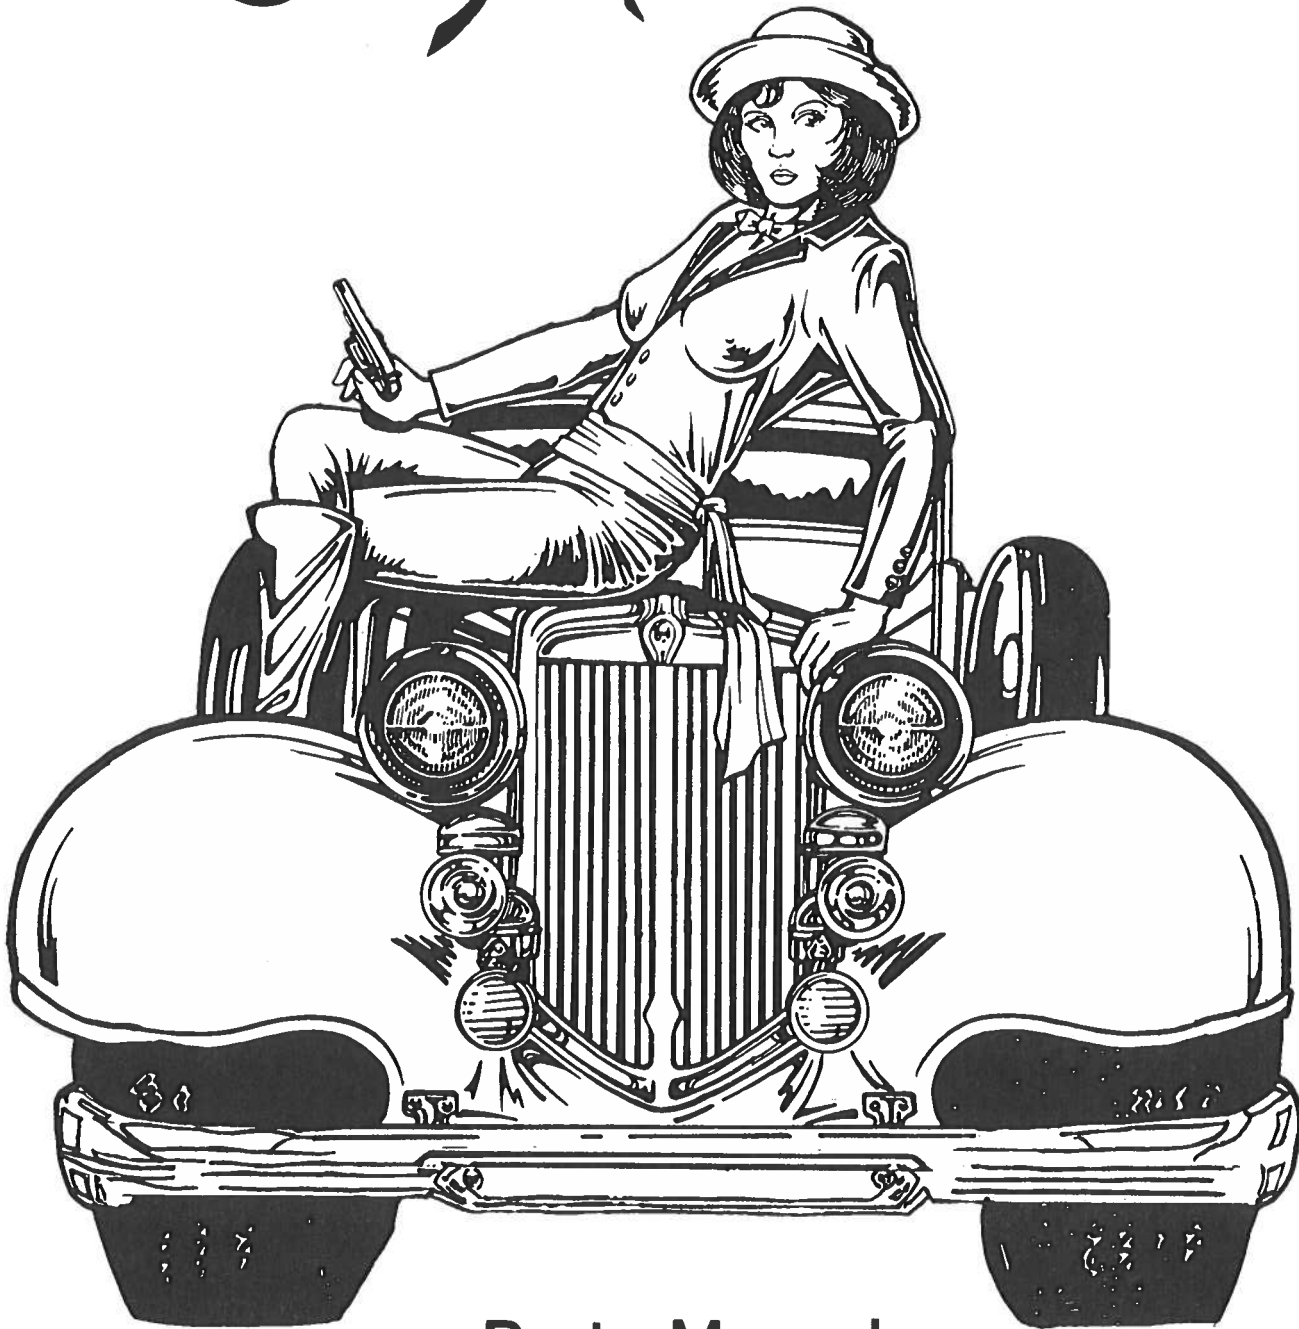

Parts Manual

Bally
MIDWAY™


10601 W. Belmont Ave. • Franklin Park, Illinois 60131 • U.S.A.

Telephone: (312) 451-9200 • Fax No: 312-451-4150

Cable Address: MIDCO • Telex No: 72-1596



TOP PLAYFIELD ASSEMBLY w/PLASTICS
PART NO. AE79-00004-0000

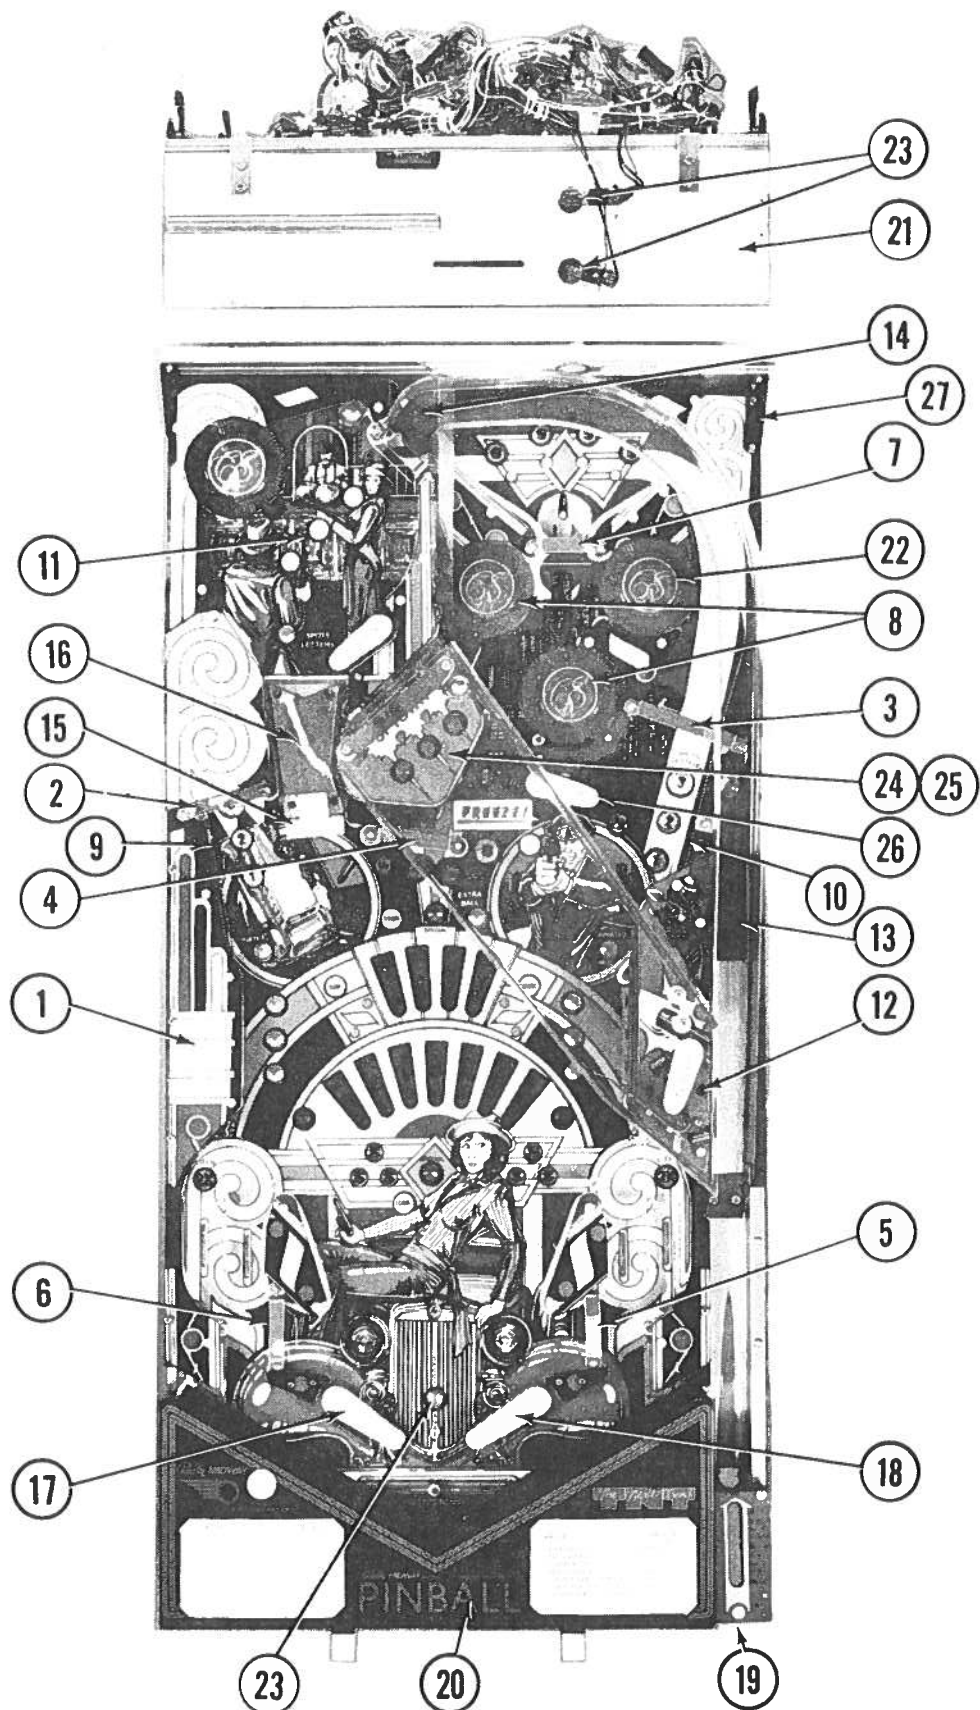

TOP PLAYFIELD ASSEMBLY W/PLASTICS - PART LIST
PART NO. AE79-00004-0000

ORDER BY PART NUMBER **ONLY**

ITEM	PART NO.	DESCRIPTION
1	AE79-00011-00XF	SCREENED PLASTICS SET W/BUSHING
	OE79-00901-00XF	BUTYRATE: SCREENED & DIE CUT
	0967-00710-00XF	SPACER: BUSHING (27 REQ'D.)
2	AE14-00013-0000	GATE-BRKT. & WIRE FORM ASSY.
	0017-00104-0084	WASHER .075" I.D. - .250" O.D. - .062" TH. NYLON
	0360-00132-0000	BRACKET: GATE
	0360-00926-0000	WIRE FORM: SPINNER TARGET
	0365-00146-0000	WIRE FORM: GATE
3	AE79-00028-0000	GATE-BRKT. & WIRE FORM ASSY.
	OE79-00104-0000	WIRE FORM: GATE
	OE79-00106-0000	BRKT.: GATE
	0017-00104-0084	WASHER .075" I.D. - .250" O.D. - .062" TH. NYLON
	0360-00926-0000	WIRE FORM: SPINNER TARGET
4	A360-00213-0000	GATE-BRKT. & WIRE FORM ASSY.
	0360-00132-0000	BRKT.: GATE
	0360-00925-0000	WIRE FORM: GATE
5	A360-00297-0000	GATE-BRKT. & WIRE FORM ASSY.
	0010-00614-0000	WIRE FORM: GATE
	0360-00319-0000	BRKT.: GATE
6	A371-00040-0000	GATE-BRKT. & WIRE FORM ASSY.
	0010-00617-0000	WIRE-FORM: GATE
	0360-00319-0000	BRKT.: GATE
7	A967-00058-0000	GATE-BRKT. & WIRE FORM ASSY.
	0010-00613-0000	WIRE-FORM: GATE

TOP PLAYFIELD ASSEMBLY W/PLASTICS - PART LIST, CONT'D.
PART NO. AE79-00004-0000


ORDER BY PART NUMBER **ONLY**

ITEM	PART NO.	DESCRIPTION
	0967-00108-0000	BRKT.: GATE
8	AE79-00033-0200	THUMPER-CAP W/HOT-STAMP ASSY. (VERTICAL MTG.) (2 REQ'D.)
9	AE79-00021-0000	BALL SCOOP ASSY. UPPER LEFT
10	AE79-00022-0000	BALL SCOOP ASSY. UPPER RIGHT
11	AE79-00024-0000	TOP REAR PLATFORM ASSY.: (SEE PAGE 46)
12	AE79-00023-0000	FLIPPER PLATFORM ASSY.: (SEE PAGE 50)
13	AE79-00030-0000	ENTRANCE RAMP ASSY. (INCLUDES ITEMS 13 & 14)
14	0360-00022-0000	BALL GATE ASSY. (UNDER TOP REAR PLATFORM ASSY.)
15	0E52-00108-0000	PLATE: RAMP ENTRANCE
16	0E79-00914-0000	RAMP: UPTOWN
17	A365-00312-0100	MOLDED FLIPPER - CAP ASSY. (WHITE) LEFT
18	A365-00312-0200	MOLDED FLIPPER - CAP ASSY. (WHITE) RIGHT
19	0E79-00117-00XF	SHOOTER GAUGE
20	0E79-00912-00XF	BOTTOM ARCH: SCREENED
21	0E79-00506-0000	BACKBOARD: PLAYFIELD
22	AE79-00033-0200	THUMPER-CAP W/HOT-STAMP ASSY. (45° MTG.)
23		SEE COMMON SOCKET ASSY. (SEE PAGE 34)
24	AE79-00031-0100	BALL STOP ASSY. RT. SIDE (UNDER TOP REAR PLATFORM ASSY.)
25	AE79-00031-0200	BALL STOP ASSY. LT. SIDE (UNDER TOP REAR PLATFORM ASSY.)
26	A391-00052-0100	FLIPPER & SHAFT ASSY.: LEFT (BLACK)
	A360-00602-00XF	KICKER ARM W/SHAFT ASSY.
	0391-00051-0100	FLIPPER W/HOT STAMP: LEFT (BLACK)
	0017-00041-0643	BUMPER: WHITE RUBBER (1.0" I.D.)
27	0E14-00103-0000	BRKT.: GUSSET



THIS PAGE WAS LEFT BLANK INTENTIONALLY

TOP PLAYFIELD ASSEMBLY w/o PLASTICS
PART NO. AE79-00004-0000

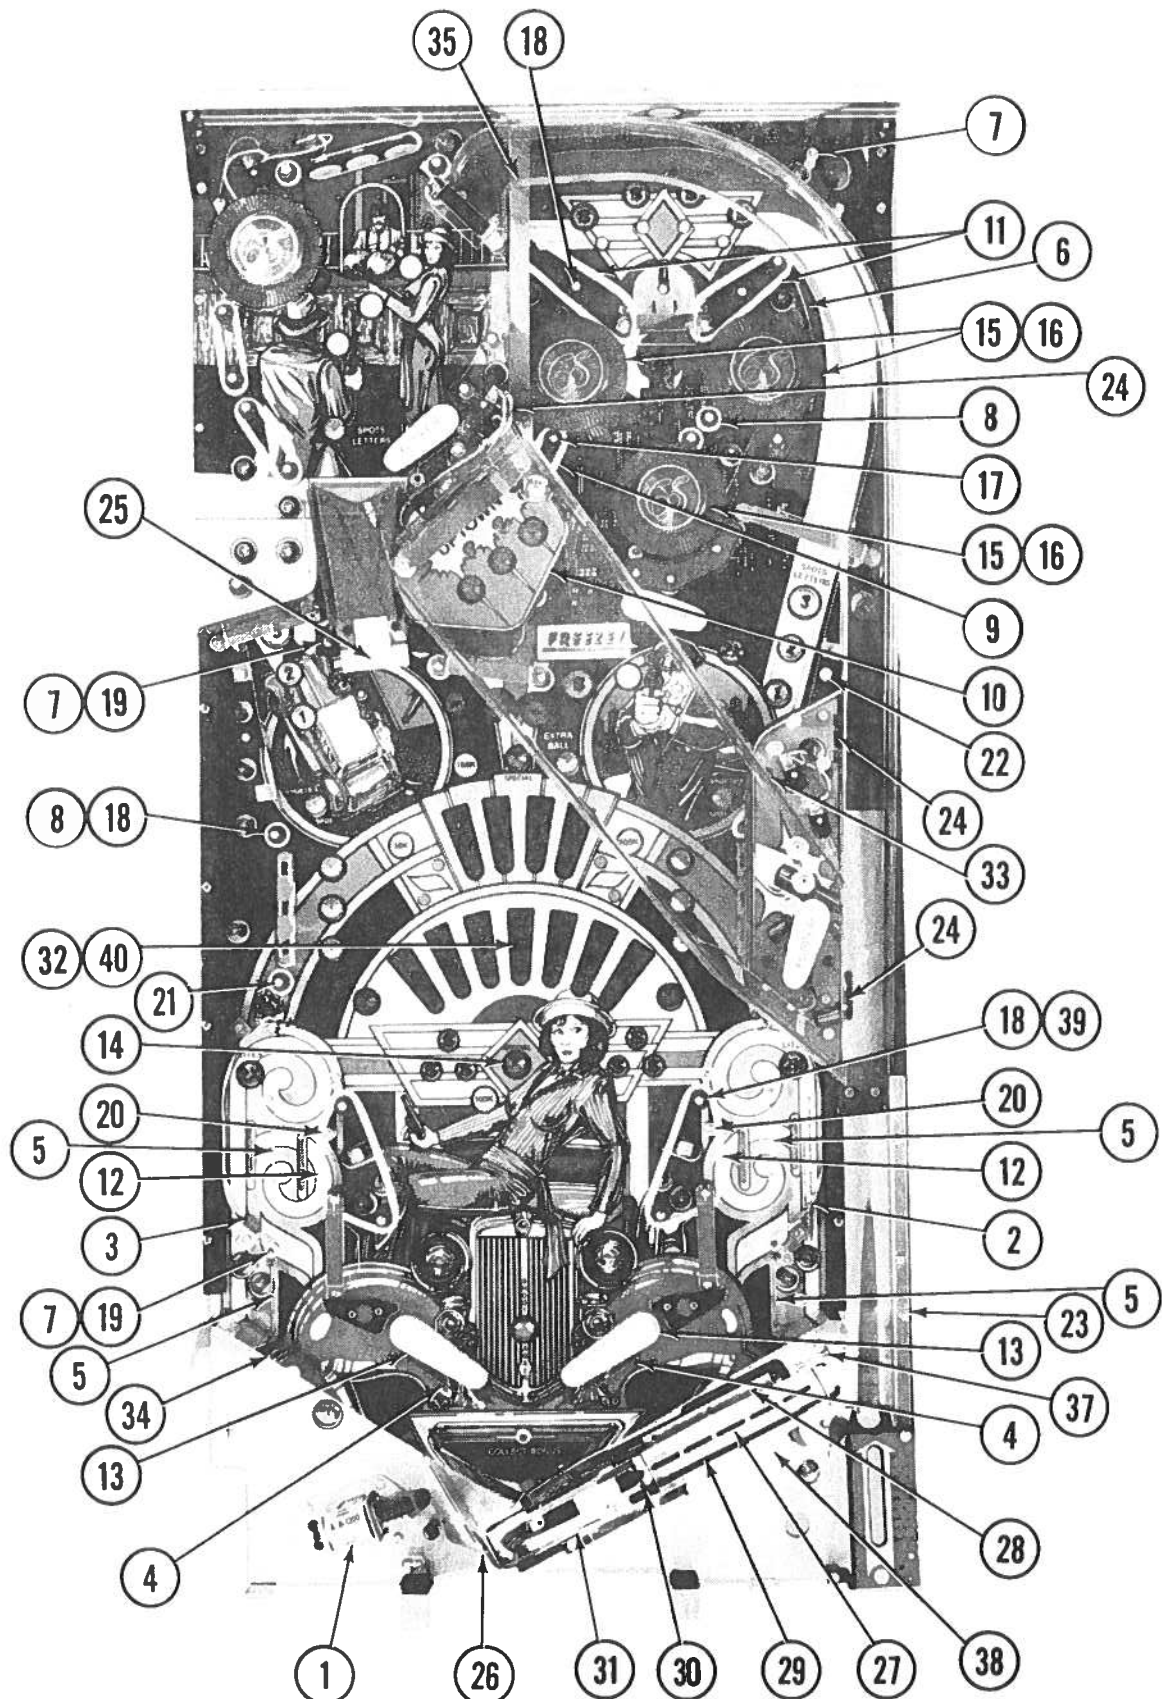

TOP PLAYFIELD ASSEMBLY W/O PLASTICS - PART LIST
PART NO. AE79-00004-0000

ORDER BY PART NUMBER ONLY


ITEM	PART NO.	DESCRIPTION
1	A360-00234-0000	KICKER ASSY.: TOP MOUNTED (SEE PAGE 8)
2	AE79-00013-0000	BALL GUIDE ASSY.: RIGHT
3	A390-00018-0000	BALL GUIDE ASSY.
4	0360-00175-5300	WIRE-FORM: BALL GUIDE (2 REQ'D.)
5	0365-00151-2000	WIRE-FORM: BALL GUIDE (4 REQ'D.)
6	0365-00175-0000	WIRE-FORM: BALL GUIDE
7	0017-00041-0633	BUMPER: WHITE RUBBER (9 REQ'D.)
8	0017-00041-0637	BUMPER: WHITE RUBBER (17 REQ'D.)
9	0017-00041-0642	BUMPER: I.D. = 3/4" RUBBER
10	0017-00041-0643	BUMPER: I.D. = 1" RUBBER (2 REQ'D.)
11	0017-00041-0645	BUMPER: I.D. = 2" RUBBER (2 REQ'D.)
12	0017-00041-0646	BUMPER: I.D. = 2-1/2" RUBBER (2 REQ'D.)
13	0017-00041-0653	FLIPPER-RUBBER: YELLOW (2 REQ'D.)
14		SEE COMMON SOCKET ASSY. (SEE PAGE 34)
15	0017-00042-0414	RING: LOCKING (MOLDED THUMPER BUMPER) (3 REQ'D.)
16	0017-00042-0567	COLLAR: THUMPER BUMPER (BLUE) (3 REQ'D.)
17	0017-00042-0588	POST: L = 1" (RED) (9 REQ'D.)
18	0017-00042-0596	POST: L = 1-3/16" (RED) (26 REQ'D.)
19	0360-00732-00XF	POST: BUMPER #10 X 7/16" WOOD SCREW (10 REQ'D.)
20	0360-00733-00XF	POST: BUMPER (NICKEL) (2 REQ'D.)
21	0360-00738-01XF	STUD: 6 X 1-11/16" (11 REQ'D.)
22	0360-00738-02XF	STUD: 6 X 1-1/2" (4 REQ'D.)
23	0E79-00119-0000	RAIL: SIDE (METAL)
24	0E79-00103-00XF	BRKT.: PANEL SUPPORT (3 REQ'D.)

TOP PLAYFIELD ASSEMBLY W/O PLASTICS - PART LIST, CONT'D.
PART NO. AE79-00004-0000


ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
25	0E79-00107-0000	BRKT.: RAMP SUPPORT (LOCATED UNDER RAMP ENTRANCE PLATE)
26	0360-00188-00XF	GUIDE: BALL RETURN
	AE79-00050-0000	RAMP-STUD TO SWITCH ASSY. (INCLUDES ITEMS 27 THRU 29)
27	AE35-00014-00XF	STUD TO RAMP ASSY.
	AE79-00049-0000	SWITCH W/BRKT. ASSY.: RAMP (INCLUDES ITEMS 28 & 29)
28	AA40-00020-0000	SWITCH W/DIODE & WIRE FORM ASSY. (2 REQ'D.)
	0010-00295-0000	WIRE-FORM: SWITCH ~ RAMP (2 REQ'D)
	0017-00007-0015	NUT: 1/8 PUSH (2 REQ'D.)
	0017-00032-0123	SWITCH: MICRO, LOW-TORQUE (2 REQ'D.)
29	0E35-00909-0000	SWITCH: 5-INSULATOR (LOCATED UNDER BALL RAMP)
30	AE35-00044-00XF	REAR BALL CHANNEL & BRKT. ASSY.
31	0E35-00118-00XF	BALL RUNWAY
32	AE79-00501-00XF	PLAYFIELD W/INSERTS: SCREENED & PIERCED
33	AA17-00023-0000	BALL REBOUND ASSY. (LOCATED UNDER FLIPPER PLATFORM)
	0017-00041-0715	BUMPER: REBOUND, RUBBER
34	0370-00918-0300	BOTTOM ARCH EXTENSION
35	0E79-00121-0000	PLATE: BALL DEFLECTOR
36	0390-00906-0000	BUTTON: ROLL-OVER (WHITE) (4 REQ'D.)
37	AE35-00016-0000	FRONT BALL CHANNEL ASSY.
38	AE35-00070-0000	STOP-TO-COVER ASSY.
39	0967-00707-01XF	STUD: 6-32 X 1-11/16" (7 REQ'D.)
40	0E79-00903-0000	MYLAR: PLAYFIELD CITY SLICKER
41	0017-00007-0546	BALL: 1-1/16" DIA. STEEL (INSERTED IN OUTHOLE TROUGH) (2 REQ'D.)


TOP REAR PLATFORM ASSEMBLY w/PLASTICS: FRONT VIEW
PART NO. AE79-00024-0000

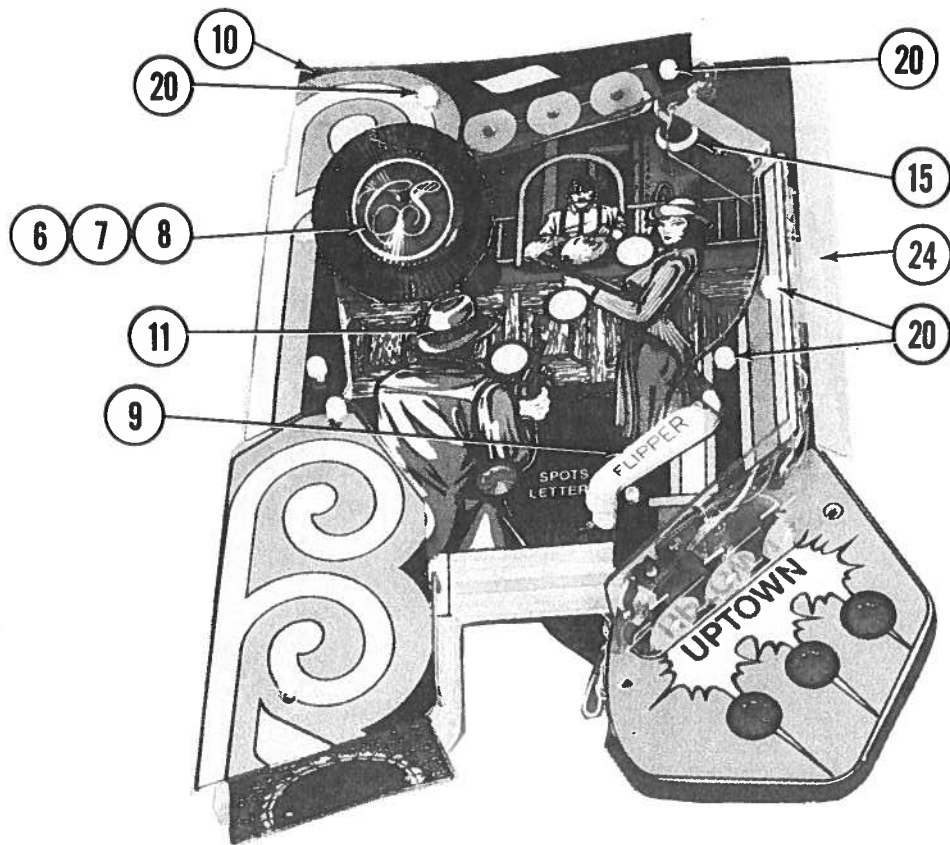

TOP REAR PLATFORM ASSEMBLY w/o PLASTICS: FRONT VIEW
PART NO. AE79-00024-0000

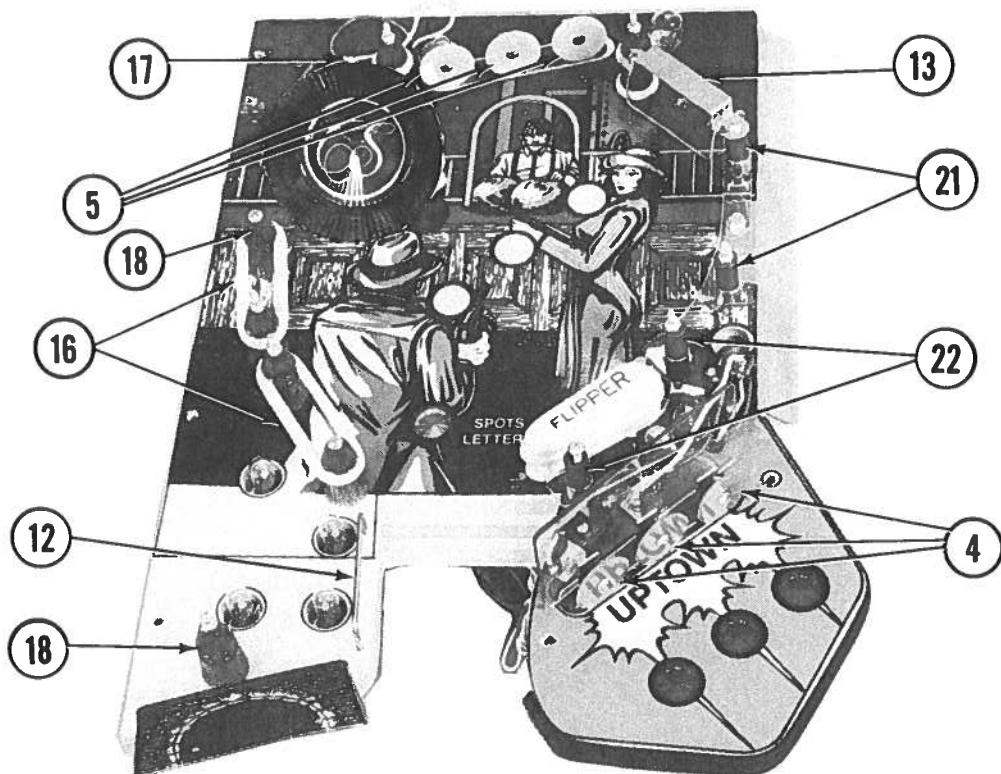

TOP REAR PLATFORM ASSEMBLY: REAR VIEW
PART NO. AE79-00024-0000

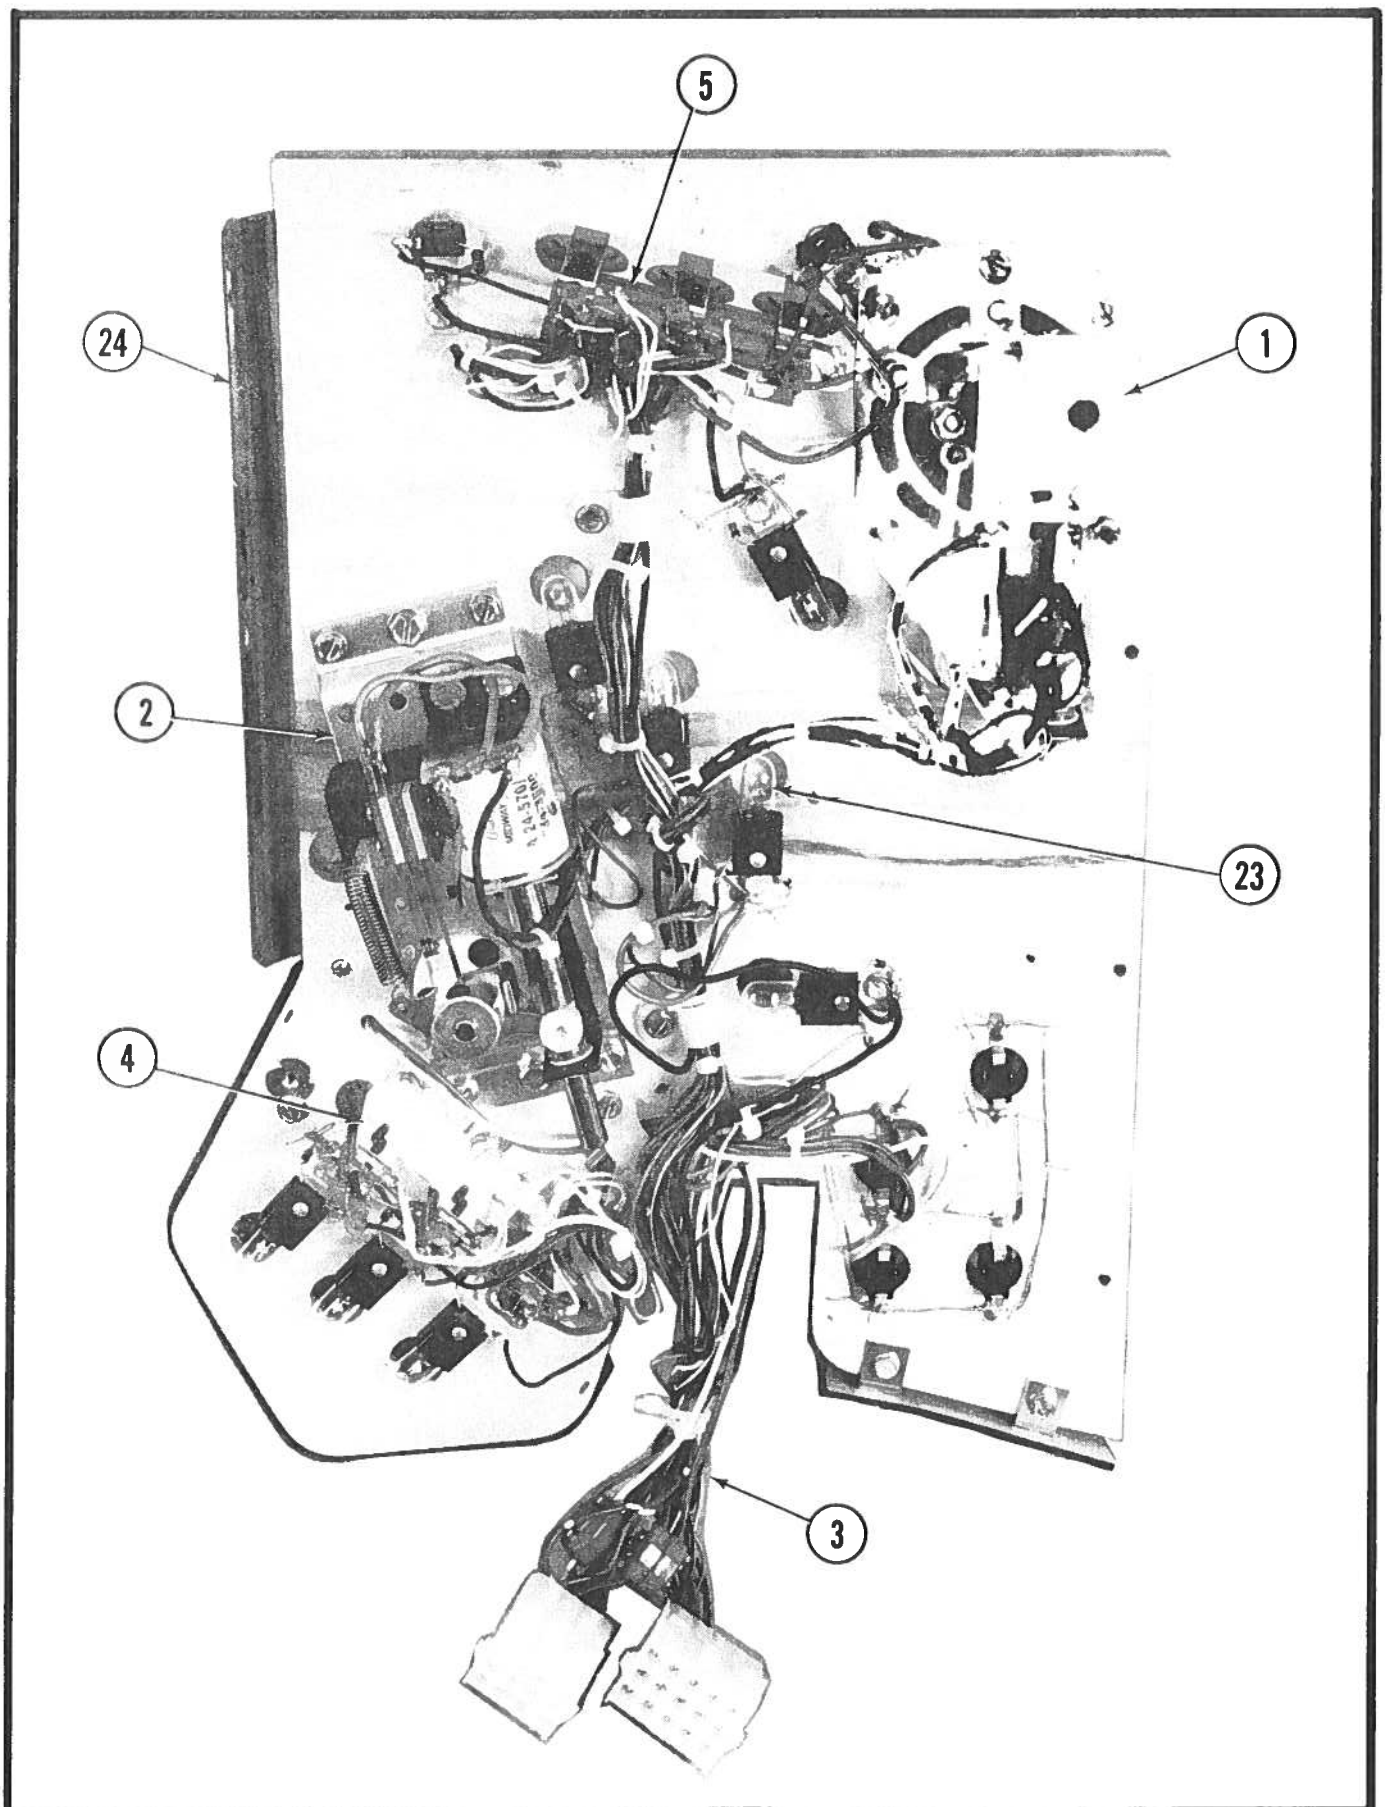

TOP REAR PLATFORM ASSEMBLY: - PARTS LIST
PART NO. AE79-00024-0000

ORDER BY PART NUMBER **ONLY**

ITEM	PART NO.	DESCRIPTION
1	A967-00053-0100	THUMPER BUMPER ASSY. (SEE PAGE 14)
2	AE79-00037-0000	FLIPPER ASSY.: RIGHT, SINGLE SWITCH (SEE PAGE 26)
	0365-00101-00XF	BRKT.: FLIPPER MOUNTING
3	AE79-00038-0000	TOP REAR PLATFORM CABLE ASSY.
4	A365-R0307-F111	TARGET, SWITCH, BRKT., DIODE & CAP: (RED) LUG RT.
	A365-R0300-0001	TARGET W/SWITCH ASSY.: (RED) LUG RT. (3 REQ'D.)
	0020-00202-0000	PLATE: SWITCH (3 REQ'D.)
	0090-00126-01XF	BLADE: BACK-UP STRIP (3 REQ'D.)
	0365-00171-03XF	BRKT.: TARGET 3-BANK
5	A365-R0307-F113	TARGET, SWITCH, BRKT., DIODE & CAP: (YELLOW) LUG RT.
	A365-R0300-0003	TARGET W/SWITCH ASSY.: (YELLOW) LUG RT. (3 REQ'D.)
	0020-00202-0000	PLATE: SWITCH (3 REQ'D.)
	0090-00126-01XF	BLADE: BACK-UP STRIP (3 REQ'D.)
	0365-00171-03XF	BRKT.: TARGET 3-BANK
6	AE79-00033-0100	THUMPER-CAP W/HOT STAMP ASSY. (HORIZONTAL MTG.)
7	0017-00042-0414	RING: LOCKING (MOLDED THUMPER BUMPER)
8	0017-00042-0567	COLLAR: THUMPER BUMPER (BLUE)
9	A391-00050-0100	FLIPPER & SHAFT ASSY.: RIGHT (BLACK)
	A360-00602-00XF	KICKER ARM W/SHAFT ASSY.
	A391-00049-0100	FLIPPER W/HOT STAMP: RIGHT (BLACK)
	0017-00041-0643	RUBBER BUMPER: 1" (2 REQ'D.)
10	0E14-00103-00XF	BRKT.: GUSSET
11	AE79-00507-0000	REAR PLATFORM W/INSERTS
12	0365-00151-2000	WIRE FORM: BALL GUIDE

**TOP REAR PLATFORM ASSEMBLY: - PARTS LIST, CONT'D.
PART NO. AE79-00024-0000**


ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
13	A967-00058-0000	GATE, BRKT. & WIRE-FORM ASSY.
	0010-00613-0000	WIRE-FORM: GATE BRACKET
	0967-00108-0000	BRACKET: GATE
14	0017-00041-0633	BUMPER: WHITE RUBBER (NOT SHOWN)
15	0017-00041-0637	BUMPER: WHITE RUBBER (3 REQ'D.)
16	0017-00041-0643	BUMPER: I.D. = 1" RUBBER (2 REQ'D.)
17	0017-00042-0588	POST: L = 1.0" RED
18	0017-00042-0596	POST: L=1-3/16 RED (9 REQ'D.)
19	0360-00732-00XF	POST: BUMPER #10 X 7/16" WOOD SCREW (NOT SHOWN)
20	0017-00009-0302	NUT: #5 ACORN (NYLON) (8 REQ'D.)
21	0012-00010-0400	SPACER BUSHING 11/16" GREY (2 REQ'D.)
22	0012-00010-1400	SPACER BUSHING 9/16" GREY (2 REQ'D.)
23		SEE COMMON SOCKET ASSY. (SEE PAGE 34)
24 *	0E79-00121-0000	PLATE: BALL DEFLECTOR
*		NOT PART OF ABOVE ASSEMBLY & MUST BE ORDERED SEPARATELY



THIS PAGE WAS LEFT BLANK INTENTIONALLY

BOTTOM PLAYFIELD ASSEMBLY
PART NO. AE79-00004-0000

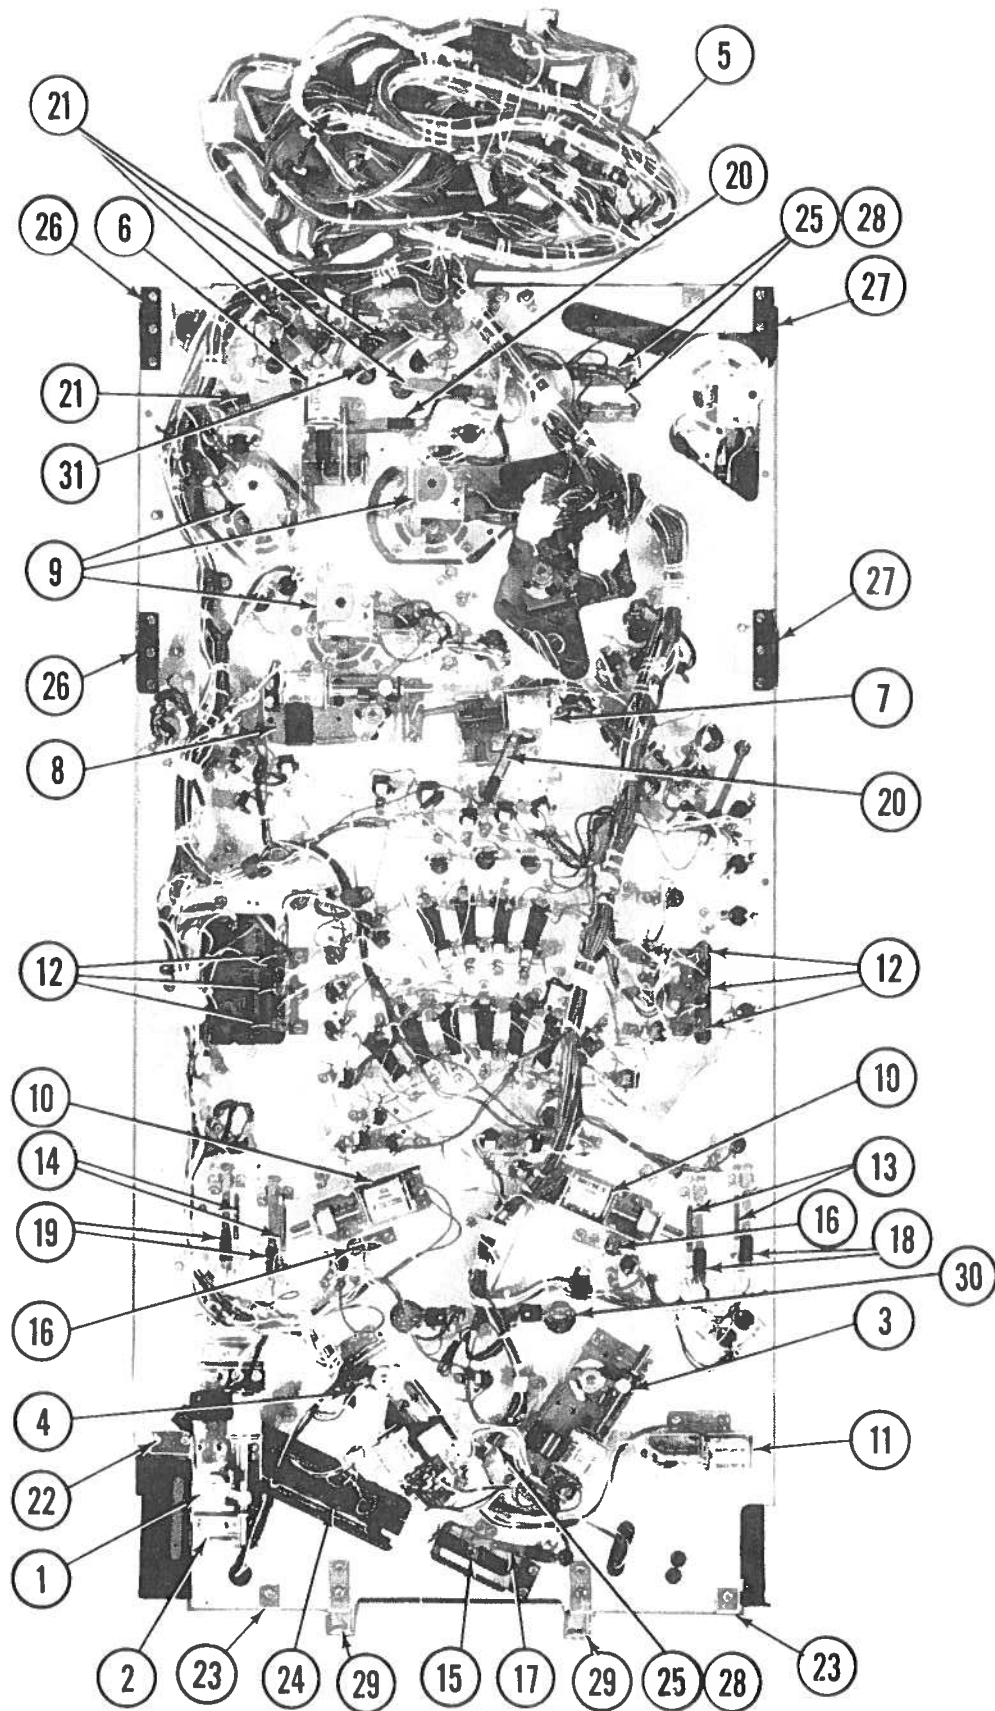

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST
PART NO. AE79-00004-0000

ORDER BY PART NUMBER ONLY

ITEM	PART NO.	DESCRIPTION
1	AA40-00019-0000	BALL GATE ASSEMBLY
2	AA40-00027-0000	BALL CHANNEL GATE ASSEMBLY (SEE PAGE 32)
3	AC70-00022-0200	FLIPPER ASSY. SINGLE SW/LT. (SEE PAGE 22)
4	AC70-00023-0100	FLIPPER ASSY. DOUBLE SW/RT. (SEE PAGE 24)
5	AE79-00005-0000	PLAYFIELD CABLE ASSY.
6	AE79-00027-0000	EJECT HOLE ASSY. (SEE PAGE 30)
7	AE79-00039-0000	EJECT HOLE ASSY. (SEE PAGE 30)
8	AE79-00036-0000	FLIPPER ASSY. RT. W/O SWITCH (SEE PAGE 28)
9	A967-00053-0100	THUMPER BUMPER ASSY. (3 REQ'D.) (SEE PAGE 14)
10	A967-00059-0000	SLINGSHOT KICKER ASSY. (2 REQ'D.) (SEE PAGE 16)
11	A360-00235-0000	KNOCKER ASSY. 2-LUG (SEE PAGE 7)
12	A365-R0307-F113	TARGET, SWITCH, BRKT., DIODE & CAP (YELLOW) LG-RT (2 REQ'D.)
	A365-R0300-0003	TARGET W/SWITCH ASSY. (YELLOW) (3 REQ'D.)
	A360-00070-0000	SWITCH ASSY.: TARGET
13	A331-00042-0000	BRKT. W/WIRE FORM ASSY. ROLLOVER LT. (2 REQ'D.)
	0360-00135-0000	BRKT.: ROLLOVER-WIRE, LT.
	0360-00929-0200	WIRE FORM: ROLLOVER, LT.
14	A360-00216-0000	BRKT. W/WIRE FORM ASSY. ROLLOVER RT. (2 REQ'D.)
	0360-00134-0000	BRKT.: ROLLOVER-WIRE, RT.
	0360-00930-0000	WIRE FORM: ROLLOVER, RT.
15	A360-00217-0000	BRKT. W/WIRE FORM ASSY. ROLLOVER LT.
	0360-00135-0000	BRKT.: ROLLOVER-WIRE, LT.
	0360-00931-0000	WIRE-FORM: ROLLOVER, LT.

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST, CONT'D.
PART NO. AE79-00004-0000

ORDER BY PART NUMBER **ONLY**

ITEM	PART NO.	DESCRIPTION
16	A360-00239-0000	SWITCH W/BRKT. & DIODE ASSY. SLINGSHOT (2 REQ'D.)
	A360-00069-0000	SWITCH ASSY.
17	A360-00241-0000	SWITCH W/DIODE & PLATE ASSY.
	A360-00055-0000	SWITCH ASSY.
18	A365-00035-0000	SWITCH W/DIODE & PLATE ASSY. (2 REQ'D.)
	A360-00243-0000	SWITCH W/DIODE ASSY.
	A360-00061-0000	SWITCH ASSY.
19	A967-00067-0000	SWITCH W/DIODE, PLATE ASSY. (2 REQ'D.)
	A360-00065-0000	SWITCH ASSY.
20	A365-00036-0000	SWITCH W/DIODE & PLATE ASSY. (2 REQ'D.)
	A967-00068-0000	SWITCH W/DIODE ASSY.
	A967-00075-0000	SWITCH ASSY.
21	AA17-00041-0000	SWITCH W/DIODE & PLATE ASSY. (4 REQ'D.)
	AA17-00040-0000	SWITCH W/DIODE ASSY.: ROLLOVER BUTTON
	A390-00040-0000	SWITCH ASSY.: ROLLOVER BUTTON
22	0B42-00100-00XF	BALL CONTROL PLATE
23	0B42-00102-00XF	BRKT.:BOTTOM ARCH (2 REQ'D.)
24	0E35-00118-00XF	BALL RUNWAY
25	0017-00003-0103	FUSE: MDL 3AG 1A 250V SLOW-BLOW (3 REQ'D.)
26	0365-00170-01XF	HINGE PLATE: PLAYFIELD RT. (2 REQ'D.)
27	0365-00170-02XF	HINGE PLATE: PLAYFIELD LT. (2 REQ'D.)
28	0720-00001-0100	FUSE-CLIP ASSY. 1-POSITION (3 REQ'D.)

BOTTOM PLAYFIELD ASSEMBLY - PARTS LIST, CONT'D.
PART NO. AE79-00004-0000

ORDER BY PART NUMBER **ONLY**

ITEM	PART NO.	DESCRIPTION
29	A365-00314-0000	SUPPORT BRACKET ASSY. (2 REQ'D.)
30		SEE COMMON SOCKET PAGE (SEE PAGE 34)
31	0390-00701-0000	BUSHING-NUT: ROLL-OVER BUTTON (4 REQ'D.)
32	0017-00041-0000	TUBING: PVC CUT 3/4" CLEAR (USED ON SWITCHES) (20 REQ'D.)



THIS PAGE WAS LEFT BLANK INTENTIONALLY