


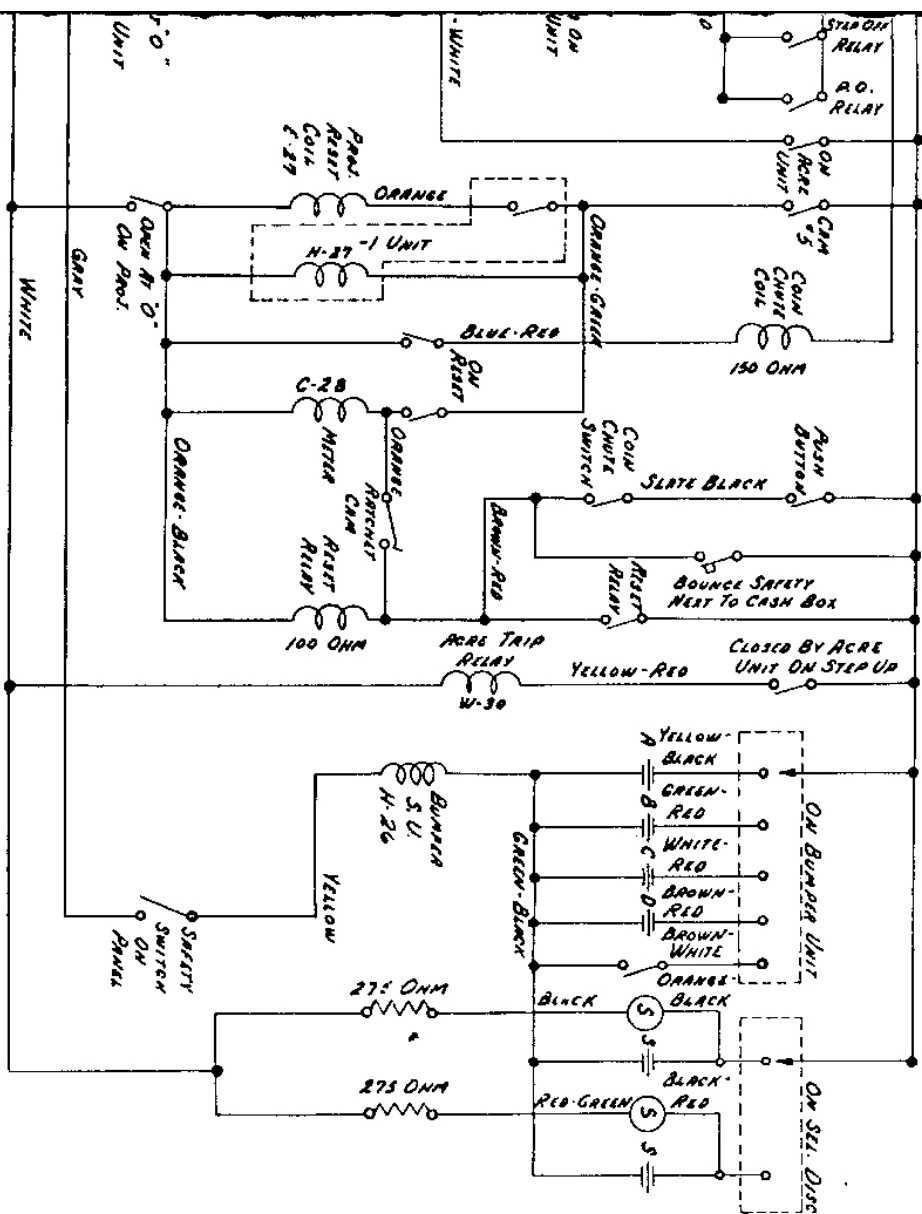


LONG ACRES

ODDS AND SELECTION ADJUSTMENTS

Adjustments suggested by the diagrams below are made by means of the Main Plug and the Secondary Plug---located directly in front of Meters.

The conservative adjustment, indicated below is most commonly used for efficient operation.

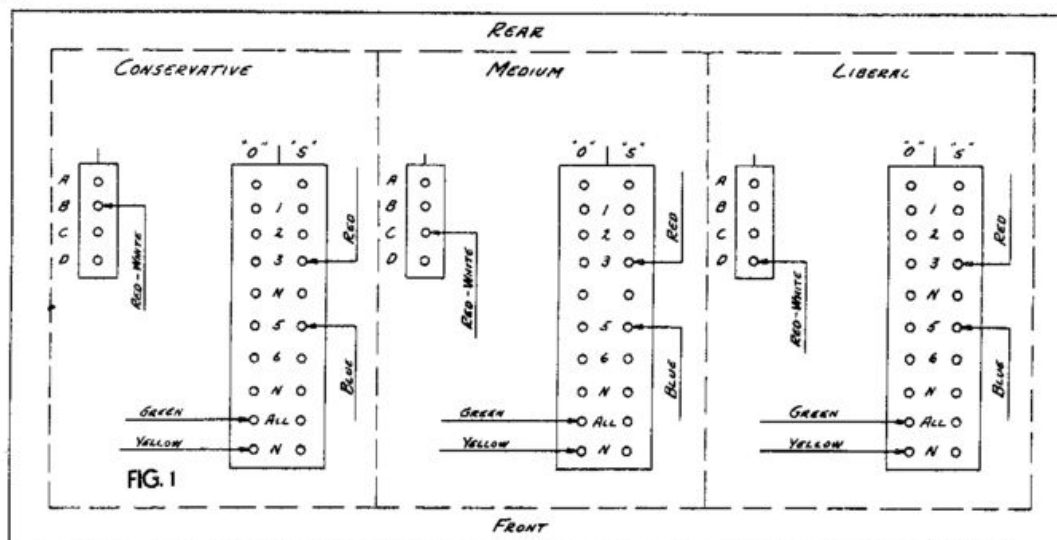

EXPLANATION OF ADJUSTMENTS

In order that operator may make adjustments other than those diagramed above, the following explanation should be noted:

SELECTION ADJUSTMENT

TO REDUCE FREQUENCY of one or two Selections, plug RED-wire Plug or/and BLUE-wire Plug into Socket or Sockets on "S" side of MAIN PLUG---plugging into Selection or Selections to be reduced. MAIN PLUG IS LOCATED DIRECTLY BACK OF CASH-BOX.

NO ADJUSTMENT IS NECESSARY ON NO. 7 OR NO. 4 WHICH ARE WIRED IN SAME CIRCUIT WITH HORSE-SHOE LIGHTS.

40-ODDS ADJUSTMENT

TO REDUCE FREQUENCY WITH WHICH 40 appears as odds, when certain Selections appear, plug YELLOW-wire Plug or/and GREEN-wire Plug into Socket or Sockets on "O" side of MAIN PLUG---plugging in to Selection or Selections with which 40-odds is not desired. MAIN PLUG IS LOCATED DIRECTLY BACK OF CASH-BOX.

WHEN ADJUSTMENTS ARE EFFECTIVE

When making either Selection or 40-Odd adjustments, as described above, operator must also plug RED-WHITE-wire Plug into one of the 4 sockets in SECONDARY PLUG, located directly back of payout mechanism.

This adjustment determines COIN AT WHICH ADJUSTMENT IS TO BE EFFECTIVE---and is explained in the table on next page.

POSITION OF RED-WHITE PLUG	SELECTION ADJUSTMENT		40-ODDS ADJUSTMENT	
	MADE WITH RED PLUG	MADE WITH BLUE PLUG	MADE WITH YELLOW PLUG	MADE WITH GREEN PLUG
	IS EFFECTIVE ON		IS EFFECTIVE ON	
A	ALL COINS	NO ADJUSTMENT	ALL COINS	NO ADJUSTMENT
B	1st Coin Only	2nd, 3rd, 4th and all additional coins	1st Coin Only	2nd, 3rd, 4th and all additional coins
C	1st and 2nd Coins Only	3rd and 4th and all additional coins	1st and 2nd Coins Only	3rd and 4th and all additional coins
D	1st, 2nd and 3rd Coins Only	4th and all additional coins	1st, 2nd and 3rd Coins Only	4th and all additional coins

Remember that it is not necessary to use both Red and Blue or Yellow and Green plugs.


For example, in the CONSERVATIVE adjustment diagramed in FIG. 1, the Yellow-wire Plug is not used---but is placed in a neutral or "dead" socket. And in this case, since Red-White Plug is in B and Green Plug is in "ALL" Position, 40 will practically never appear as Odds when 2nd, 3rd, 4th or additional coins are deposited. However, 40 may appear as Odds, when 1st coin is deposited.

NEUTRAL SOCKETS

Sockets marked "N" are neutral or "dead" and are used simply as convenient receptacles for Plugs not in use.

SPECIAL ADJUSTMENTS

Special Adjustment Plug is in Mechanism Drawer---directly in front of the 4 fuses; and the following adjustments may be made:

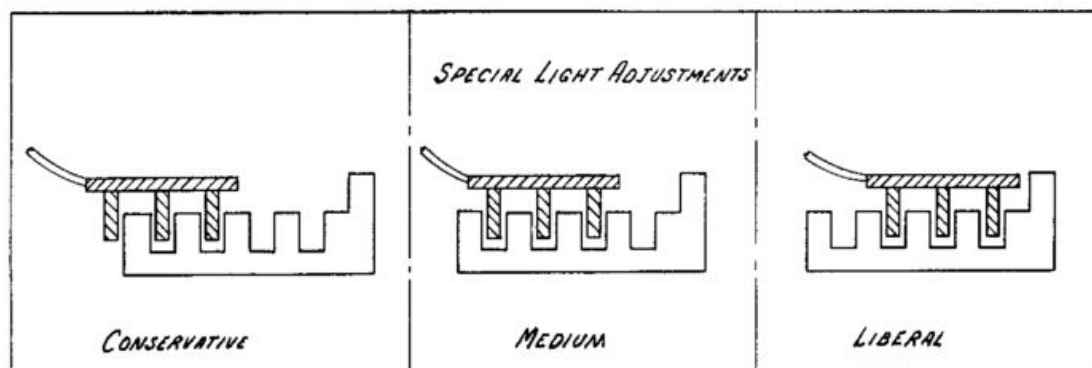


Occurrence of SPECIAL may be adjusted by means of Bumper Springs on each side of No. 4 in WIN section. MORE LIBERAL: spread springs apart. MORE CONSERVATIVE: close springs closer together.

TO CHANGE NUMBER OF BALLS


5 BALLS

1. Note 18-point Plug back of Multiple Unit (front right-hand corner of Mechanism Drawer). See that Plug is in position shown by diagram below.

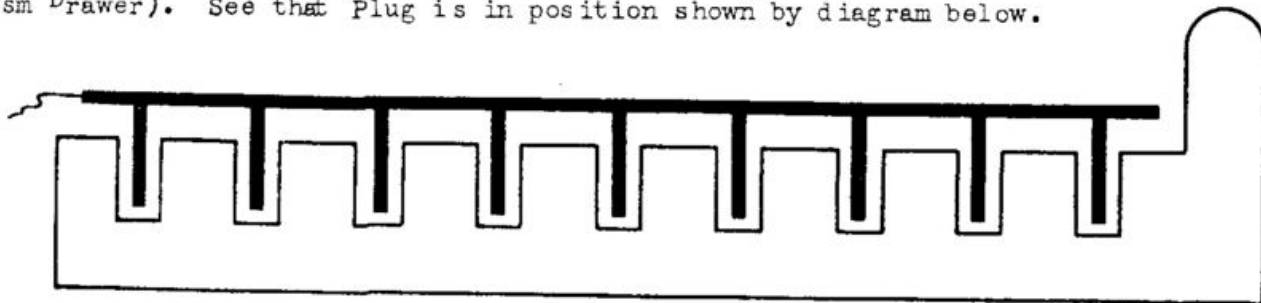

2. Gate B should be in position as shown in Fig. 2


3. If Skill Lane Marker is not on panel, apply Skill Lane Decal (furnished with machine), as shown in Fig. 2.

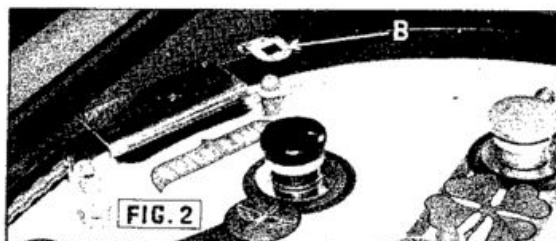


Photograph shows GOLD CUP board, but LONGACRES Skill Lane is in same position.

ONE-SHOT PLAY

1. Set 18-point Plug in position shown by diagram below.

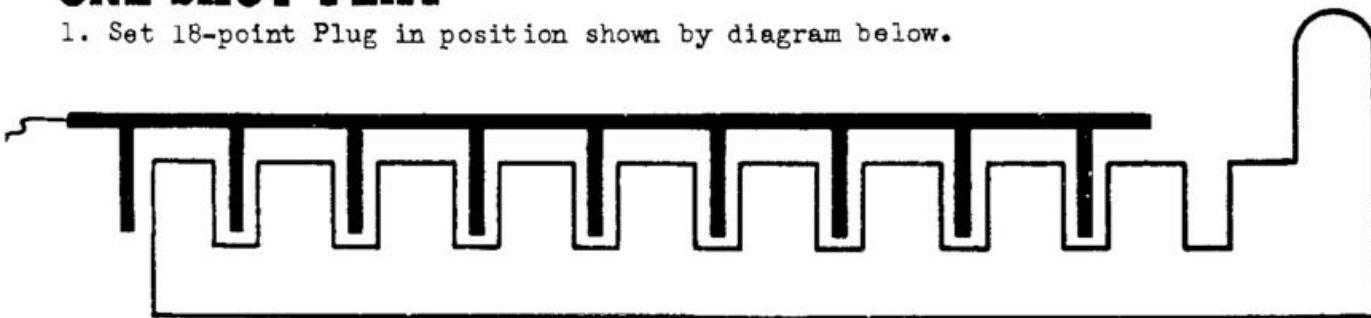

2. Remove Gate B (Fig. 2) and fasten Rubber Bumper (furnished with machine) into side of arch to prevent ball from entering Skill Lane.

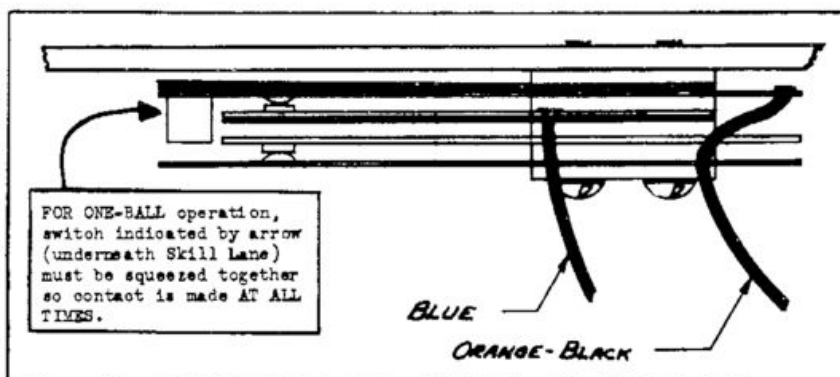

SPECIAL INSTRUCTIONS FOR CHANGING NUMBER OF BALLS

In addition to instructions outlined in form LONGACRES-4003, another plug adjustment must be made.

Note 4-point female plug---with 2-point male plug---directly to left of Relay Rack.

FOR ONE BALL OPERATION, plug male plug into sockets NEAREST to Index.


FOR FIVE BALL OPERATION, plug male plug into sockets FARTHEST from Index.

Also make adjustments outlined in LONGACRES-4003.

LONGACRES-4006

L-CUP AND R-CUP LIGHT ADJUSTMENT

Frequency with which RED or GREEN Horse-shoes light on backglass may be adjusted by means of 10-point plug to the left of the Relay Bank. Various adjustments are indicated by the diagram below.

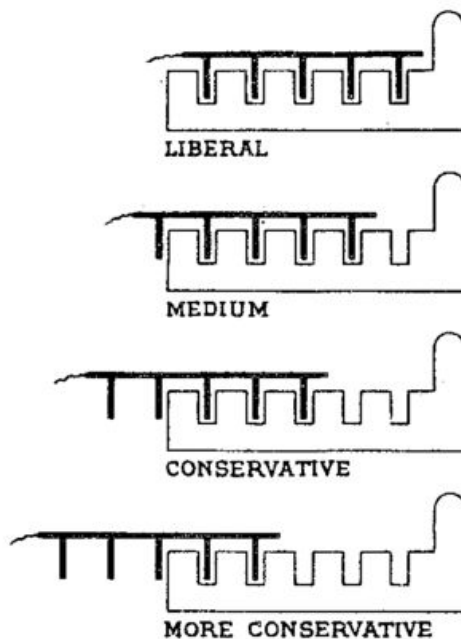

LONGACRES-4004