

CHICAGO

COIN

DOLPHIN

(MODEL 437)

PARTS CATALOG

CHICAGO DYNAMIC INDUSTRIES, INC.

1725 DIVERSEY BOULEVARD

★

CHICAGO, ILLINOIS 60614

★

PHONE (312) 935-4600


INTRODUCTION

THIS PARTS CATALOG HAS BEEN COMPILED TO HELP THE SERVICEMAN IN SELECTING THE PARTS NECESSARY FOR PROPER MAINTENANCE OF CHICAGO COIN GAMES.

ALL MOTORS IN NEW CHICAGO COIN GAMES CARRY A 6 MONTHS WARRANTY FROM DATE OF PURCHASE OF MACHINE.

ANY DEFECTIVE MOTOR WILL BE REPLACED FREE OF CHARGE BY YOUR CHICAGO COIN DISTRIBUTOR.


WHEN ORDERING PARTS ALWAYS SPECIFY NAME OF UNIT, PART NUMBERS AND A DESCRIPTION OF THE PART AS SHOWN IN THIS CATALOG.

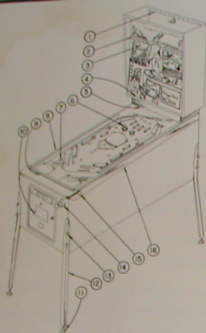

ITEM	PART NO.	DESCRIPTION
1	393-501	BACK DOOR
2		SCORING DRUM UNITS (SEE PAGE 25)
3	437-350	BACKRACK GLASS (25-1/2" X 26-1/2" X 1/4")
4	344-508-C	GLASS LIFT CHANNEL
	344-800-T	PLASTIC GLASS CHANNEL (TOP)
	344-800-Y	PLASTIC GLASS CHANNEL (TWO SIDE)
5	295-536	GLASS RACK SPACER
	295-537	GLASS TOP RACK ARCH
6		TOP OF PLAYFIELD (SEE PAGE 8)
7	40550-Y	TOP GLASS (21" X 43" X 3/16")
8	326-539-L	GLASS CHANNEL COVER
9		FRONT MOLDING (SEE PAGE 8)
10		CASH DOOR & COMPARTMENT (SEE PAGES 4 & 5)
	326-540	CASH BOX
	326-542	CASH BOX SEPARATOR (USED WITH 10¢ & 25¢ ASS'Y)
	336-508-BC	CASH BOX COVER (USED WITH 10¢ & 25¢ ASS'Y)
11	H6851	LEG LEVELER
12	291-2501-B	METAL CABINET LEG ASS'Y
13		3/8-16 X 2-3/4" LG. HEX HD. BOLTS
14		WASHER ASS'Y (SEE PAGE 8)
15	308-1801	FLIPPER BUTTON
	418021	FLIPPER BUTTON RUSHING
16	326-539-B	GLASS CHANNEL COVER

PARTS CATALOG

ADJUSTMENTS



HI-SCORE
ADJ.

CREDIT

ADDED BALL

VOLTAGE
ADJ.NORMAL
30 VOLTS
33 VOLTS

GAME ADJ.

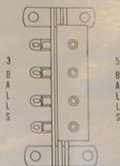3
B
A
L
L
S5
B
A
L
L
S25¢ CHUTE
ADJUSTMENT2 PLAYS
3 PLAYS
4 PLAYS
5 PLAYS

HI-SCORE POINT ADJUSTMENT


INSERT PLUGS INTO SOCKET AT DESIRED POSITIONS

	PLUGS	SOCKET
(31000 TO 40000) - RED		6000 ☐ -1000
(41000 TO 50000) - BROWN		7000 ☐ -2000
(51000 TO 60000) - MAROON		8000 ☐ -3000
(61000 TO 70000) - ORANGE		9000 ☐ -4000
(71000 TO 80000) - GREY		0000 ☐ -5000
(81000 TO 90000) - YELLOW		
(91000 TO 99000) - BLACK		

EXAMPLE:


RED WIRE INTO 1000 POSITION SCORES AT 31000
BROWN WIRE INTO 0000 POSITION SCORES AT 50000

CASH COMPARTMENT

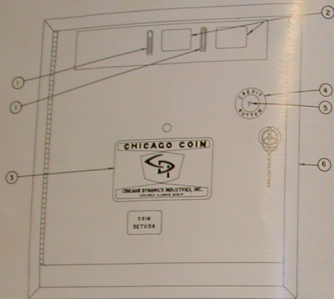

ITEM	PART NO.	DESCRIPTION
1	382-800	COIN ENTRY MOLDING (SEE PAGE 30)
2		COIN DENOMINATION WINDOW (SEE PAGES 30 & 31)
3	#8883	C.O.D. DECAL
4	354-305	CREDIT DECAL
5	382-1000-A	CREDIT BUTTON
6	384-2002	FRONT DOOR FRAME ASS'Y

CASH COMPARTMENT DOOR

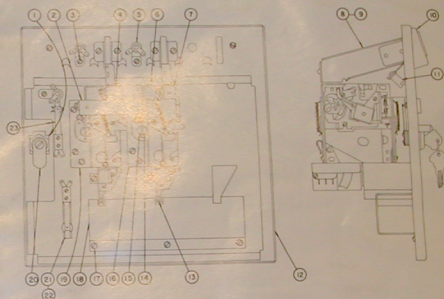


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	240-251	COMPLETE FRONT DOOR ASSEMBLY	13	333-2528	REFLECTED COIN CONDUIT FUNNEL ASS'Y
2	320-521	LOCK PLATE	14	320-1005	REFLECTOR ROD
3		REFLECTOR BRACKET	15	#828-37	RETAINING RING
4	#8801-C	#8-32 x 1/4 LG. SENS UNIT	16	333-2530-S-A	HOUSING, MICRO SW. & COIN LOCK OUT
5	#5786	25¢ COIN ACCEPTOR INSERT		320-2522	COIL ASSEMBLY (240-301 COIL)
6	#5211	BAYONET SOCKET			HOUSING SHELL ASSEMBLY (320-2522-S
7	320-2510	BULB			WITH COIN LOCK OUT COIL MOUNTED)
8		REFLECTOR ARM & BUSHING ASS'Y			#8-32 x 1/4 LG. SENS UNIT
9	#5303	NUTS	17		COIN RETURN HOUSING ASS'Y
10	#5220-18	RETAINING RING	18	320-2527	HOUSING, MICRO SW. & COIN LOCK OUT
11	#1901-A	10¢ COIN ACCEPTOR INSERT	19	333-2510-S-C	COIL ASSEMBLY (240-301 COIL)
12	320-2501	COIN GUIDE COVER ASS'Y		320-2522	HOUSING SHELL ASSEMBLY (320-2522-S
13	320-2502	COIN GUIDE COVER ASS'Y FOR 25¢			WITH COIN LOCK OUT COIL MOUNTED)
14	320-2507-A	COIN ACCEPTOR ONLY	20	#8877-A	LOCK CAM
15	382-2504-B-C	COIN WINDOW BRACKET ASS'Y		#5718	SWITCH ASSEMBLY
16	#5285	BAYONET SOCKET	21	#225	ANTI-GROUNDING FINDER
17	382-2502-E	FRONT DOOR & REINFORCEMENT ASSEMBLY	22	320-544-A	SWITCH ASSEMBLY

CHICAGO DYNAMIC INDUSTRIES
PARTS CATALOG

CHICAGO DYNAMIC INDUSTRIES


PARTS CATALOG

FRONT MOLDING & SHOOTER ASSEMBLY

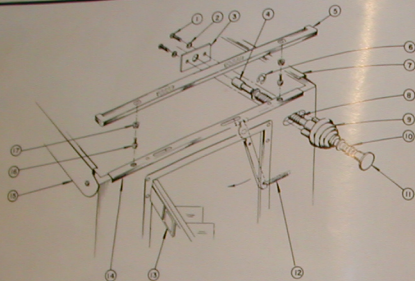

ITEM	PART NO.	DESCRIPTION
1		#10-32 x 1-1/8 LG. B.H.W.S.
2	#5478	EXTERNAL SHAKEPROOF LOCKWASHER
3	308-500	PLUNGER BUSHING W/TS. BRKT.
4	#0086	PLUNGER TIP
5	308-2518	FRONT MOLDING ASS'Y
6	#072-21	RETAINING RING
7	308-508-B	GLASS CHANNEL COVER
8	290-902	SHOOTER TENSION SPRING
9	#101-B-W	BALL SHOOTER HOUSING
10	290-902	SHOOTER CHECK SPRING
11	326-2505	SHOOTER ROD ASS'Y
12	250-900	RETRACTION SPRING
13		CASH COMPARTMENT DOOR (SEE PAGES 4 & 5)
14	390-2503	FRONT MOLDING LOCK ASS'Y
15	326-509-L	GLASS CHANNEL COVER
16	326-1500	FRONT MOLDING ADJUSTING SCREW
17	326-1501	FRONT MOLDING LOCK NUT

BALL EJECTOR UNIT

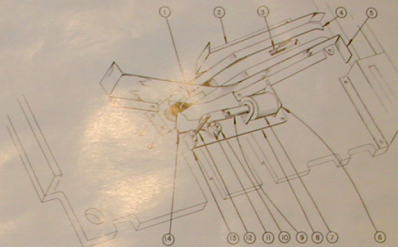

ITEM	PART NO.	DESCRIPTION
1	326-104	BALL EJECTOR WIRE FORM
2	326-512	UPPER BALL RETURN GUIDE RAIL
3	326-505	BALL COUNT WIRE FORM
4	326-508	BALL RETURN RUNWAY
5	326-513	LOWER BALL RETURN GUIDE RAIL
6	124-2500	PLUNGER STOP ASS'Y
7	1-22-350	COIL COMPLETE
8	136-1535	SOLENOID TUBING
9	310-2518	BALL EJECTOR WDG. PLATE & STUD ASS'Y
10	300-2506	PLUNGER & LINK ASS'Y
11	#6722-25	RETAINING RING
12	#5373	WASHER
13	326-902	PLUNGER RETURN SPRING
14	326-302	PLASTIC SLEEVE
15	360-2504	BALL EJECTOR ARM ASS'Y

CHICAGO DYNAMIC INDUSTRIES


PARTS CATALOG

PAGE 6


CHICAGO DYNAMIC INDUSTRIES

PARTS CATALOG

PAGE 7


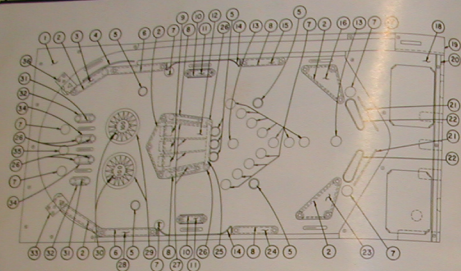


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	431-501	METAL ARCH TOP (PAINTED)	19	431-502-S	SHOOTER INDICATOR
2	320-514	METAL ARCH BOTTOM	20	320-552	PLAYFIELD GLASS SUPPORT
3	#0056	3" RUBBER RING	21	431-900	PLAYFIELD WIRE FRAME
4	431-300-C	PLAYFIELD LITE SHIELD (*)	22		FLIPPER ASS'Y (SEE PAGE 9)
5	383-002	BALL GUIDE WIRE FORM	23	431-300-D	PLAYFIELD LITE SHIELD (*)
6		ROLL OVER BUTTON ASS'Y (SEE PAGE 10)	24	431-300-G	PLAYFIELD LITE SHIELD (*)
7	#0053	2-1/2" RUBBER RING	25	431-500	BALL RETAINING BRACKET
8	#18528-W	1" DIA. PANEL INSERT	26	#0050	3/8" RUBBER RING
9	#0053	2" DIA. RUBBER RING	27	431-901	BALL RETAINING WIRE FORM
10	431-501	BALL STOP BRACKET	28	431-300-B	PLAYFIELD LITE SHIELD (*)
11	#0052	1-1/2" DIA. RUBBER RING	29	431-301	ACETATE WAFER
12	#18537-Y	GUIDE RAIL	30	431-2508	THUMPER BUMPER ASS'Y (SEE PAGE 11)
13	431-300-A	PLAYFIELD LITE SHIELD 6/32 HEX NYLON CAP NUT	31	#0051	1" RUBBER RING
14	#18528-Y	1" DIA. PANEL INSERT	32	#18503-R	GUIDE RAIL
15	431-502	REAR GUIDE RAIL	33	231-2527-L	BALL GATE ASS'Y
16	431-300-F	PLAYFIELD LITE SHIELD (*)	34	#18540-Y	GUIDE RAIL
17	431-300-E	PLAYFIELD LITE SHIELD (*)	35	#18528-R	1" PANEL INSERT
18	320-528	STRIKE PLATE	36	431-2527-R	BALL GATE ASS'Y
19	431-501-S	INSTRUCTION PLATE			*MOUNTED WITH #0085 PUSH NUT FASTENERS

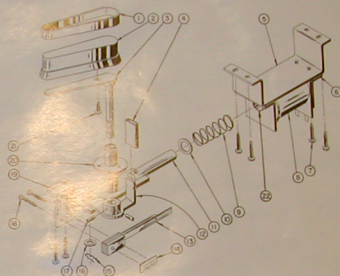


ITEM	PART NO.	DESCRIPTION
1	#0054	FLIPPER RUBBER RING
2	#18550	3" FLIPPER
3	393-2501	FLIPPER PLATE & SHAFT ASS'Y
4	#0527	1" LG. PLASTIC SLEEVING
5	347-2511	FLIPPER COIL MOUNTING BRACKET ASS'Y
6	347-2512	FLIPPER STOP ASS'Y
7		HB X 1/2" LG. TYPE "A" NO. HD. PHILLIP S.W.S.
8	FJ-28-400	COIL COMPLETE
	21-375	
9	208-901	FLIPPER SPRING
10	#5348	WASHER
11	393-2504	FLIPPER PLUNGER & OPERATING LINK ASS'Y
12	231-2536-L	FLIPPER ARM ASS'Y
	231-2536-R	FLIPPER ARM ASS'Y (RIGHT HAND SHOWN)
13	#204-R	CONTACT ASS'Y (SHOWN)
	#204-RL	CONTACT ASS'Y
14	#6770	TINNEMAN NUT
15	91-905	SPRING CLIP
16	#5557	WASHER
17		#10-32 X 1/4" LG. SET SCREW
18		AA S.W.S. (LENGTH AS REQUIRED)
19	295-550	CONTACT MOUNTING BRACKET
20	#18508-W	FLIPPER BUSHING
21		HB X 7/16" LG. TYPE "E" TAPPING SCREW
22	130-1535	BRASS TUBING


108-2502
COMPLETE (INCLUDES 5 ITEMS UNDER LINED)

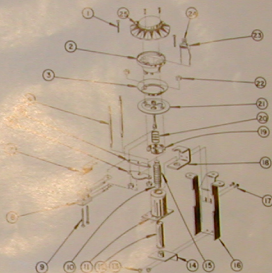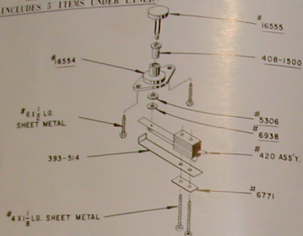

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	437-2500	COMPLETE THUMPER BUMPER ASS'Y	13	H6-32 x 3/8 LG. SEWS UNIT	
2	H10511-N	THUMPER BODY	14	347-2512	PLUNGER STOP ASS'Y
3	312-504	THUMPER RING	15	437-900	SPRING
4	231-1507	POWER BUMPER ROD	16	393-508	COIL MTG. BRACKET
5	118-512	FIBER PLUNGER ARM	17	H6-32 x 1/4 LG. SEWS UNIT	
6	118-503	BRASS PLUNGER ARM	18	118-502	COIL SUPPORT BRACKET
7	231-505	CONTACT MTG. BRACKET	19	H16312	BUMPER BASE
8	H423	SWITCH ASS'Y	20	3-110	SPRING
9	H101-B	SWITCH ASS'Y	21	H16313-Y	WAFER THUMPER
10	118-1507	PLUNGER	22	H6-32 ELASTIC STOP NUT	
11	F1-24-850	COIL COMPLETE	23	H1234	SOCKET
12	130-805	SOLENOID TUBING	24	H5104	BULB
			25	H18563-B	YELLOW 100 DIAMOND SUNFLEWER CAP

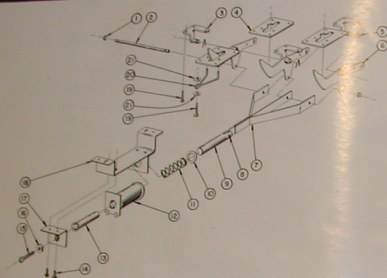


ITEM	PART NO.	DESCRIPTION
1	#8722-18	RETAINING RING
2	431-1500	BALL KICKER RING PIN
3	205-2500	KICKER ARM BRACKET SUB-ASSY
4	#10549	KICKER PAD
5	01-900	SPRING CLIP
6	431-2505	BALL KICKER ARM ASSY
7	431-2502	BALL KICKER LINK ASSY
8	#10544-10	ROLL PIN
9	205-1511	PLUNGER
10	#5348	WASHER
11	200-001	SPRING
12	FJ-22-550	COIL COMPLETE
13	130-805	SOLENOID TUBING
14	#6-32 X 1/4" LG. SCWS UNIT	
15	#10-32 X 1" LG. BRASS R.W.W.S.	
16	#10-32 HEX NUT	
17	124-2500	PLUNGER STOP ASSY
18	347-2511	COIL MOUNTING BRACKET ASSY
19	#8 X 1/2" LG. RD. PHILLIP HD. S.W.S.	
20	303-000	BALL KICK-OUT HOLE WIRE FORM
21	#5382	WASHER

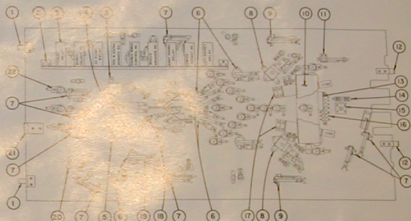

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	205-2520	PLAYFIELD LAMP ASSY	13	#5007-K-1/200	1MFD200VDC CAPACITOR
2	120-2524-9	OPERATING RELAY SUB-ASSY	14	#5747-1	1 PLACE FUSE BLOCK
3	FJ-22-550	COIL COMPLETE	15	#5713-010	10 AMP FUSE
4	205-2500	KICKER ARM BRACKET SUB-ASSY	16	#5008-1	RECTIFIER
5	437-2508	BUMPER BUMPER ASSY (SEE PAGE 11)	17	#6885-7	7 PLACE TERMINAL STRIP
6	408-2002	ROLL OVER BUTTON ASSY (SEE PAGE 10)	18	#5231	FLIPPER ASSY (SEE PAGE 9)
7	205-2557	ROLL OVER WIRE FORM & BRKT. ASSY	19	#5231	BAYONET SOCKET
8		ACTION KICKER (SEE PAGE 14)	20	#5112	447 BULB IN ALL THE SOCKETS
9	347-2508	ROLL OVER WIRE FORM & BRKT. ASSY	21	#5200	BAYONET SOCKET
10	431-2507	FLIPPER CONTROL & LEG ASSY	22	#5132	BAYONET SOCKET
11	330-014	WASHER	23	205-500	PLAYFIELD LIMIT BRACKET
12	#302	TILT CONTACT SWITCH	24	#5240	BAYONET SOCKET
	326-025	PLAYFIELD SUPPORT BRACKET			

ACTION KICKER

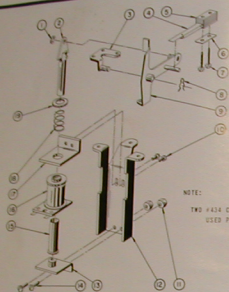

NOTE:


TWO #434 CONTACT SWITCHES
USED PER KICKER

ITEM	PART NO.	DESCRIPTION
1	#022421	RETAINING RING
2	200-2013	PLUNGER & LINK ASSY
3	200-2008	KICKER ARM BRACKET ASSY
4	#26	SWITCH ASSY
5	#43	SPACER BLOCK
6	#0771	FINGERBAR SPACER
7	#4 X 1/4" LG. S.W.S.	
8	#1-800	SPRING CLIP
9	331-2510	KICKER ARM ASSY (WITH POST)
10	#6-32 X 1/4" LG. S.W.S. UNIT	
11		#6-32 HEX NUT
12	303-508	COIL MOUNTING BRACKET
13	347-2512	PLUNGER STOP ASSY
14	#6-32 X 3/8" LG. S.W.S. UNIT	
15	130-800	SOLENOID TUBING
16	P1-24-800	COIL COMPLETE
17	347-508	COIL SUPPORT BRACKET
18	200-001	SPRING
19	#1548	WASHER

CHICAGO DYNAMIC INDUSTRIES
PARTS CATALOG

PAGE 14

SUB PANEL

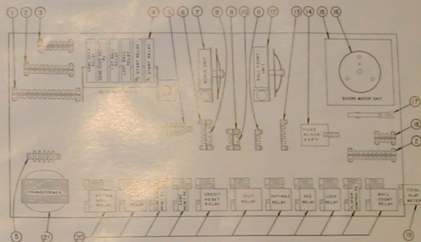


ITEM	PART NO.	DESCRIPTION
1	#0802	10 POINT REGULAR SOCKET
2	#0802	10 POINT REGULAR SOCKET
3	#0802	10 POINT REGULAR SOCKET
4		SLIDE TYPE RELAY (SEE PAGE 24)
5	#0805-5	5 PLACE TERMINAL STRIP
6	#0870	8 POINT REGULAR SOCKET
7	130-2510-B	BONUS CONTROL UNIT (SEE PAGE 19)
8	#0802	4 POINT STRAIGHT INLINE PLUG
9	#0870	4 POINT REGULAR SOCKET
10	#0800	2 POINT STRAIGHT INLINE PLUG
11	#0810	2 POINT STRAIGHT INLINE SOCKET
12	130-2500-A	BALL COUNT UNIT (SEE PAGE 23)
13	#0821	4 POINT STRAIGHT INLINE SOCKET
14	#0747-5	5 PLACE FUSE HOLDER
15	437-2500	SCORE MOTOR ASSY (COMPLETE)
16	383-2513	SCORE MOTOR CAN ASSY (SEE PAGE 26)
17	#0750-1000	SCORE MOTOR (50 Hz 22 R.P.M.)
18	#0750-1000	SCORE MOTOR (50 Hz 22 R.P.M.)
19	#302	TILT SWITCH
20	#0870	4 POINT REGULAR SOCKET
21	#0707	30 VOLT TOTAL PLAY METER
22		FOR ALL THESE RELAYS (SEE PAGE 28)
23	#0830-1 OR 2	TRANSFORMER (#0830-1, 110V, #0830-2, 220V)

CHICAGO DYNAMIC INDUSTRIES
PARTS CATALOG


PAGE 15

3 TONE CHIME ASSEMBLY

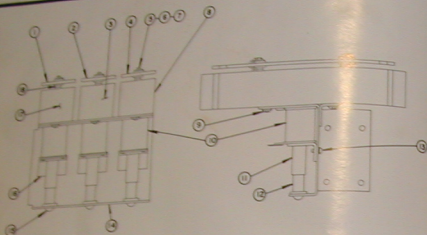


ITEM	PART NO.	DESCRIPTION
1	352-2510	3 TONE CHIME ASSY
2	352-1510-C	CHIME BAR
3	352-1510-B	CHIME BAR
4	352-1525-B	TONE CHAMBER
5	352-1510-A	CHIME BAR
6	44 X 1" LG. RD. HD. WOOD SCREW	
7	#5082	FLAT WASHER
8	#6080	RUBBER GROMMET
9	352-1525-A	TONE CHAMBER
10	#10 X 3/4 LG. TYPE "A" PHILLIP HD. S.W.S.	
11	N-26-1000	COIL COMPLETE
12	187-400	SOLDER-10 TUBE
13	352-2510-B	PLUNGER ASSY
14	45-32 X 1/4" LG. SEKS UNIT	
15	352-2510-A	CHIME MTL. BRACKET ASSY
16	#6078	GROMMET
17	347-508	COIL SUPPORT BRACKET
18	352-1525-C	TONE CHAMBER
19	#10002-B-0	SPACER


TILT BOARD & KNOCKER ASSEMBLY

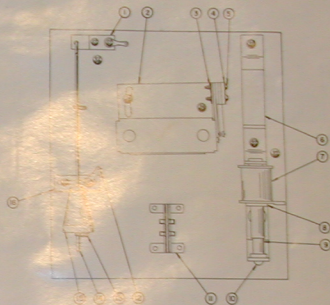


ITEM	PART NO.	DESCRIPTION
1	295-557	TILT PLUMB HANGER
2	330-511	ELEVATOR TILT
3	#8770	TIMBERMAN NOT
4	#8771	TIMBERMAN SPACER
5	44 X 3/8" LG. S.W.S.	
6	295-2538	KNOCKER MOUNTING BRACKET ASSY
7	N-26-1000	COIL COMPLETE
8	187-511	ADJ. COIL SUPPORT BRACKET
9	187-2507	PLUNGER & TIP ASSEMBLY
10	#6078	RUBBER GROMMET
11	#5876	4 POINT REGULAR SOCKET
12	#6054	SOLDERING LUG
13	231-907	TILT PLUMB SPRING
14	295-608	TILT PLUMB WIRE
15	295-1513	TILT PLUMB
16	295-358	TILT PLUMB CONTACT PLATE

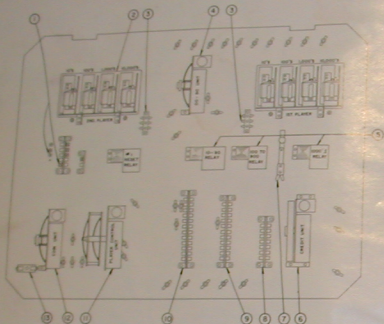


ITEM	PART NO.	DESCRIPTION
1	H5880	BANANA PLUGS
2	H5880	SCORING DRUM UNIT (SEE PAGE 25)
3	H5880-3	3 PLACE TERMINAL STRIP
4	130-2071-A	50-50 UNIT (SEE PAGE 20)
5	130-2071-A	FOR ALL THESE RELAYS SEE PAGE 20
6	130-2532-C	CREDIT UNIT (SEE PAGE 22)
7	H582	TILT SWITCH
8	H5881	14 POINT REGULAR SOCKET
9	H5880	22 POINT REGULAR SOCKET
10	H5880	24 POINT REGULAR SOCKET
11	130-2505	PLAYER CONTROL UNIT (SEE PAGE 21)
12	130-2506-A	COIN UNIT (SEE PAGE 23)
13	H5741-1	1 PLACE FUSE HOLDER

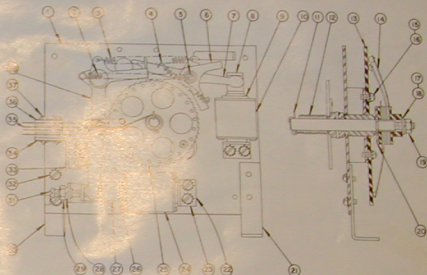

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	130-2518-B	CONTACT WASHING UNIT (20 STEP)	20	130-518	CONTACT WASHER
2	130-2505	MTG. PLATE, SHRT. & BUSHING ASS'Y	21	130-560-AS	MOUNTING LEG
3	130-810-18	SPRING	22	130-2516	PLUNGER STEP ASS'Y
4	130-901	SPRING	23	H6-32 x 1/4 SENG	H6-32 x 1/4 SENG
5	130-900	SPRING	24	1-22-550	COIL COMPLETE
6	130-1510	RESET ARM POST	25	130-2542-20	SHAFT, BUSHING, HATCHET & STUD ASS'Y
7	130-2514	ESCAPEMENT PAWL & BUSHING	26	130-1535	SOLENOID TUBING
8	130-2013	RESET ARM ASS'Y	27	91-1538	OPERATING PLUNGER
9	91-1587	SOLENOID TUBING	28	H5428	SPLIT TYPE LOCKWASHER
10	130-1530	SOLENOID TUBING	29	H10-22	HEX NUT
11	H6-32	COIL COMPLETE	30	130-560-A	MOUNTING LEG
12	H752-10	COTTER PIN	31	H10-32 x 3/8 LG. BRASS R.H.W.S.	H10-32 x 3/8 LG. BRASS R.H.W.S.
13	H30-905	TORSION SPRING	32	H6-32 x 1/4 LG. SENG	H6-32 x 1/4 LG. SENG
14	210-2510-B	CONTACT PLATE ASS'Y	33	130-511	DOUBLE CONTACT BRACKET
15	H51-2501	WIPER FINGER ASS'Y	34	H6770	TINSMAN NUT
16	H6-32 x 3/8 LG. SENG		35	H48A	SWITCH ASS'Y
17	H730	WASHER	36	H6771	TINSMAN SPACER
18	H5831	WASHER	37		PA S.W.S. (LENGTH AS REQUIRED)
19	H5428	SPLIT TYPE LOCKWASHER	38	130-2538	OPERATING ARM & POST ASS'Y
		1/4-28 HEX NUT			

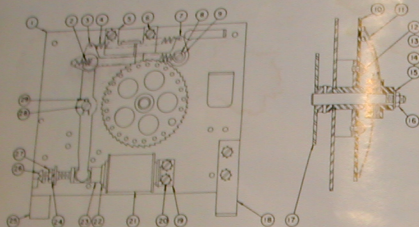


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	130-2501-A	COMPLETE 00-00 UNIT	15	#5420	SPLIT TYPE LOCKWASHER
2	130-2505	WIP. PLATE BRACKET & BUSHING ASSY	16	P1/4-28 HEX NUT	
3	130-2510-18	SPRING	17	130-2510	SHAFT BUSHING & RATCHET ASSY
4	130-2511	OPERATING ARM ASSY	18	130-500-AS	MOUNTING LEG
5	130-2511	SPRING	19	130-2516	PLUNGER STOP ASSY
6	130-2511	OVERCURE RESTRAINER	20	#0-32 x 1/4 LG. SEWS	
7	#0-32 x 1/4 LG. SEWS UNIT		21	1-22-550	COIL COMPLETE
8	130-2517	HOLDING P.W.M. & BUSHING ASSY	22	130-1535	SOLENOID TUBING
9	130-1510	RESET P.W.M. POST	23	130-1513	OPERATING PLUNGER
10	130-1517	RESET POST BUSHING	24	#5420	SPLIT TYPE LOCKWASHER
11	344-2513-1	CONTACT PLATE ASSY (00-00 UNIT)	25	130-500-A	MOUNTING LEG
12	344-2509	WIPER FINGER ASSY (00-00 UNIT)	26	#10-32 x 3/4 LG. BRASS R.W.M.S.	
13	#0-32 x 3/8 LG. SEWS UNIT		27	#10-32 HEX NUT	
14	#5305	FLAT WASHER	28	130-1508	OPERATING ARM POST
15	#5331	FLAT WASHER	29	143-002	SPRING CLIP

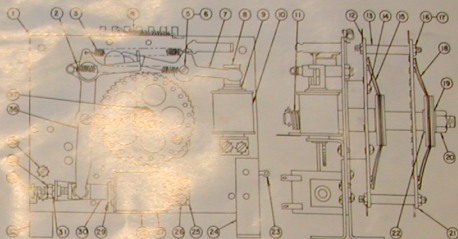


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	130-2505	COMPLETE PLAYER CONTROL UNIT (1 STEP)	18	#5420	SPLIT TYPE LOCKWASHER
2	130-2502	WIP. PLATE BRACKET & BUSHING ASSY	20	1/4-28 HEX NUT	
3	130-2510-21	SPRING	21	637-2504	CONTACT PLATE ASSY (PLAYER CONTROL #2)
4	130-2511	SPRING	22	#5338	WASHER
5	130-2511	SPRING	23	#058	SOLDERING LUG
6	130-1510	RESET ARM POST	24	130-500-AS	MOUNTING LEG
7	130-1517	RESET POST BUSHING	25	130-2516	PLUNGER STOP ASSY
8	130-2513	RESET ARM ASSY	26	#0-32 x 1/4 SEWS	
9	#1-1507	OPERATING PLUNGER	27	130-2502-1	DOUBLE STACK RATCHET ASSY
10	130-1530	SOLENOID TUBING	28	1-22-550	COIL COMPLETE
11	#0-28-1510	COIL COMPLETE	29	130-1535	SOLENOID TUBING
12	130-2507	TENSION SPRING	30	#1-1530	OPERATING PLUNGER
13	409-2503	CONTACT PLATE ASSY (PLAYER CONTROL #1)	31	#5420	SPLIT TYPE LOCKWASHER
14	130-4102	CONTACT PLATE STAND OFF	32	130-500-A	MOUNTING LEG
15	#0-32 x 3/8 LG. SEWS UNIT		33	#10-32 x 7/8 LG. BRASS R.W.M.S.	
16	410-2502	WIPER FINGER ASSY (PLAYER CONTROL #1)	34	#10-32 HEX NUT	
17	#5420	EXTERNAL SHAKEPROOF LOCKWASHER	35	#0-32 x 1/4 LG. SEWS UNIT	
18	#0-32 HEX NUT		36	130-2538	OPERATING ARM ASSY
19	090-2510	WIPER FINGER ASSY (PLAYER CONTROL #2)	37	#0754	COTTER PIN

CREDIT UNIT

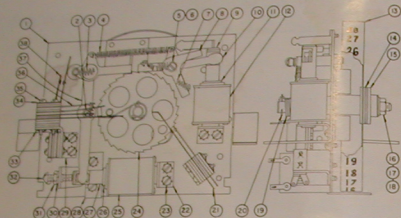

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	100-2500-0	COMPLETE CREDIT UNIT	20	#6752-10	COTTER PIN
2	100-2500	MOUNTING PLATE ASSY	21	#46	SWITCH ASSY
3	100-1500	OPERATING ARM POST	22	100-2510	PLUNGER STOP ASSY
4	100-810-18	SPRING	23	#0-32 x 1/4 LG. SEMS UNIT	
5	100-801	SPRING	24	100-2510	SHAFT, BUSHING, RATCHET & STUD ASSY
6	100-1510	RESET ARM POST	25	1-25-550	COIL (STEP-UP)
7	100-1517	RESET POST BUSHING	26	100-1535	STEP-UP SOLENOID TUBING
8	100-800	SPRING	27	100-1513	STEP-UP PLUNGER
9	100-2514	ESCAPEMENT PAWL & BUSHING	28	100-532	WINDOW BRACKET
10	100-1530	RESET PLUNGER	29	100-511	DOUBLE CONTACT BRACKET
11	100-1508	RESET SOLENOID TUBING	30	#5428	LOCKWASHER
12	#0-20-550	COIL RESET	31	#10-32, HEX NUT	
13	100-2502	DRUM ASSY	32	#10-32 x 3/4 LG. BRASS R.H.W.S.	
14	100-518	WASHER	33	#6770	TINNEMAN NUT
15	100-800	FINGER HUB	34	#6771	TINNEMAN SPACER
16		1/4-20 HEX NUT	35	#A S.W.S. LENGTH AS REQUIRED	
17	#5428	LOCKWASHER	36	#128-80	SWITCH ASSY
18	#5331	PLAIN WASHER	37	100-2533	OPERATING ARM & POST ASSY
19	100-807	TORSION SPRING	38	#108	SWITCH ASSY

COIN & BALL COUNT UNIT

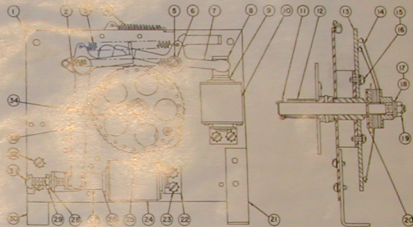

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	100-2500-0	COMPLETE CREDIT UNIT	18	#5428	SPLIT TYPE LOCKWASHER
2	100-2500	MOUNTING PLATE ASSY	19	#1/4-20 HEX NUT	
3	100-1500	OPERATING ARM POST	20	100-518	CONTACT WASHER
4	100-810-18	SPRING	21	100-500-AS	MOUNTING LEE
5	100-801	SPRING	22	100-2510	PLUNGER STOP ASSY
6	100-804	SPRING	23	#0-32 x 1/4 LG. SEMS	
7	100-1510	RESET ARM POST	24	1-22-550	COIL COMPLETE
8	100-1517	RESET POST BUSHING	25	100-2524-1	1 STEP SHAFT, BUSHING, RATCHET & STUD ASSY (COIN UNIT)
9	100-2514	ESCAPEMENT PAWL & BUSHING	26	100-2524-5	5 STEP SHAFT, BUSHING, RATCHET & STUD ASSY (BALL COUNT UNIT)
10	100-1530	RESET PLUNGER	27	100-1535	SOLENOID TUBING
11	100-1508	RESET SOLENOID TUBING	28	100-1538	OPERATING PLUNGER
12	#0-20-550	COIL RESET	29	#5428	SPLIT TYPE LOCKWASHER
13	100-2502	DRUM ASSY	30	100-500-A	MOUNTING LEE
14	100-518	WASHER	31	#0-32 x 3/4 LG. BRASS R.H.W.S.	
15	100-800	FINGER HUB	32	#0-32 x 1/4 LG. SEMS	
16		1/4-20 HEX NUT	33	100-2538	OPERATING ARM & POST ASSY
17	#5428	LOCKWASHER	34	100-1500	OPERATING ARM POST

CHICAGO DYNAMIC INDUSTRIES

PARTS CATALOG


CHICAGO DYNAMIC INDUSTRIES

PARTS CATALOG


SLIDE TYPE RELAY

CONTACT SWITCHES			
NO. OF POINTS	NO. OF POINTS	NO. OF POINTS	NO. OF POINTS
1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24
25	26	27	28
29	30	31	32
33	34	35	36
37	38	39	40
41	42	43	44
45	46	47	48
49	50	51	52
53	54	55	56
57	58	59	60
61	62	63	64
65	66	67	68
69	70	71	72
73	74	75	76
77	78	79	80
81	82	83	84
85	86	87	88
89	90	91	92
93	94	95	96
97	98	99	100

CONTACT SWITCHES
W/CONTACTS IN OPEN POS. OR W/ NO. NOT ENGAGED
W/CONTACTS IN CLOSED POS. OR W/ NO. NOT ENGAGED
W/CONTACTS IN OPEN POS. OR W/ NO. NOT ENGAGED
W/CONTACTS IN CLOSED POS. OR W/ NO. NOT ENGAGED

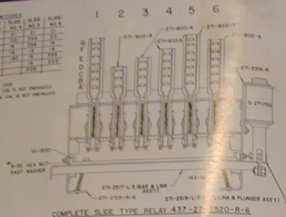


SLIDE TYPE RELAY

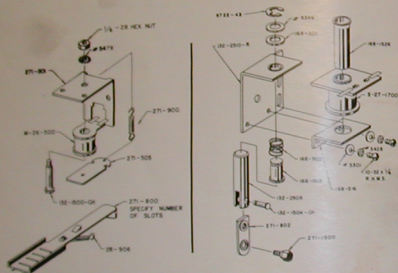


CHICAGO DYNAMIC INDUSTRIES
PARTS CATALOG

SCORING DRUM UNIT

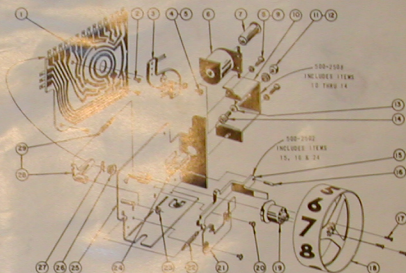

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	100-2500-A	10,000'S SCORING DRUM UNIT (WITHOUT END OF STROKE SWITCH) (2-REV'S.)	12	100-2500	PLUNGER STOP BUCKING
2	100-2500-B	ALL 0-9, 10-100 A 100-2500 UNITS EXCEPT 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH) (2-REV'S.)	13	100-2500	PLUNGER STOP & SLUG ASSY
3	100-2500-C	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	14	100-2500	OPERATING ARM
4	100-2500-D	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	15	100-2500	ROLL PIN
5	100-2500-E	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	16	100-2500	PHILLIP HD, SELF TAPPING SCREW
6	100-2500-F	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	17	100-2500	CAM & RATCHET
7	100-2500-G	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	18	100-2500	ADJUSTABLE STOP
8	100-2500-H	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	19	100-2500	SPRING
9	100-2500-I	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	20	100-2500	E RING .187
10	100-2500-J	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	21	100-2500	OPERATING PLUNGER
11	100-2500-K	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	22	100-2500	MOUNTING PLATE SUB ASSY
12	100-2500-L	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	23	100-2500	SPRING
13	100-2500-M	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	24	100-2500	RETAINING SPRING
14	100-2500-N	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	25	100-2500	HOLDING PAWL
15	100-2500-O	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	26	100-2500	SPRING
16	100-2500-P	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	27	100-2500	SPRING
17	100-2500-Q	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	28	100-2500	SPRING
18	100-2500-R	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)	29	100-2500	SPRING
19	100-2500-S	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
20	100-2500-T	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
21	100-2500-U	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
22	100-2500-V	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
23	100-2500-W	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
24	100-2500-X	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
25	100-2500-Y	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
26	100-2500-Z	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
27	100-2500-AA	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
28	100-2500-AB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
29	100-2500-AC	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
30	100-2500-AD	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
31	100-2500-AE	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
32	100-2500-AF	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
33	100-2500-AG	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
34	100-2500-AH	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
35	100-2500-AI	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
36	100-2500-AJ	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
37	100-2500-AK	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
38	100-2500-AL	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
39	100-2500-AM	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
40	100-2500-AN	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
41	100-2500-AO	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
42	100-2500-AP	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
43	100-2500-AQ	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
44	100-2500-AR	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
45	100-2500-AS	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
46	100-2500-AT	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
47	100-2500-AU	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
48	100-2500-AV	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
49	100-2500-AW	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
50	100-2500-AX	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
51	100-2500-AY	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
52	100-2500-AZ	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
53	100-2500-BA	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
54	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
55	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
56	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
57	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
58	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
59	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
60	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
61	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
62	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
63	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
64	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
65	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
66	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
67	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
68	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
69	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
70	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
71	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
72	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
73	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
74	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
75	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
76	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
77	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
78	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
79	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
80	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
81	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
82	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
83	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
84	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
85	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
86	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
87	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
88	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
89	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
90	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
91	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
92	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
93	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
94	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
95	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
96	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
97	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
98	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
99	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			
100	100-2500-BB	ONLY 1-10, 1-100'S (WITH #200 END OF STROKE SWITCH)			






CHICAGO DYNAMIC INDUSTRIES
PARTS CATALOG

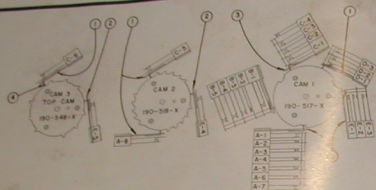

ITEM	PART NO.	DESCRIPTION
	393-2513	SCORE MOTOR CAM ASSEMBLY
	#5750-1950	SCORE MOTOR (50 Hz 22 R.P.M.)
	#5750-1980	SCORE MOTOR (50 Hz 22 R.P.M.)
1	115-501-P	CAM RIDER PLATE
2	115-501-P	CAM RIDER PLATE
3	115-501-A	CAM RIDER ALL THE SWITCHES
4	115-508	CAM RIDER ALL THE SWITCHES
A-1	#53	SWITCH ASSEMBLY
A-2	#57	SWITCH ASSEMBLY
A-3	#57	SWITCH ASSEMBLY
A-4	#57	SWITCH ASSEMBLY
A-5	#57	SWITCH ASSEMBLY
A-6	#57	SWITCH ASSEMBLY
A-7	#58	SWITCH ASSEMBLY
A-8	#17	SWITCH ASSEMBLY
B-1	#52	SWITCH ASSEMBLY
B-2	#58	SWITCH ASSEMBLY
B-3	#57	SWITCH ASSEMBLY
B-4	#57	SWITCH ASSEMBLY
B-5	#325	SWITCH ASSEMBLY
C-1	#50	SWITCH ASSEMBLY
C-2	#54	SWITCH ASSEMBLY
C-3	#54	SWITCH ASSEMBLY
C-4	#58	SWITCH ASSEMBLY
C-5	#17	SWITCH ASSEMBLY
C-6	#53	SWITCH ASSEMBLY
D-1	#17	SWITCH ASSEMBLY
D-2	#57	SWITCH ASSEMBLY
D-3	#57	SWITCH ASSEMBLY
D-4	#57	SWITCH ASSEMBLY
D-5	#57	SWITCH ASSEMBLY
D-6	#57	SWITCH ASSEMBLY
D-7	#57	SWITCH ASSEMBLY
D-8	#57	SWITCH ASSEMBLY
D-9	#57	SWITCH ASSEMBLY
D-10	#57	SWITCH ASSEMBLY
D-11	#57	SWITCH ASSEMBLY
D-12	#57	SWITCH ASSEMBLY
D-13	#57	SWITCH ASSEMBLY
D-14	#57	SWITCH ASSEMBLY
D-15	#57	SWITCH ASSEMBLY
D-16	#57	SWITCH ASSEMBLY
D-17	#57	SWITCH ASSEMBLY
D-18	#57	SWITCH ASSEMBLY
D-19	#57	SWITCH ASSEMBLY
D-20	#57	SWITCH ASSEMBLY
D-21	#57	SWITCH ASSEMBLY
D-22	#57	SWITCH ASSEMBLY
D-23	#57	SWITCH ASSEMBLY
D-24	#57	SWITCH ASSEMBLY
D-25	#57	SWITCH ASSEMBLY
D-26	#57	SWITCH ASSEMBLY
D-27	#57	SWITCH ASSEMBLY
D-28	#57	SWITCH ASSEMBLY
D-29	#57	SWITCH ASSEMBLY
D-30	#57	SWITCH ASSEMBLY
D-31	#57	SWITCH ASSEMBLY
D-32	#57	SWITCH ASSEMBLY
D-33	#57	SWITCH ASSEMBLY
D-34	#57	SWITCH ASSEMBLY
D-35	#57	SWITCH ASSEMBLY
D-36	#57	SWITCH ASSEMBLY
D-37	#57	SWITCH ASSEMBLY
D-38	#57	SWITCH ASSEMBLY
D-39	#57	SWITCH ASSEMBLY
D-40	#57	SWITCH ASSEMBLY
D-41	#57	SWITCH ASSEMBLY
D-42	#57	SWITCH ASSEMBLY
D-43	#57	SWITCH ASSEMBLY
D-44	#57	SWITCH ASSEMBLY
D-45	#57	SWITCH ASSEMBLY
D-46	#57	SWITCH ASSEMBLY
D-47	#57	SWITCH ASSEMBLY
D-48	#57	SWITCH ASSEMBLY
D-49	#57	SWITCH ASSEMBLY
D-50	#57	SWITCH ASSEMBLY
D-51	#57	SWITCH ASSEMBLY
D-52	#57	SWITCH ASSEMBLY
D-53	#57	SWITCH ASSEMBLY
D-54	#57	SWITCH ASSEMBLY
D-55	#57	SWITCH ASSEMBLY
D-56	#57	SWITCH ASSEMBLY
D-57	#57	SWITCH ASSEMBLY
D-58	#57	SWITCH ASSEMBLY
D-59	#57	SWITCH ASSEMBLY
D-60	#57	SWITCH ASSEMBLY
D-61	#57	SWITCH ASSEMBLY
D-62	#57	SWITCH ASSEMBLY
D-63	#57	SWITCH ASSEMBLY
D-64	#57	SWITCH ASSEMBLY
D-65	#57	SWITCH ASSEMBLY
D-66	#57	SWITCH ASSEMBLY
D-67	#57	SWITCH ASSEMBLY
D-68	#57	SWITCH ASSEMBLY
D-69	#57	SWITCH ASSEMBLY
D-70	#57	SWITCH ASSEMBLY
D-71	#57	SWITCH ASSEMBLY
D-72	#57	SWITCH ASSEMBLY
D-73	#57	SWITCH ASSEMBLY
D-74	#57	SWITCH ASSEMBLY
D-75	#57	SWITCH ASSEMBLY
D-76	#57	SWITCH ASSEMBLY
D-77	#57	SWITCH ASSEMBLY
D-78	#57	SWITCH ASSEMBLY
D-79	#57	SWITCH ASSEMBLY
D-80	#57	SWITCH ASSEMBLY
D-81	#57	SWITCH ASSEMBLY
D-82	#57	SWITCH ASSEMBLY
D-83	#57	SWITCH ASSEMBLY
D-84	#57	SWITCH ASSEMBLY
D-85	#57	SWITCH ASSEMBLY
D-86	#57	SWITCH ASSEMBLY
D-87	#57	SWITCH ASSEMBLY
D-88	#57	SWITCH ASSEMBLY
D-89	#57	SWITCH ASSEMBLY
D-90	#57	SWITCH ASSEMBLY
D-91	#57	SWITCH ASSEMBLY
D-92	#57	SWITCH ASSEMBLY
D-93	#57	SWITCH ASSEMBLY
D-94	#57	SWITCH ASSEMBLY
D-95	#57	SWITCH ASSEMBLY
D-96	#57	SWITCH ASSEMBLY
D-97	#57	SWITCH ASSEMBLY
D-98	#57	SWITCH ASSEMBLY
D-99	#57	SWITCH ASSEMBLY
D-100	#57	SWITCH ASSEMBLY

CHICAGO DYNAMIC INDUSTRIES


PARTS CATALOG

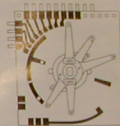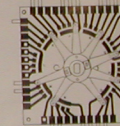COUNTER SWITCH
PLATE 190-517-X
FINGER NO. 1BONUS UNIT
PLATE 344-250-J
FINGER NO. 1COIN UNIT
PLATE 437-250-I
FINGER NO. 1BALL COUNT UNIT
PLATE 347-253-B
FINGER NO. 1BONUS UNIT
PLATE 373-2510-D
FINGER NO. 1PLAYER CONTROL UNIT NO. 1
PLATE NO. 1 437-2503
FINGER NO. 1PLAYER CONTROL NO. 2
PLATE NO. 2 437-2504
FINGER NO. 2

CHICAGO DYNAMIC INDUSTRIES

PARTS CATALOG

COIN DENOMINATION WINDOWS

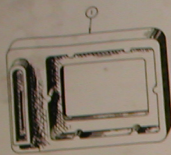

ITEM	PART NO.	DESCRIPTION
1	320-300-A	50 COIN ENTRY MOLDING
	320-300-B	100 COIN ENTRY MOLDING
	320-300-C	200 COIN ENTRY MOLDING
	320-300-D	500 COIN ENTRY MOLDING
	320-300-E	(SPEEDY COIN OPENING)
2	320-300-A	COIN DENOMINATION WINDOWS
	320-300-B	(2 NICKELS = 1 PLAY)
	320-300-C	(10¢ = 1 PLAY)
	320-300-D	(25¢ = 3 PLAYS)
	320-300-E	(5¢ = 1 PLAY)
	320-300-F	(25¢ = 5 PLAYS)
	320-300-G	(10¢ = 1 PLAY)
	320-300-H	(10¢ = 2 PLAYS)
	320-300-I	(3 NICKELS = 1 PLAY)
	320-300-J	(1 DIME & 2 NICKELS = 1 PLAY)
	320-300-K	(1 QUARTER = 2 PLAYS)
	320-300-L	(25¢ = 2 PLAYS)
	320-300-M	(3 DIME = 2 PLAYS)
	320-300-N	(10¢ = 1 PERIOD)
	320-300-O	(25¢ = 3 PERIOD)
	320-300-P	(25¢ = 1 PLAY)
	320-300-Q	(25¢)
	320-300-R	(25¢ = 4 PLAYS)
	320-300-S	(1 QUARTER = 1 PLAY)
ITEM	PART NO.	DESCRIPTION
2	320-300-A	(A GAME OF BALL)
	320-300-B	(1 QUARTER = 10 PLAYS)
	320-300-C	(1 DIME = 10 PLAYS)
	320-300-D	(2 X 10¢ PERIOD = 1 PLAY) (GERMAN)
	320-300-E	(50 PFENNIG = 3 PLAYS) (GERMAN)
	320-300-F	(1 D.M. = 2 PLAYS) (GERMAN)
	320-300-G	(50 PFENNIG = 1 PLAY) (GERMAN)
	320-300-H	(50 PFENNIG = 2 PLAYS) (GERMAN)
	320-300-I	(1 D.M. = 2 PLAYS) (GERMAN)
	320-300-J	(1 D.M. = 10 PLAYS) (GERMAN)
	320-300-K	(2 D.M. = 10 PLAYS) (GERMAN)
	320-300-L	(2 D.M. = 10 PLAYS) (GERMAN)
	320-300-M	(1 D.M. = 2 PLAYS) (GERMAN)
	320-300-N	(1 D.M. = 1 PLAY) (GERMAN)
	320-300-O	(2 D.M. = 5 PLAYS) (GERMAN)
	320-300-P	(1 D.M. = 2 PLAYS) (GERMAN)
	320-300-Q	(2 D.M. = 4 PLAYS) (GERMAN)
	320-300-R	(50 LIRE = 1 PLAY) (ITALY)
	320-300-S	(100 LIRE = 2 PLAYS) (ITALY)
	320-300-T	(100 LIRE = 1 PLAY) (ITALY)
	320-300-U	(100 LIRE = 3 PLAYS) (ITALY)
	320-300-V	(100 LIRE = 3 PLAYS) (ITALY)
	320-300-W	(2 X 25 DMC = 1 PLAY) (DENMARK)

COIN DENOMINATION WINDOWS

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
320-300-A	(1 DIME = 2 PLAYS) (BRITISH OR DENMARK)	320-300-A	(50 DMC = 1 PLAY) (BRITISH)
320-300-B	(2 DMC = 1 PLAY) (BRITISH OR DENMARK)	320-300-B	(25¢ = 1 PLAY) (BRITISH)
320-300-C	(1 DIME = 2 PLAYS) (BRITISH)	320-300-C	(50¢ = 2 PLAYS) (BRITISH)
320-300-D	(1 DIME = 2 PLAYS) (BRITISH)	320-300-D	(100 PENCE = 4 PLAYS) (BRITISH)
320-300-E	(1 DIME = 2 PLAYS) (BRITISH)	320-300-E	(100 SHILLINGS = 5 PLAYS) (BRITISH)
320-300-F	(1 DIME = 2 PLAYS) (BRITISH)	320-300-F	(1 DIME = 2 PLAYS) (BRITISH)
320-300-G	(1 DIME = 2 PLAYS) (BRITISH)	320-300-G	(1 DIME = 2 PLAYS) (BRITISH)
320-300-H	(1 DIME = 2 PLAYS) (BRITISH)	320-300-H	(1 DIME = 2 PLAYS) (BRITISH)
320-300-I	(1 DIME = 2 PLAYS) (BRITISH)	320-300-I	(1 DIME = 2 PLAYS) (BRITISH)
320-300-J	(1 DIME = 2 PLAYS) (BRITISH)	320-300-J	(1 DIME = 2 PLAYS) (BRITISH)
320-300-K	(1 DIME = 2 PLAYS) (BRITISH)	320-300-K	(1 DIME = 2 PLAYS) (BRITISH)
320-300-L	(1 DIME = 2 PLAYS) (BRITISH)	320-300-L	(1 DIME = 2 PLAYS) (BRITISH)
320-300-M	(1 DIME = 2 PLAYS) (BRITISH)	320-300-M	(1 DIME = 2 PLAYS) (BRITISH)
320-300-N	(1 DIME = 2 PLAYS) (BRITISH)	320-300-N	(1 DIME = 2 PLAYS) (BRITISH)
320-300-O	(1 DIME = 2 PLAYS) (BRITISH)	320-300-O	(1 DIME = 2 PLAYS) (BRITISH)
320-300-P	(1 DIME = 2 PLAYS) (BRITISH)	320-300-P	(1 DIME = 2 PLAYS) (BRITISH)
320-300-Q	(1 DIME = 2 PLAYS) (BRITISH)	320-300-Q	(1 DIME = 2 PLAYS) (BRITISH)
320-300-R	(1 DIME = 2 PLAYS) (BRITISH)	320-300-R	(1 DIME = 2 PLAYS) (BRITISH)
320-300-S	(1 DIME = 2 PLAYS) (BRITISH)	320-300-S	(1 DIME = 2 PLAYS) (BRITISH)
320-300-T	(1 DIME = 2 PLAYS) (BRITISH)	320-300-T	(1 DIME = 2 PLAYS) (BRITISH)
320-300-U	(1 DIME = 2 PLAYS) (BRITISH)	320-300-U	(1 DIME = 2 PLAYS) (BRITISH)
320-300-V	(1 DIME = 2 PLAYS) (BRITISH)	320-300-V	(1 DIME = 2 PLAYS) (BRITISH)
320-300-W	(1 DIME = 2 PLAYS) (BRITISH)	320-300-W	(1 DIME = 2 PLAYS) (BRITISH)
320-300-X	(1 DIME = 2 PLAYS) (BRITISH)	320-300-X	(1 DIME = 2 PLAYS) (BRITISH)
320-300-Y	(1 DIME = 2 PLAYS) (BRITISH)	320-300-Y	(1 DIME = 2 PLAYS) (BRITISH)
320-300-Z	(1 DIME = 2 PLAYS) (BRITISH)	320-300-Z	(1 DIME = 2 PLAYS) (BRITISH)

CHICAGO DYNAMIC INDUSTRIES

PARTS CATALOG

**CHICAGO
COIN**

DOLPHIN