


AMIGO Playfield Chart

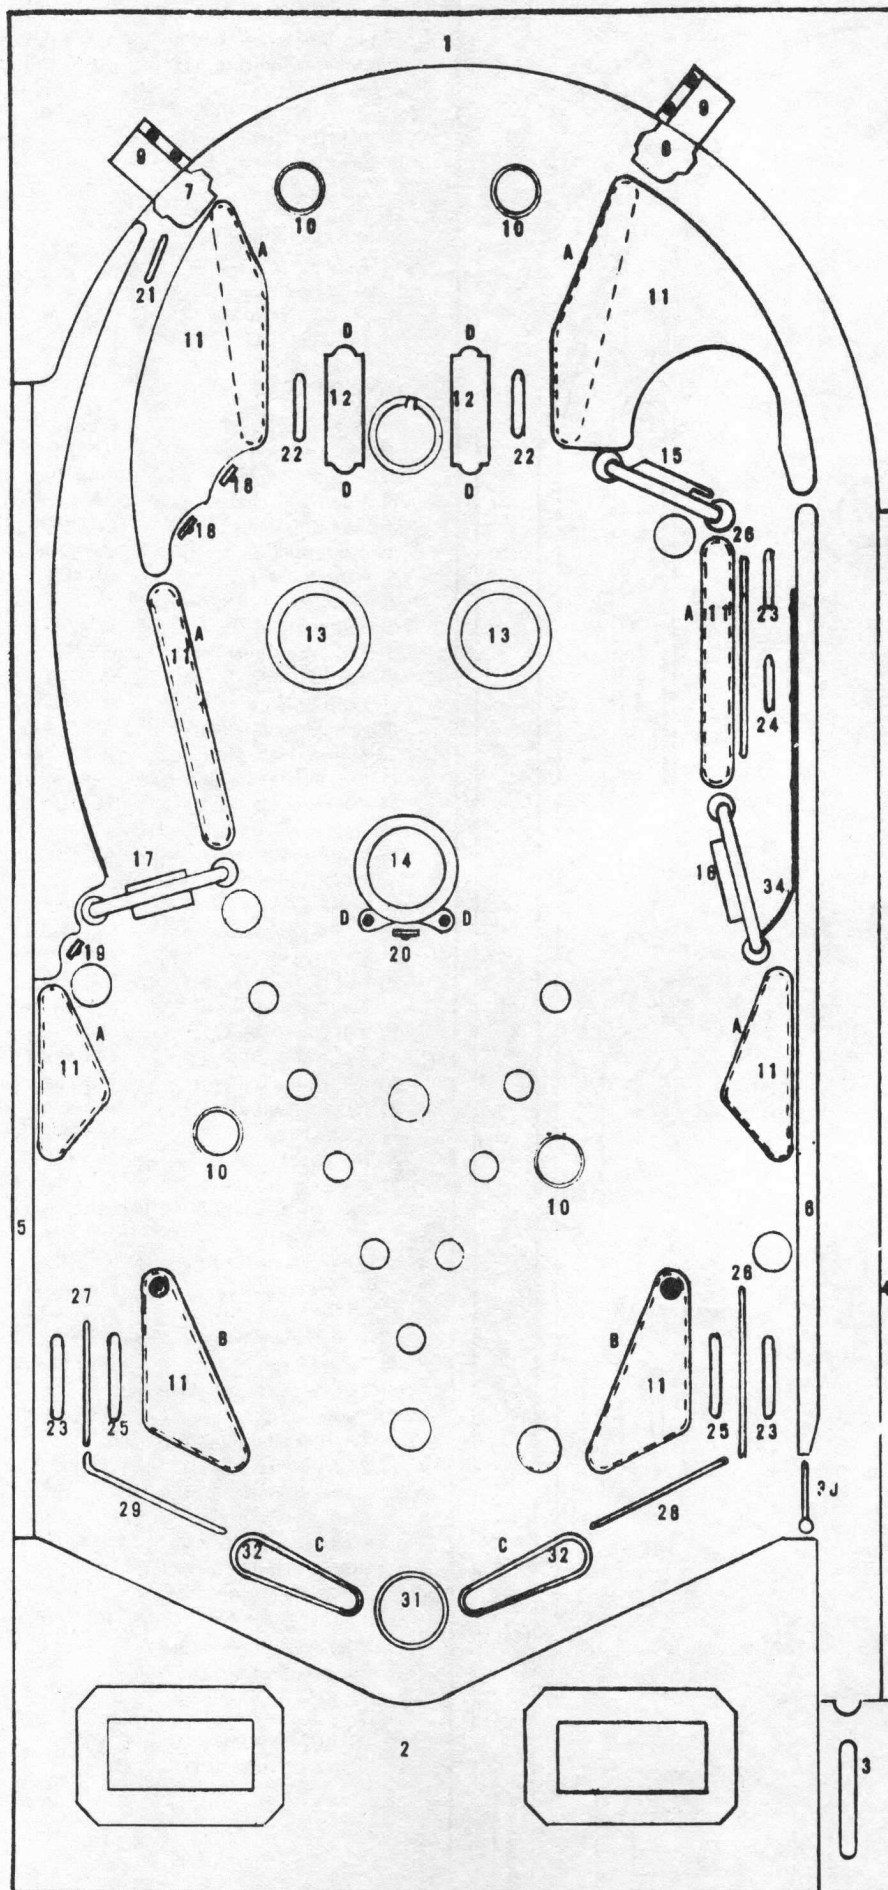

RUBBER PARTS

Dimensions are inside diameters. Numbers in parantheses indicate quantity used, if in excess of one.

- A R-521-4, 2½ in. (8)
- B R-521-6, 3½ in. (2)
- C R-406-3 (Flipper) (2)
- D R-243, 15/16 in. (15)

OTHER PARTS

- 1 Top Arch P-5839-67
- 2 Bottom Arch P-5871-45
- 3 Shooter Gauge P-6359-12
- 4 Side Rail, right CA-1208-22
- 5 Side Rail, left CA-1208-23
- 6 Inner Rail CA-1208-21
- 7 Ball Gate, left A-1475-4
- 8 Ball Gate, right A-1475-1
- 9 Ball Gate Cover P-2996-5
- 10 Rollover Button (4) C-387-5
- For components used with item 10 see item 14, page 127
- 11 Light Shields (set) A-2890-93
- 12 Guide Rail, red C-702-1
- 13 Bumper Cap, blue A-3713-11
- 14 Bumper Cap, yellow A-3713-12
- Details of Bumper Assys., page 167
- 15 Gate & Wire Assy. AS-2250-25
- As detailed, item 25, page 126
- 16 Gate & Wire Assy. AS-2250-24
- As detailed, item 23, page 129
- 17 Spinner Gate Assy. AS-2250-33
- Same as item 25, page 138
- excepting
- Spinner Assy. A-3460-2
- Switch used with
- Spinner Gate ASW-A1-118
- 18 Target Assy. (2) AS-982-723
- Detailed, item 22, page 125
- 19 Target Assy. AS-982-740
- Same as item 18 above, except
- Target Switch Assy. A-3395-3
- Detailed, item 13, page 185
- 20 Target Assy. AS-982-752
- Detailed, item 13, page 187
- 21 Rollover Wire M-1336-18
- 22 Rollover Wire M-1336-1
- 23 Rollover Wire M-1336-2
- 24 Rollover Wire M-1336-3
- 25 Rollover Wire M-1336
- PARTS RELATED TO ITEMS 21-25:
- Brackets: see page 191
- Switch,
- Make ASW-A1-5
- Make-Make ASW-A11-2
- 26 Ball Guide Wire M-121-23
- 27 Ball Guide Wire M-121-47
- 28 Ball Guide Wire M-121-18
- 29 Ball Guide Wire M-121-43
- 30 Gate Wire M-1335-1
- Details of Free Ball Gate appear on page 195
- 31 Bumper Post C-810
- Details of Play-More Post appear on page 185
- 32 Flipper & Pin (2) AS-2214-19
- Details of Flipper Units appear on page 175
- 33 Ball Return Wire
- (NOT SHOWN) M-1336-19
- Guide Rail P-6244-53

● INDICATES MOVABLE POST FOR SCORING ADJUSTMENT