


MARDI GRAS

ADJUSTMENT SHEET

TO MAKE GAME MORE CONSERVATIVE - MOVE POSTS 3/16" - AS SHOWN IN SKETCH. SPOTTING HOLES ARE PROVIDED AND CAN BE SEEN ON REMOVAL OF POSTS.

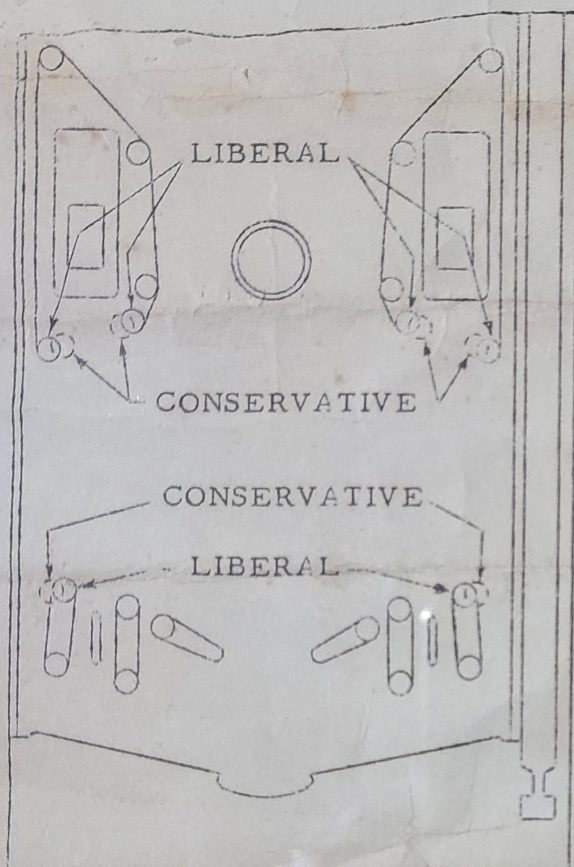

NUMBER MATCH ADJUSTMENT JACK,

located in back box. Can be set for 2, or 10 replays (as indicated on adjustment tag) for 1st and 2nd or 3rd and 4th players matching last number that appears on back glass when game is over.

NUMBER MATCH ON-OFF JACK,

located in back box. When plug is in 'ON' position, number match will pay 10% or 1 game in 10 for one player matching last number in point score to number that appears on back glass when game is over. In 'OFF' position - match lights will not light on completion of game.

JET BUMPER ADJUSTMENT JACK,

located in back box. Set in liberal position, all four jet bumpers light for 10 pts. Set in conservative position, only the left and right jet bumpers light for 10 pts.

3-5 BALL ADJUSTMENT JACK,

located in back box. This jack changes play from 3 to 5 ball or vice versa, use corresponding number of balls.

25¢ ADJUSTMENT JACK,

located on panel, will provide -2-3-4 or -5 plays for 25¢. Insert phone tip in female jack opposite number of plays required.

LEG LEVELERS,

are provided for two purposes - 1st to level game on location, 2nd to increase pitch for game percentaging. If it is desired to speed up play or decrease scores, raise rear leg levelers to increase pitch.

THE POWER TRANSFORMER,

located on panel, is equipped with a secondary tap. If your game is on location with extremely low line voltage, remove lead from lug marked 24 V. and solder to alternate lug marked 'HIGH'. This will boost secondary voltage by approx. 4 volts.